

Brocade Vyatta Network OS PIM Configuration Guide, 5.2R1

Supporting Brocade 5600 vRouter, VNF Platform, and Distributed Services Platform

© 2016, Brocade Communications Systems, Inc. All Rights Reserved.

Brocade, the B-wing symbol, and MyBrocade are registered trademarks of Brocade Communications Systems, Inc., in the United States and in other countries. Other brands, product names, or service names mentioned of Brocade Communications Systems, Inc. are listed at www.brocade.com/en/legal/brocade-Legal-intellectual-property/brocade-legal-trademarks.html. Other marks may belong to third parties.

Notice: This document is for informational purposes only and does not set forth any warranty, expressed or implied, concerning any equipment, equipment feature, or service offered or to be offered by Brocade. Brocade reserves the right to make changes to this document at any time, without notice, and assumes no responsibility for its use. This informational document describes features that may not be currently available. Contact a Brocade sales office for information on feature and product availability. Export of technical data contained in this document may require an export license from the United States government.

The authors and Brocade Communications Systems, Inc. assume no liability or responsibility to any person or entity with respect to the accuracy of this document or any loss, cost, liability, or damages arising from the information contained herein or the computer programs that accompany it.

The product described by this document may contain open source software covered by the GNU General Public License or other open source license agreements. To find out which open source software is included in Brocade products, view the licensing terms applicable to the open source software, and obtain a copy of the programming source code, please visit <http://www.brocade.com/support/oscd>.

Contents

| | |
|----------------------------------------------------------------------------------|-----------|
| Preface | 7 |
| Document conventions..... | 7 |
| Notes, cautions, and warnings..... | 7 |
| Text formatting conventions..... | 7 |
| Command syntax conventions..... | 8 |
| Brocade resources..... | 8 |
| Document feedback..... | 8 |
| Contacting Brocade Technical Support..... | 9 |
| Brocade customers..... | 9 |
| Brocade OEM customers..... | 9 |
| About This Guide | 11 |
| PIM Overview | 13 |
| Multicast forwarding and PIM..... | 13 |
| Distribution trees..... | 13 |
| Source distribution trees..... | 14 |
| Shared distribution trees and the rendezvous point..... | 14 |
| Reverse path forwarding..... | 14 |
| PIM operational modes..... | 14 |
| PIM-DM..... | 15 |
| PIM-SM..... | 15 |
| PIM-SSM..... | 15 |
| Bootstrap routers..... | 15 |
| Passive interfaces..... | 16 |
| Embedded RP..... | 16 |
| Supported standards..... | 16 |
| Supported MIBs..... | 16 |
| PIM configuration..... | 16 |
| PIM Commands for IPv4 | 17 |
| interfaces <interface> ip pim..... | 18 |
| interfaces <interface> ip pim bsr-border..... | 19 |
| interfaces <interface> ip pim dr-priority..... | 20 |
| interfaces <interface> ip pim exclude-genid..... | 21 |
| interfaces <interface> ip pim hello-holdtime <holdtime>..... | 22 |
| interfaces <interface> ip pim hello-interval <interval>..... | 23 |
| interfaces <interface> ip pim mode <mode>..... | 24 |
| interfaces <interface> ip pim neighbor-filter <acl>..... | 25 |
| interfaces <interface> ip pim propagation-delay <delay>..... | 26 |
| interfaces <interface> ip pim state-refresh origination-interval <interval>..... | 27 |
| interfaces <interface> ip pim unicast-bsm..... | 28 |
| monitor protocol multicast pim..... | 29 |
| protocols pim accept-register list <acl>..... | 32 |
| protocols pim anycast-rp <rp-address> anycast-rp-peer <rp-peer-address>..... | 33 |
| protocols pim bsr-candidate <interface>..... | 34 |
| protocols pim ignore-rp-set-priority..... | 35 |
| protocols pim join-prune-timer <timer>..... | 36 |

| | |
|------------------------------------------------------------------------------------|-----------|
| protocols pim legacy-register-checksum [group-list <acl>]..... | 37 |
| protocols pim log..... | 38 |
| protocols pim log packet..... | 40 |
| protocols pim log timer..... | 41 |
| protocols pim log timer assert..... | 43 |
| protocols pim log timer bsr..... | 44 |
| protocols pim log timer hello..... | 45 |
| protocols pim log timer joinprune..... | 47 |
| protocols pim log timer register..... | 49 |
| protocols pim register-kat <timer>..... | 50 |
| protocols pim register-rate-limit <rate>..... | 51 |
| protocols pim register-rp-reachability..... | 52 |
| protocols pim register-source..... | 53 |
| protocols pim register-suppression-timer <timer>..... | 54 |
| protocols pim rp-address <rp-addr>..... | 55 |
| protocols pim rp-candidate <interface>..... | 57 |
| protocols pim spt-threshold..... | 58 |
| protocols pim ssm default..... | 59 |
| protocols pim ssm range <acl>..... | 60 |
| reset ip mroute..... | 61 |
| reset ip pim sparse-mode bsr rp-set..... | 62 |
| show ip pim bsr-router..... | 63 |
| show ip pim interface..... | 64 |
| show ip pim local-members..... | 65 |
| show ip pim mroute..... | 66 |
| show ip pim neighbor..... | 68 |
| show ip pim nexthop..... | 69 |
| show ip pim rp-hash <group>..... | 70 |
| show ip pim rp-mapping..... | 71 |
| show monitoring protocols multicast pim..... | 72 |
| PIM Commands for IPv6..... | 73 |
| interfaces <interface> ipv6 pim..... | 74 |
| interfaces <interface> ipv6 pim bsr-border..... | 75 |
| interfaces <interface> ipv6 pim dr-priority..... | 76 |
| interfaces <interface> ipv6 pim exclude-genid..... | 77 |
| interfaces <interface> ipv6 pim hello-holdtime <holdtime>..... | 78 |
| interfaces <interface> ipv6 pim hello-interval <interval>..... | 79 |
| interfaces <interface> ipv6 pim mode <mode>..... | 80 |
| interfaces <interface> ipv6 pim neighbor-filter <acl6>..... | 81 |
| interfaces <interface> ipv6 pim propagation-delay <delay>..... | 82 |
| interfaces <interface> ipv6 pim state-refresh origination-interval <interval>..... | 83 |
| interfaces <interface> ipv6 pim unicast-bsm..... | 84 |
| monitor protocol multicast pim..... | 85 |
| protocols pim6 accept-register list <acl6>..... | 88 |
| protocols pim6 anycast-rp <rp-address> anycast-rp-peer <rp-peer-address>..... | 89 |
| protocols pim6 bsr-candidate <interface>..... | 90 |
| protocols pim6 ignore-rp-set-priority..... | 91 |
| protocols pim6 join-prune-timer <timer>..... | 92 |
| protocols pim6 legacy-register-checksum [group-list <acl6>]..... | 93 |
| protocols pim6 log..... | 94 |

| | |
|--------------------------------------------------------|------------|
| protocols pim6 log timer..... | 96 |
| protocols pim6 log packet..... | 98 |
| protocols pim6 log timer assert..... | 99 |
| protocols pim6 log timer bsr..... | 100 |
| protocols pim6 log timer hello..... | 101 |
| protocols pim6 log timer joinprune..... | 103 |
| protocols pim6 log timer register..... | 105 |
| protocols pim6 register-kat <timer>..... | 106 |
| protocols pim6 register-rate-limit <rate>..... | 107 |
| protocols pim6 register-rp-reachability..... | 108 |
| protocols pim6 register-source..... | 109 |
| protocols pim6 register-suppression-timer <timer>..... | 110 |
| protocols pim6 rp-address <rp-addr>..... | 111 |
| protocols pim6 rp-candidate <interface>..... | 113 |
| protocols pim6 rp-embedded..... | 114 |
| protocols pim6 spt-threshold..... | 115 |
| protocols pim6 ssm default..... | 116 |
| protocols pim6 ssm range <acl6>..... | 117 |
| reset ipv6 mroute..... | 118 |
| reset ipv6 pim sparse-mode bsr rp-set..... | 119 |
| show ipv6 pim bsr-router..... | 120 |
| show ipv6 pim interface..... | 121 |
| show ipv6 pim local-members..... | 122 |
| show ipv6 pim mroute..... | 123 |
| show ipv6 pim neighbor..... | 124 |
| show ipv6 pim nexthop..... | 125 |
| show ipv6 pim rp-hash <group>..... | 126 |
| show ipv6 pim rp-mapping..... | 127 |
| show monitoring protocols multicast pim6..... | 128 |
| Supported Interface Types..... | 129 |
| List of Acronyms..... | 131 |

Preface

- Document conventions..... 7
- Brocade resources..... 8
- Document feedback..... 8
- Contacting Brocade Technical Support..... 9

Document conventions

The document conventions describe text formatting conventions, command syntax conventions, and important notice formats used in Brocade technical documentation.

Notes, cautions, and warnings

Notes, cautions, and warning statements may be used in this document. They are listed in the order of increasing severity of potential hazards.

NOTE

A Note provides a tip, guidance, or advice, emphasizes important information, or provides a reference to related information.

ATTENTION

An Attention statement indicates a stronger note, for example, to alert you when traffic might be interrupted or the device might reboot.



CAUTION

A Caution statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.



DANGER

A Danger statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.

Text formatting conventions

Text formatting conventions such as boldface, italic, or Courier font may be used to highlight specific words or phrases.

| Format | Description |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| bold text | Identifies command names. Identifies keywords and operands. Identifies the names of GUI elements. Identifies text to enter in the GUI. |
| <i>italic text</i> | Identifies emphasis. Identifies variables. Identifies document titles. |
| Courier font | Identifies CLI output. Identifies command syntax examples. |

Command syntax conventions

Bold and italic text identify command syntax components. Delimiters and operators define groupings of parameters and their logical relationships.

| Convention | Description |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| bold text | Identifies command names, keywords, and command options. |
| <i>italic text</i> | Identifies a variable. |
| value | In Fibre Channel products, a fixed value provided as input to a command option is printed in plain text, for example, --show WWN. |
| [] | Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets. |
| { x y z } | A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options. In Fibre Channel products, square brackets may be used instead for this purpose. |
| x y | A vertical bar separates mutually exclusive elements. |
| < > | Nonprinting characters, for example, passwords, are enclosed in angle brackets. |
| ... | Repeat the previous element, for example, <i>member[member...]</i> . |
| \ | Indicates a "soft" line break in command examples. If a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash. |

Brocade resources

Visit the Brocade website to locate related documentation for your product and additional Brocade resources.

White papers, data sheets, and the most recent versions of Brocade software and hardware manuals are available at www.brocade.com.

Product documentation for all supported releases is available to registered users at MyBrocade.

Click the **Support** tab and select **Document Library** to access documentation on MyBrocade or www.brocade.com. You can locate documentation by product or by operating system.

Release notes are bundled with software downloads on MyBrocade. Links to software downloads are available on the MyBrocade landing page and in the Document Library.

Document feedback

Quality is our first concern at Brocade, and we have made every effort to ensure the accuracy and completeness of this document. However, if you find an error or an omission, or you think that a topic needs further development, we want to hear from you. You can provide feedback in two ways:

- Through the online feedback form in the HTML documents posted on www.brocade.com
- By sending your feedback to documentation@brocade.com

Provide the publication title, part number, and as much detail as possible, including the topic heading and page number if applicable, as well as your suggestions for improvement.

Contacting Brocade Technical Support

As a Brocade customer, you can contact Brocade Technical Support 24x7 online, by telephone, or by e-mail. Brocade OEM customers should contact their OEM/solution provider.

Brocade customers

For product support information and the latest information on contacting the Technical Assistance Center, go to www.brocade.com and select **Support**.

If you have purchased Brocade product support directly from Brocade, use one of the following methods to contact the Brocade Technical Assistance Center 24x7.

| Online | Telephone | E-mail |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Preferred method of contact for non-urgent issues:</p> <ul style="list-style-type: none"> Case management through the MyBrocade portal. Quick Access links to Knowledge Base, Community, Document Library, Software Downloads and Licensing tools | <p>Required for Sev 1-Critical and Sev 2-High issues:</p> <ul style="list-style-type: none"> Continental US: 1-800-752-8061 Europe, Middle East, Africa, and Asia Pacific: +800-AT FIBREE (+800 28 34 27 33) Toll-free numbers are available in many countries. For areas unable to access a toll-free number: +1-408-333-6061 | <p>support@brocade.com</p> <p>Please include:</p> <ul style="list-style-type: none"> Problem summary Serial number Installation details Environment description |

Brocade OEM customers

If you have purchased Brocade product support from a Brocade OEM/solution provider, contact your OEM/solution provider for all of your product support needs.

- OEM/solution providers are trained and certified by Brocade to support Brocade® products.
- Brocade provides backline support for issues that cannot be resolved by the OEM/solution provider.
- Brocade Supplemental Support augments your existing OEM support contract, providing direct access to Brocade expertise. For more information, contact Brocade or your OEM.
- For questions regarding service levels and response times, contact your OEM/solution provider.

About This Guide

This guide describes how to configure PIM on Brocade products that run on the Brocade Vyatta Network OS (referred to as a virtual router, vRouter, or router in the guide).

PIM Overview

- Multicast forwarding and PIM..... 13
- Distribution trees..... 13
- Reverse path forwarding..... 14
- PIM operational modes..... 14
- PIM-DM..... 15
- PIM-SM..... 15
- PIM-SSM..... 15
- Bootstrap routers..... 15
- Passive interfaces..... 16
- Embedded RP..... 16
- Supported standards..... 16
- Supported MIBs..... 16
- PIM configuration..... 16

Multicast forwarding and PIM

In a multicast network, hosts are responsible for informing routers that they want to receive a particular multicast stream. In IPv4 networks, they do this by using IGMP. In IPv6 networks, they do this by using MLD, which is part of Internet Control Message Protocol for Internet Protocol version 6 (ICMPv6).

NOTE

For an overview of multicast routing in general, see *Brocade Vyatta Network OS Multicast Routing Configuration Guide*. For an overview of the Internet Group Management Protocol (IGMP) and Multicast Listener Discovery (MLD), see *Brocade Vyatta Network OS IGMP and MLD Configuration Guide*.

The multicast-capable routers are responsible for replicating messages and forwarding them to the appropriate recipients. To do this replication and forwarding, multicast routers create distribution trees that control the path that IP multicast traffic takes through the network to deliver traffic to all receivers. The Brocade vRouter supports the use of Protocol Independent Multicast (PIM) to manage the communication between multicast routers.

Prior to PIM routing protocols, such as DVMRP, included a unicast routing protocol and operated without any dependency on other unicast routing protocols. The independent nature of PIM means that it performs multicast routing independent of a dependency on any specific unicast routing protocol. PIM makes use of whatever unicast routing mechanism (static routing, RIP, OSPF, etc) that is used.

Distribution trees

The main purpose of PIM is to dynamically construct and maintain efficient multicast routing trees. These trees maintain the state for multicast sources (S, the IP address of the source) and groups (G, the multicast group represented as a multicast IP address) in (S, G) entries; hence, the source tree is often referred to as the (S, G) state. These routing trees control the distribution of multicast traffic through the network and so are called distribution trees.

Multicast distribution trees define how multicast packets are forwarded from a source to all receivers. PIM constructs these multicast distribution trees by referencing unicast routing to determine Reverse Path Forwarding (RPF) upstream routers along the path from a receiver to a sender. This creates optimal paths, avoids routing loops and can change as network topology changes.

Multicast distribution trees map a multicast source to multicast groups. PIM uses the existing unicast routing able to find the best path from receivers back to the source. They then forward traffic down appropriate paths by using the distribution tree to avoid routing loops.

PIM uses two types of multicast distribution trees: source distribution trees and shared distribution trees.

Source distribution trees

The simplest multicast distribution tree is a source tree. When a router creates a source distribution tree, it puts the multicast source as the root of the tree and creates a spanning tree through the network to each device in the group of receivers.

The source distribution tree represents the shortest path from the source to each multicast group member. For this reason, it is also a shortest path tree (SPT). Because it represents an optimal path, a source distribution tree minimizes the latency in the network. At the same time, the multicast router must track all sources and maintain state information for each source. As a result, source trees can become a burden to the multicast router, especially as the number of sources grows.

Shared distribution trees and the rendezvous point

The Rendezvous Point (RP) is placed at a selected location that sees the traffic between the multicast source and the receiver groups. The RP maintains state for the respective groups. Multicast receivers initiate IGMP Join messages to their upstream router, which is named the designated router. The designated router forwards the packet to the RP.

In this model, the RP must be configured on all designated routers and must be reachable from those routers through a PIM-enabled interface.

Shared distribution trees consume much less memory than source distribution trees. At the same time, because a complete set of shortest paths is not maintained, the paths represented in a shared distribution tree may not be optimal and network latency may be greater than with a source tree.

Reverse path forwarding

PIM makes use of unicast routing to determine neighbor routers and create multicast distribution trees.

The PIM router compares the ingress interface for each multicast packet with the unicast route to source. If the ingress interface is the correct RPF interface the packet is forwarded on the best matching multicast distribution tree. If the RPF check fails the packet is dropped. It is useful to note that PIM assumes unicast routes are symmetrical.

PIM operational modes

PIM can operate in a number of modes:

- Dense mode (PIM-DM)
- Sparse mode (PIM-SM)
- Sparse-dense mode
- Bidirectional PIM (BIDIR-PIM)
- Nonbroadcast multiaccess (NBMA) mode

Each mode is suited to a particular environment. The Brocade vRouter supports PIM-DM, PIM-SM, and sparse-dense mode.

PIM also supports Any Source Multicast (ASM) and Source-Specific Multicast (SSM). ASM and SSM are described in *Brocade Vyatta Network OS Multicast Routing Configuration Guide*.

PIM-DM

PIM-DM routers flood multicast traffic to all possible downstream neighbors and then prunes downstream interfaces from the distribution tree as requested by downstream routers. This “flood and prune” approach allows for lighter weight configuration on each router. However, this approach causes some unnecessary packet forwarding.

If a router receives a multicast packet but has no downstream receivers for that group it sends a PIM prune message to the upstream router asking it to stop forwarding traffic for that group. The path remains pruned for about three minutes, after which the router with a pruned interface sends a PIM source refresh message downstream. If the downstream router still has no downstream listeners, it sends a refreshing PIM prune upstream. The downstream router may also, at any time, send a PIM join message to effectively cancel a previous prune.

PIM-DM is recommended for networks where some multicast flooding is an acceptable trade off for reduced configuration complexity. Dense networks, such as LANs, are good candidates for PIM-DM.

The PIM-DM protocol is specified in RFC 3973, *Protocol Independent Multicast - Dense Mode (PIM-DM): Protocol Specification (Revised)*.

PIM-SM

PIM-SM uses a shared distribution tree built rooted at an RP to determine paths from source to receiver groups. The RP must be administratively configured on the network.

The multicast source registers with the RP and sends the traffic to the RP. Receivers join the group and are added to the tree that is rooted at the RP. The RP distributes the traffic down the tree to the hosts that have joined the multicast group.

By using a shared tree, PIM-SM reduces the amount of information the router needs to maintain. Only information about multicast groups is maintained; state information about sources is not. Unlike PIM-DM, a PIM-SM router with no receivers need not maintain pruning information.

In addition, unlike PIM-DM, multicast data is not flooded to the network. Multicast traffic is not sent to a network segment unless the downstream router specifically requests it. This can significantly reduce the amount of traffic on the network.

Because of these advantages, PIM-SM is currently the multicast protocol of choice in wide-area, inter-domain networks.

PIM-SSM

The PIM protocol supports source-specific multicast (SSM) with the assistance of filtering provided by IGMP version 3 and MLD version 2, which are described in *Brocade Vyatta Network OS IGMP and MLD Configuration Guide*. With PIM-SSM, neither an RP nor a shared distribution tree is used. Instead, a source-specific distribution tree is constructed for each (S,G).

Bootstrap routers

PIM version 2 implements a bootstrap router (BSR) mechanism as an alternative to the RP. In this topology, the RP is not configured. Instead, a number of multicast-enabled routers are configured as BSR candidates.

BSR candidates announce themselves to other routers by using the PIM Multicast version 2 IP address (224.0.0.13). The candidacy message is forwarded through the network, and the BSR is elected from the candidates on the basis of its configured BSR priority. The BSR then becomes the root of the shared distribution tree.

Passive interfaces

A routing-enabled interface that is configured to operate in passive mode does not send routing advertisements out the interface and does not accept them. In the Brocade vRouter, both PIM-SIM and PIM-DM support a passive mode.

Embedded RP

The PIM implementation within the Brocade vRouter supports the embedded-rendezvous (RP) feature. This mechanism defines an address-allocation policy in which the address of the RP is encoded in a multicast group address. When PIM sparse mode is configured, the embedded RP can be used as the specification for a group-to-RP mapping mechanism.

To support embedded RP, the router configured as the RP must use a configured access list that permits the embedded RP group ranges derived from the embedded RP address. If embedded RP support is available, only the RP must be statically configured as the RP for the embedded RP ranges: No additional configuration is required on other PIMv6 routers. The other routers discover the RP address from the IPv6 group address. For these routers to select a static RP instead of the embedded RP, the specific embedded RP group range must be configured in the access list of the static RP, and embedded RP support must be disabled.

Supported standards

The Brocade 5600 vRouter implementation of multicast routing complies with the following standards:

- RFC 1112: *Host Extensions for IP Multicasting*
- RFC 2362: *Protocol Independent Multicast-Sparse Mode (PIM-SM): Protocol Specification*
- RFC 3973: *Protocol Independent Multicast-Dense Mode (PIM-DM): Protocol Specification (Revised)*
- RFC 4607: *Source-Specific Multicast for IP*

Supported MIBs

The Brocade 5600 vRouter implementation of PIM supports the following Simple Management Network Protocol (SNMP) management information bases (MIBs):

- IPMROUTE, RFC 2932: *IPv4 Multicast Routing MIB*

For a list of all MIBs supported on the Brocade vRouter, see *Brocade Vyatta Network OS Remote Management Configuration Guide*.

PIM configuration

PIM configurations depend on other multicast-related commands. For this reason, the configuration examples are located elsewhere. For PIM configuration examples, see *Brocade Vyatta Network OS Multicast Routing Configuration Guide*.

PIM Commands for IPv4

| | |
|------------------------------------------------------------------------------------|----|
| • interfaces <interface> ip pim..... | 18 |
| • interfaces <interface> ip pim bsr-border..... | 19 |
| • interfaces <interface> ip pim dr-priority..... | 20 |
| • interfaces <interface> ip pim exclude-genid..... | 21 |
| • interfaces <interface> ip pim hello-holdtime <holdtime>..... | 22 |
| • interfaces <interface> ip pim hello-interval <interval>..... | 23 |
| • interfaces <interface> ip pim mode <mode>..... | 24 |
| • interfaces <interface> ip pim neighbor-filter <acl>..... | 25 |
| • interfaces <interface> ip pim propagation-delay <delay>..... | 26 |
| • interfaces <interface> ip pim state-refresh origination-interval <interval>..... | 27 |
| • interfaces <interface> ip pim unicast-bsm..... | 28 |
| • monitor protocol multicast pim..... | 29 |
| • protocols pim accept-register list <acl>..... | 32 |
| • protocols pim anycast-rp <rp-address> anycast-rp-peer <rp-peer-address>..... | 33 |
| • protocols pim bsr-candidate <interface>..... | 34 |
| • protocols pim ignore-rp-set-priority..... | 35 |
| • protocols pim join-prune-timer <timer>..... | 36 |
| • protocols pim legacy-register-checksum [group-list <acl>]..... | 37 |
| • protocols pim log..... | 38 |
| • protocols pim log packet..... | 40 |
| • protocols pim log timer..... | 41 |
| • protocols pim log timer assert..... | 43 |
| • protocols pim log timer bsr..... | 44 |
| • protocols pim log timer hello..... | 45 |
| • protocols pim log timer joinprune..... | 47 |
| • protocols pim log timer register..... | 49 |
| • protocols pim register-kat <timer>..... | 50 |
| • protocols pim register-rate-limit <rate>..... | 51 |
| • protocols pim register-rp-reachability..... | 52 |
| • protocols pim register-source..... | 53 |
| • protocols pim register-suppression-timer <timer>..... | 54 |
| • protocols pim rp-address <rp-addr>..... | 55 |
| • protocols pim rp-candidate <interface>..... | 57 |
| • protocols pim spt-threshold..... | 58 |
| • protocols pim ssm default..... | 59 |
| • protocols pim ssm range <acl>..... | 60 |
| • reset ip mroute..... | 61 |
| • reset ip pim sparse-mode bsr rp-set..... | 62 |
| • show ip pim bsr-router..... | 63 |
| • show ip pim interface..... | 64 |
| • show ip pim local-members..... | 65 |
| • show ip pim mroute..... | 66 |
| • show ip pim neighbor..... | 68 |
| • show ip pim nexthop..... | 69 |
| • show ip pim rp-hash <group>..... | 70 |
| • show ip pim rp-mapping..... | 71 |
| • show monitoring protocols multicast pim..... | 72 |

interfaces <interface> ip pim

interfaces <interface> ip pim

Enables PIM on an interface.

Syntax

set interfaces *interface* ip pim

delete interfaces *interface* ip pim

show interfaces *interface* ip pim

Parameters

interface

A type of interface. For detailed keywords and arguments for interfaces that support multicast routing, see to [Supported Interface Types](#) on page 129.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {  
    ip {  
        pim {  
        }  
    }  
}
```

Usage Guidelines

Use this command to enable PIM on an interface.

NOTE

To use PIM for multicast routing, multicast routing must be enabled on the router. For information about multicast routing in general, see *Brocade Vyatta Network OS Multicast Routing Configuration Guide*.

Use the **set** form of this command to enable PIM for IPv4 on an interface.

Use the **delete** form of this command to remove all PIM configuration and disable PIM for IPv4 on an interface.

Use the **show** form of this command to display the configuration of PIM for IPv4.

interfaces <interface> ip pim bsr-border

Prevents bootstrap router (BSR) messages from being sent or received through an interface.

Syntax

set interfaces *interface* ip pim bsr-border

delete interfaces *interface* ip pim bsr-border

show interfaces *interface* ip pim bsr-border

Command Default

BSR messages can be sent or received through an interface.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ip pim](#) on page 18.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ip {
    pim {
      bsr-border
    }
  }
}
```

Usage Guidelines

Use this command to prevent PIM Version 2 (PIMv2) BSR messages from being sent or received through an interface. This is used to configure an interface bordering another PIM domain to avoid the exchange of BSR messages between the two domains. BSR messages should not be exchanged between different domains because routers in one domain may elect rendezvous points (RPs) in the other domain, resulting in a protocol malfunction or loss of isolation between the domains.

NOTE

This command does not set up multicast boundaries. It only sets up a PIM domain BSR message border.

Use the **set** form of this command to restrict the flow of BSR messages through an interface.

Use the **delete** form of this command to restore the default behavior.

Use the **show** form of this command to display BSR border configuration.

interfaces <interface> ip pim dr-priority

Specifies the designated router (DR) priority.

Syntax

set interfaces *interface* ip pim dr-priority *priority*

delete interfaces *interface* ip pim dr-priority

show interfaces *interface* ip pim dr-priority

Command Default

The designated router priority is 1.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ip pim](#) on page 18.

priority

The designated router priority. The range is 0 to 4294967294. The default is 1.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {  
    ip {  
        pim {  
            dr-priority priority  
        }  
    }  
}
```

Usage Guidelines

Use this command to specify the designated router priority. The router with the highest priority is elected as the DR by PIM.

Use the **set** form of this command to specify the designated router priority.

Use the **delete** form of this command to restore the designated router priority to its default priority.

Use the **show** form of this command to display the designated router priority.

interfaces <interface> ip pim exclude-genid

Specifies that the generated ID (GenID) option is to be excluded from PIM Hello packets sent on an interface.

Syntax

set interfaces *interface* ip pim exclude-genid

delete interfaces *interface* ip pim exclude-genid

show interfaces *interface* ip pim

Command Default

The GenID option is included in Hello packets.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ip pim](#) on page 18.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ip {
    pim {
      exclude-genid
    }
  }
}
```

Usage Guidelines

Use this command to exclude the GenID option from PIM Hello packets sent on an interface. This command is used to accommodate operations with older Cisco IOS versions.

Use the **set** form of this command to exclude the GenID option from Hello packets.

Use the **delete** form of this command to restore the default behavior for the GenID option in Hello packets.

Use the **show** form of this command to display the GenID exclusion configuration.

interfaces <interface> ip pim hello-holdtime <holdtime>

Specifies the hello holdtime.

Syntax

set interfaces *interface* ip pim hello-holdtime *holdtime*

delete interfaces *interface* ip pim hello-holdtime

show interfaces *interface* ip pim hello-holdtime

Command Default

The hello holdtime is 3.5 times the **hello-interval**, in seconds (typically 105 seconds).

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ip pim](#) on page 18.

holdtime

The hello holdtime, in seconds. The range is 1 to 65535. The default is 3.5 * **hello-interval**.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ip {
    pim {
      hello-holdtime holdtime
    }
  }
}
```

Usage Guidelines

Use this command to configure a hello holdtime, the amount of time the system waits for a PIM Hello message before dropping a neighbor. The holdtime cannot be less than the current **hello-interval**. When the **hello-interval** is updated, the **hello-holdtime** is reviewed. If the **hello-holdtime** either is not configured or is configured but less than the current **hello-interval**, it is set to 3.5 times the **hello-interval**. Otherwise, the current holdtime remains unchanged.

Use the **set** form of this command to specify the hello holdtime.

Use the **delete** form of this command to restore the hello holdtime to its default holdtime.

Use the **show** form of this command to display the hello holdtime configuration.

interfaces <interface> ip pim hello-interval <interval>

Specifies the hello interval.

Syntax

set interfaces *interface* ip pim hello-interval *interval*

delete interfaces *interface* ip pim hello-interval

show interfaces *interface* ip pim hello-interval

Command Default

Hello messages are sent every 30 seconds.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ip pim](#) on page 18.

interval

The hello interval, in seconds. The hello interval ranges from 1 to 65535. The default interval is 30.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ip {
    pim {
      hello-interval interval
    }
  }
}
```

Usage Guidelines

Use this command to configure a hello interval, the interval at which PIM Hello messages are sent on an interface. When the **hello-interval** is updated, the **hello-holdtime** is reviewed. If the **hello-holdtime** either is not configured or is configured but less than the current hello-interval, it is set to 3.5 times the **hello-interval**. Otherwise, the currently configured **hello-holdtime** remains unchanged.

Use the **set** form of this command to specify the hello interval.

Use the **delete** form of this command to restore the hello interval to its default interval.

Use the **show** form of this command to display the hello interval configuration.

interfaces <interface> ip pim mode <mode>

Specifies the PIM mode on an interface.

Syntax

set interfaces *interface* ip pim mode *mode*

delete interfaces *interface* ip pim mode

show interfaces *interface* ip pim mode

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ip pim](#) on page 18.

mode

The PIM mode for an interface. The mode is as follows:

dense: Enable PIM dense mode.

dense-passive: Enable passive operation for PIM dense mode.

sparse: Enable PIM sparse mode.

sparse-passive: Enable passive operation for PIM sparse mode.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
    ip {
        pim {
            mode [dense|dense-passive|sparse|sparse-passive]
        }
    }
}
```

Usage Guidelines

Use this command to specify the PIM mode on an interface. Use the **dense** or **sparse** keyword to enable PIM dense mode or PIM sparse mode on an interface. Use the **dense-passive** or **sparse-passive** keyword to stop PIM transactions on an interface, allowing only Internet Group Management Protocol (IGMP) to be active.

Use the **set** form of this command to specify the PIM mode for an interface.

Use the **delete** form of this command to disable PIM on an interface.

Use the **show** form of this command to display the PIM mode configuration.

interfaces <interface> ip pim neighbor-filter <acl>

Enables filtering of neighbors on an interface.

Syntax

set interfaces *interface* ip pim neighbor-filter *acl*

delete interfaces *interface* ip pim neighbor-filter *acl*

show interfaces *interface* ip pim neighbor-filter

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ip pim](#) on page 18.

acl

A standard IP access list number. The number ranges from 1 to 99. An ACL is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating one.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ip {
    pim {
      neighbor-filter acl
    }
  }
}
```

Usage Guidelines

Use this command to enable filtering of neighbors on an interface based on an ACL. PIM terminates its adjacency with existing neighbors filtered by the ACL, and does not establish adjacency with potential neighbors filtered by the ACL.

Use the **set** form of this command to enable filtering of neighbors on an interface based on the specified ACL.

Use the **delete** form of this command to disable filtering of neighbors on an interface based on the specified ACL.

Use the **show** form of this command to display the neighbor filter configuration.

interfaces <interface> ip pim propagation-delay <delay>

Specifies the propagation delay for PIM on an interface.

Syntax

set interfaces *interface* ip pim propagation-delay *delay*

delete interfaces *interface* ip pim propagation-delay

show interfaces *interface* ip pim propagation-delay

Command Default

The propagation delay is 1000 milliseconds.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ip pim](#) on page 18.

delay

The propagation delay, in milliseconds. The delay ranges from 1000 to 5000.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {  
    ip {  
        pim {  
            propagation-delay delay  
        }  
    }  
}
```

Usage Guidelines

Use this command to specify the expected message propagation delay on the link. It is used by upstream routers to determine how long to wait for a Join override message before pruning an interface.

Use the **set** form of this command to specify the propagation delay for PIM on an interface.

Use the **delete** form of this command to restore the default propagation delay for PIM on an interface.

Use the **show** form of this command to display the propagation delay configuration.

interfaces <interface> ip pim state-refresh origination-interval <interval>

Specifies the PIM-Dense Mode (PIM-DM) State Refresh origination interval on an interface.

Syntax

set interfaces *interface* ip pim state-refresh origination-interval *interval*

delete interfaces *interface* ip pim state-refresh origination-interval

show interfaces *interface* ip pim state-refresh origination-interval

Command Default

The PIM-DM State-Refresh origination interval is 60 seconds.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ip pim](#) on page 18.

interval

The PIM-DM State Refresh origination interval, in seconds. The interval ranges from 1 to 100. The default interval is 60.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ip {
    pim {
      state-refresh {
        origination-interval interval
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the PIM-DM State Refresh origination interval on an interface. This interval is the amount of time between PIM-DM State Refresh control messages.

Use the **set** form of this command to specify the PIM-DM State Refresh origination interval on an interface.

Use the **delete** form of this command to restore the PIM-DM State Refresh origination interval to its default interval.

Use the **show** form of this command to display the configuration of a PIM-DM State Refresh interval.

interfaces <interface> ip pim unicast-bsm

Enables the sending and receiving of unicast Bootstrap Messages (BSM) on an interface.

Syntax

set interfaces *interface* ip pim unicast-bsm

delete interfaces *interface* ip pim unicast-bsm

show interfaces *interface* ip pim

Command Default

Unicast bootstrap messaging is disabled on an interface.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ip pim](#) on page 18.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {  
  ip {  
    pim {  
      unicast-bsm  
    }  
  }  
}
```

Usage Guidelines

Use this command to enable the sending and receiving of unicast BSM on an interface. This command provides support for older versions of the Bootstrap Router (BSR) specification. This specification specifies the use of unicast BSM to refresh the state of new or restarting neighbors.

Use the **set** form of this command to enable support for unicast BSM on an interface.

Use the **delete** form of this command to disable support for unicast bootstrap messaging on an interface.

Use the **show** form of this command to display the configuration of unicast bootstrap messaging.

monitor protocol multicast pim

Sets debugging options for PIM.

Syntax

```
monitor protocol multicast pim [[ background { start | stop } ] | { enable | disable } ip [ events | mfc | mib | mtrace | nexthop |
nsm | packet [ in | out ] | state | timer [ assert [ at ] | bsr [ bst | crp ] | hello [ ht | nlt | tht ] | joinprune [ et | jt | kat | ot | ppt ] |
register [ rst ] ] ] ] ]
```

Command Default

PIM debugging is disabled.

Parameters

background

Performs debugging operations in the background.

start

Starts debugging in the background.

stop

Stops debugging in the background.

enable

Enables the specified debugging option.

disable

Disables the specified debugging option.

events

Enables debugging for PIM events.

mfc

Enables debugging for Multicast Forwarding Cache (MFC) updates.

mib

Enables debugging for Management Information Base (MIB) entries.

mtrace

Enables debugging for Multicast Traceroute (MTRACE) messages.

nexthop

Enables debugging for Reverse Path Forwarding (RPF) neighbor nexthop cache handling.

nsm

Enables debugging for Network Services Module (NSM) messages.

packet

Enables debugging for PIM packets.

in

Enables debugging for incoming PIM packets.

out

Enables debugging for outgoing PIM packets.

| | |
|------------------|--------------------------------------------------------------|
| state | Enables debugging for PIM states. |
| timer | Enables debugging for PIM timers. |
| assert | Enables debugging for PIM assert timers. |
| at | Enables debugging for PIM assert timer. |
| bsr | Enables debugging for PIM BSR timers. |
| bst | Enables debugging for PIM bootstrap timer. |
| crp | Enables debugging for PIM Candidate-RP timer. |
| hello | Enables debugging for various PIM timers. |
| ht | Enables debugging for PIM Hello timer. |
| nlt | Enables debugging for PIM Neighbor Liveliness timer. |
| tht | Enables debugging for PIM Triggered Hello timer. |
| joinprune | Enables debugging for various PIM JoinPrune timers. |
| et | Enables debugging for PIM JoinPrune Expiry timer. |
| jt | Enables debugging for PIM JoinPrune Upstream Join timer. |
| kat | Enables debugging for PIM JoinPrune Keepalive timer. |
| ot | Enables debugging for PIM JoinPrune Upstream Override timer. |
| ppt | Enables debugging for PIM JoinPrune Prune Pending timer. |
| register | Enables debugging for various PIM register timers. |
| rst | Enables debugging for PIM Register Stop timer. |

Modes

Operational mode

Usage Guidelines

Use this command to enable or disable debugging for PIM and to set PIM debugging options.

Examples

The following example shows how to start debugging for IPv4 PIM events.

```
vyatta@vyatta:~$monitor protocol multicast pim enable ip event
```

protocols pim accept-register list <acl>

Allows the Rendezvous Point (RP) to accept Register messages only from multicast sources identified in a given access list.

Syntax

set protocols pim accept-register list *acl*

delete protocols pim accept-register list *acl*

show protocols pim accept-register list

Command Default

The RP accepts Register messages from all multicast sources.

Parameters

acl

The number of an access list. The number ranges as follows:

100 to 199: Extended IP access list number.

2000 to 2699: Extended IP access list number in the expanded range.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    accept-register {
      list acl
    }
  }
}
```

Usage Guidelines

Use this command to configure the RP router to filter multicast sources identified by the specified access list. The RP accepts Register messages sent only by the sources specified in the access list. By default, the RP accepts Register messages from all multicast sources.

Use the **set** form of this command to enable the RP to accept Register messages only from multicast sources identified in a given access list.

Use the **delete** form of this command to restore the default behavior of Register handling.

Use the **show** form of this command to display accept-register list configuration.

protocols pim anycast-rp <rp-address> anycast-rp-peer <rp-peer-address>

Specifies the address of a Rendezvous Point (RP) member in an Anycast-RP set.

Syntax

set protocols pim anycast-rp *rp-address* anycast-rp-peer *rp-peer-address*

delete protocols pim anycast-rp *rp-address* anycast-rp-peer *rp-peer-address*

show protocols pim anycast-rp *rp-address* anycast-rp-peer

Parameters

rp-address

The unicast IPv4 address of an Anycast-RP set.

rp-peer-address

The IPv4 address of an RP member of an Anycast-RP set.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    anycast-rp rp-address {
      anycast-rp-peer rp-peer-address
    }
  }
}
```

Usage Guidelines

Use this command to specify the IP address of an RP member of an Anycast-RP set. Register messages are copied to and sent from this address.

Use the **set** form of this command to specify the IP address of an RP member of an Anycast-RP set.

Use the **delete** form of this command to remove the IP address of an RP member of an Anycast-RP set.

Use the **show** form of this command to display the RP member configuration.

protocols pim bsr-candidate <interface>

Sets the candidate bootstrap router (BSR) status by using the IP address of the specified interface.

Syntax

set protocols pim bsr-candidate *interface* [hash-mask *mask*] [priority *priority*]

delete protocols pim bsr-candidate *interface* [hash-mask] [priority]

show protocols pim bsr-candidate *interface* [hash-mask] [priority]

Parameters

mask

The hash mask length for RP selection. The length ranges from 0 to 32. The default length is 10.

priority

The priority for the BSR candidate. The priority ranges from 0 to 255. The default priority is 64.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    bsr-candidate interface {
      hash-mask mask
      priority priority
    }
  }
}
```

Usage Guidelines

Use this command to set the candidate BSR status by using the IP address of the specified interface.

Use the **set** form of this command to set the candidate BSR status by using the IP address of the specified interface.

Use the **delete** form of this command to remove the candidate BSR status from the interface.

Use the **show** form of this command to display the candidate BSR configuration.

protocols pim ignore-rp-set-priority

Specifies that the RP-SET priority is to be ignored in Rendezvous Point (RP) selection.

Syntax

```
set protocols pim ignore-rp-set-priority
delete protocols pim ignore-rp-set-priority
show protocols pim
```

Command Default

The RP-SET priority is used in RP selection.

Modes

Configuration mode

Configuration Statement

```
protocols {
    pim {
        ignore-rp-set-priority
    }
}
```

Usage Guidelines

Use this command to specify that the RP-SET priority is to be ignored and that only the hash value is to be used in RP selection. This command provides interoperability with older Cisco IOS versions.

Use the **set** form of this command to specify that the RP-SET priority is to be ignored and that only the hash value is to be used in RP selection.

Use the **delete** form of this command to restore the default RP selection mechanism by using the RP-SET priority.

Use the **show** form of this command to display the PIM configuration.

protocols pim join-prune-timer <timer>

Sets the PIM join/prune timer.

Syntax

```
set protocols pim join-prune-timer timer
delete protocols pim join-prune-timer
show protocols pim join-prune-timer
```

Command Default

The join/prune timer is 210 seconds.

Parameters

timer

The join/prune timer, in seconds. The timer ranges from 1 to 65535. The default timer is 210.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    join-prune-timer timer
  }
}
```

Usage Guidelines

Use this command to specify the PIM join/prune timer.

Use the **set** form of this command to specify the PIM join/prune timer.

Use the **delete** form of this command to remove the PIM join/prune timer.

Use the **show** form of this command to display the PIM join/prune timer configuration.

protocols pim legacy-register-checksum [group-list <acl>]

Specifies that the Register checksum should be calculated over the whole packet.

Syntax

```
set protocols pim legacy-register-checksum [ group-list acl ]
delete protocols pim legacy-register-checksum [ group-list ]
show protocols pim legacy-register-checksum [ group-list ]
```

Command Default

The Register checksum is calculated over only the packet header.

Parameters

acl

An access list number that specifies the multicast groups on which to calculate the Register checksum over the whole packet. The number ranges as follows:

1 to 99: IP access list number.

1300 to 1999: IP access list number in the expanded range.

An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    legacy-register-checksum {
      group-list acl
    }
  }
}
```

Usage Guidelines

Use this command to specify that the Register checksum should be calculated over the whole packet rather than only over the packet header. This command is used to accommodate operations with older Cisco IOS versions.

Use the **set** form of this command to specify that the Register checksum should be calculated over the whole packet rather than only over the packet header.

Use the **delete** form of this command to restore the default operation.

Use the **show** form of this command to display legacy register checksum configuration.

protocols pim log

Enables PIM logs.

Syntax

```
set protocols pim log { all | events | mfc | mib | mtrace | nexthop | nsm | packet | state | timer }  
delete protocols pim log { all | events | mfc | mib | mtrace | nexthop | nsm | packet | state | timer }  
show protocols pim log { all | events | mfc | mib | mtrace | nexthop | nsm | packet | state | timer }
```

Command Default

None

Parameters

- all**
Enables all PIM logs.
- events**
Enables PIM debugging of general configuration and virtual routing.
- mfc**
Enables PIM debugging for MFC updates.
- mib**
Enables PIM debugging for MIB entries.
- mtrace**
Enables PIM debugging for MTRACE messages.
- nexthop**
Enables PIM debugging for nexthop cache handling for RPF neighbors .
- nsm**
Enables PIM debugging for PIM NSM.
- packet**
Enables PIM debugging for PIM packets.
- state**
Enables PIM debugging for PIM states.
- timer**
Enables PIM debugging for PIM timers.

Modes

None

Configuration Statement

```
protocols {  
  pim {
```

```
log {  
    all  
    events  
    mfc  
    mib  
    msdp  
    mtrace  
    nexthop  
    nsm  
    packet  
    state  
    timer  
}  
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM) logs.

Use the **delete** form of this command to remove PIM logs.

Use the **show** form of this command to view PIM logs.

protocols pim log packet

Enables PIM debugging of PIM packets.

Syntax

```
set protocols pim log packet { all | rcv | send }
delete protocols pim log packet { all | rcv | send }
show protocols pim log packet { all | rcv | send }
```

Command Default

None

Parameters

all
Enables all PIM packet logs.

rcv
Enables debugging for all incoming PIM packets.

send
Enables debugging for all outgoing PIM packets.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    log {
      packet {
        all
        rcv
        send
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM) packet logs.

Use the **delete** form of this command to remove PIM packet logs.

Use the **show** form of this command to view PIM packet logs.

protocols pim log timer

Enables PIM debugging for PIM timers.

Syntax

```
set protocols pim log timer { all | assert | bsr | hello | joinprune | register }
delete protocols pim log timer { all | assert | bsr | hello | joinprune | register }
show protocols pim log timer { all | assert | bsr | hello | joinprune | register }
```

Command Default

None

Parameters

all
Enables PIM debugging for all PIM timers.

assert
Enables PIM debugging for all PIM assert timers.

bsr
Enables PIM debugging for all PIM BSR timers.

hello
Enables PIM debugging for various PIM timers.

joinprune
Enables PIM debugging for PIM join-prune timers.

register
Enables PIM debugging for various PIM register timers.

Modes

Configuration mode

Configuration Statement

```
protocols{
  pim {
    log {
      timer {
        all
        assert
        bsr
        hello
        joinprune
        register
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM) timer logs.

Use the **delete** form of this command to remove PIM timer logs.

Use the **show** form of this command to view PIM timer logs.

protocols pim log timer assert

Enables PIM debugging for PIM assert timers.

Syntax

```
set protocols pim log timer assert { all | at }
```

```
delete protocols pim log timer assert { all | at }
```

```
show protocols pim log timer assert { all | at }
```

Command Default

None

Parameters

all

Enables debugging of all PIM assert timers.

at

Enables debugging of PIM assert timers.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    log {
      timer {
        assert {
          all
          at
        }
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM) assert timer logs.

Use the **delete** form of this command to remove PIM assert timer logs.

Use the **show** form of this command to view PIM assert timer logs.

protocols pim log timer bsr

Enables PIM debugging for PIM BSR timer.

Syntax

```
set protocols pim log timer bsr { all | bst | crp }
```

```
delete protocols pim log timer bsr { all | bst | crp }
```

```
show protocols pim log timer bsr { all | bst | crp }
```

Command Default

None

Parameters

all

Enables debugging of all PIM BSR timers.

bst

Enables debugging of only bootstrap timers.

crp

Enables debugging of only candidate-RP timers.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    log {
      timer {
        bsr {
          all
          bst
          crp
        }
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM) BSR timer logs.

Use the **delete** form of this command to remove PIM BSR timer logs.

Use the **show** form of this command to view PIM BSR timer logs.

protocols pim log timer hello

Enables PIM debugging for PIM hello timers.

Syntax

```
set protocols pim log timer hello { all | ht | nlt| tht }
delete protocols pim log timer hello { all | ht | nlt| tht }
show protocols pim log timer hello { all | ht | nlt| tht }
```

Command Default

None

Parameters

all
Enables debugging of all PIM hello timers.

ht
Enables debugging of only PIM hello timers.

nlt
Enables debugging of only PIM neighbor liveliness timers.

tht
Enables debugging of only PIM triggered hello timers.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    log {
      timer {
        hello {
          all
          ht
          nlt
          tht
        }
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM) timer hello logs.

Use the **delete** form of this command to remove PIM timer hello logs.

protocols pim log timer hello

Use the **show** form of this command to view PIM hello logs.

protocols pim log timer joinprune

Enables PIM debugging for PIM join-prune timers.

Syntax

```
set protocols pim log timer joinprune { all | et | jt | kat | ot | ppt }
show protocols pim log timer joinprune { all | et | jt | kat | ot | ppt }
delete protocols pim log timer joinprune { all | et | jt | kat | ot | ppt }
```

Command Default

None

Parameters

| | |
|------------|-----------------------------------------------------------|
| all | Enables debugging of all PIM join-prune timers. |
| et | Enables debugging of PIM join-prune expiry timers. |
| jt | Enables debugging of PIM join-prune upstream join timers. |
| kat | Enables debugging of PIM join-prune keep-alive timers. |
| ot | Enables debugging of PIM join-prune over-ride timers. |
| ppt | Enables debugging of PIM joinprune prune-pending timers. |

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    log {
      timer {
        joinprune {
          all
          et
          jt
          kat
          ot
          ppt
        }
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM) join-prune timer logs.

Use the **delete** form of this command to remove PIM join-prune timer logs.

Use the **show** form of this command to view PIM join-prune timer logs.

protocols pim log timer register

Enables PIM debugging for PIM register timers.

Syntax

```
set protocols pim log timer register { all | rst }
delete protocols pim log timer register { all | rst }
show protocols pim log timer register { all | rst }
```

Command Default

None

Parameters

all
Enables debugging of all PIM register timers.

rst
Enables debugging of only PIM register-stop timers.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    log {
      timer {
        register {
          all
          rst
        }
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM) register timer logs.

Use the **delete** form of this command to remove PIM register timer logs.

Use the **show** form of this command to view PIM register timer logs.

protocols pim register-kat <timer>

Specifies the Keepalive Timer (KAT) for (S,G) states at the Rendezvous Point (RP).

Syntax

set protocols pim register-kat *timer*

delete protocols pim register-kat

show protocols pim register-kat

Command Default

The KAT for (S,G) states is 210 seconds.

Parameters

timer

The KAT, in seconds. The timer ranges from 1 to 65535. The default timer is 210.

Modes

Configuration mode

Configuration Statement

```
protocols {  
  pim {  
    register-kat timer  
  }  
}
```

Usage Guidelines

Use this command to specify the KAT for (S,G) states at the RP to monitor Register messages.

Use the **set** form of this command to specify the KAT for (S,G) states at the RP to monitor Register messages.

Use the **delete** form of this command to restore the KAT to 210 seconds.

Use the **show** form of this command to display register KAT configuration.

protocols pim register-rate-limit <rate>

Specifies the rate at which Register messages are sent by this designated router (DR).

Syntax

set protocols pim register-rate-limit *rate*

delete protocols pim register-rate-limit

show protocols pim register-rate-limit

Command Default

There is no limit to the rate at which Register messages are sent by the DR.

Parameters

rate

The rate at which Register messages are sent by the DR, in packets per second. The range is 0 to 65535. The default is 0, meaning “no limit.”

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    register-rate-limit rate
  }
}
```

Usage Guidelines

Use this command to specify the rate of Register messages sent by this DR. This rate is for each (S,G) state. The rate is not system wide.

Use the **set** form of this command to specify the rate of Register messages sent by this DR.

Use the **delete** form of this command to restore no limit to the rate at which Register messages are sent by this DR.

Use the **show** form of this command to display Register rate limit configuration.

protocols pim register-rp-reachability

Enables Rendezvous Point (RP) reachability checking for PIM Registers at the designated router (DR).

Syntax

```
set protocols pim register-rp-reachability
delete protocols pim register-rp-reachability
show protocols pim
```

Command Default

RP reachability is not checked.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    register-rp-reachability
  }
}
```

Usage Guidelines

Use this command to enable RP reachability checking for PIM Registers at the DR.

Use the **set** form of this command to enable RP reachability checking for PIM Registers at the DR.

Use the **delete** form of this command to restore no checking for reachability.

Use the **show** form of this command to display the configuration of Register RP reachability.

protocols pim register-source

Specifies the source of Register messages sent by this designated router (DR).

Syntax

```
set protocols pim register-source { address source | interface interface }
```

```
delete protocols pim register-source { address | interface }
```

```
show protocols pim register-source { address | interface }
```

Command Default

The IPv4 address of the Reverse Path Forwarding (RPF) interface that faces the source host.

Parameters

source

An IPv4 address to use as the source of Register messages.

interface

An interface to use as the source of Register messages. Note that it is not necessary for PIM to be enabled on this interface.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    register-source {
      [address source | interface interface]
    }
  }
}
```

Usage Guidelines

Use this command to specify the source of Register messages sent by this DR. The specified address must be reachable so that the Rendezvous Point (RP) router can send Register-Stop messages in response. The Register source address is usually the address of the loopback interface, though it can be another physical address. The specified address must be advertised by unicast routing protocols on the DR.

Use the **set** form of this command to specify the source of Register messages sent by this DR.

Use the **delete** form of this command to restore the default source of Register messages sent by the DR.

Use the **show** form of this command to display Register source configuration.

protocols pim register-suppression-timer <timer>

Specifies the register-suspension time.

Syntax

set protocols pim register-suppression-timer *timer*

delete protocols pim register-suppression-timer

show protocols pim register-suppression-timer

Command Default

The register-suppression time is 60 seconds.

Parameters

timer

The register-suppression time, in seconds. The range is 1 to 65535. The default is 60.

Modes

Configuration mode

Configuration Statement

```
protocols {  
  pim {  
    register-suppression-timer timer  
  }  
}
```

Usage Guidelines

Use this command to specify the register-suppression time. On a designated router (DR), this configuration modifies the register-suppression time. On a Rendezvous Point (RP) router, this configuration modifies the RPkeepalive-period if [protocols pim register-kat <timer>](#) on page 50 is not used.

Use the **set** form of this command to specify the register-suppression time.

Use the **delete** form of this command to restore the register-suppression time to 60 seconds.

Use the **show** form of this command to display the configuration of the register-suppression time.

protocols pim rp-address <rp-addr>

Specifies a static rendezvous point (RP) address for multicast groups.

Syntax

```
set protocols pim rp-address rp-addr [ list acl | override ]
```

```
delete protocols pim rp-address rp-addr [ list | override ]
```

```
show protocols pim rp-address rp-addr [ list | override ]
```

Parameters

rp-addr

The unicast IPv4 RP address of the RP set.

acl

An access list number used to specify the multicast groups for which the static RP address is valid. Supported ranges of values are:

1 to **99**: IP access list number.

1300 to **1999**: IP access list number in the expanded range.

An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

override

Specifies that static RP addresses take precedence over dynamically learned RP addresses.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    rp-address rp-addr {
      list acl
      override
    }
  }
}
```

Usage Guidelines

The PIM implementation supports multiple statically configured rendezvous points (RPs). It also supports the use of both statically configured RPs and those selected through the bootstrap router (BSR) mechanism simultaneously. Note the following:

- If multiple static RP addresses are available for a group range, then the one with the highest IP address is chosen.
- RP addresses configured for a multicast group through the BSR mechanism take precedence over those configured statically unless the **override** keyword is used. In those cases, a statically configured RP address takes precedence.
- Configuring multiple static RPs with the same RP address is not allowed.
- One static RP address can be configured for multiple group ranges by using access lists. The static RP address can either be configured for the whole multicast group range (that is, 224.0.0.0/4) or for specific group ranges if an access

list is specified. When an access list is specified, the static RP address is configured for all the group ranges represented by Permit filters in the access list.

- Only Permit filters in access lists are considered as valid group ranges. The default Permit filter 0.0.0.0/0 is converted to the default multicast filter 224.0.0.0/4.
- After configuration, the RP address is inserted into a static RP group tree based on the configured group ranges. For each group range, multiple static RPs are maintained in a list. This list is sorted in descending order of IP addresses. When selecting static RPs for a group range, the first element of the list (the statically configured RP with the highest IP address) is selected.
- When an RP address is deleted, the static RP is removed from all the existing group ranges and RPs are recomputed for existing Tree Information Base (TIB) states if required.

Use the **set** form of this command to specify a static RP address for multicast groups.

Use the **delete** form of this command to remove the configuration of static RP addresses.

Use the **show** form of this command to display the configuration of static RP addresses.

protocols pim rp-candidate <interface>

Specifies that the router is a candidate Rendezvous Point (RP.)

Syntax

set protocols pim rp-candidate *interface* [**group-list** *acl* | **interval** *interval* | **priority** *priority*]

delete protocols pim rp-candidate *interface* [**group-list** | **interval** | **priority**]

show protocols pim rp-candidate *interface* [**group-list** | **interval** | **priority**]

Parameters

interface

The interface to set with candidate RP status.

acl

An access list number used to specify the group of ranges for this RP candidate. Supported ranges of values are:

1 to 99: IP access list number.

An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

interval

The candidate RP advertisement interval, in seconds. The range is 1 to 16383. The default is 60.

priority

The candidate RP priority. The range is 0 to 255. The default is 192.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    rp-candidate interface {
      group-list acl
      interval interval
      priority priority
    }
  }
}
```

Usage Guidelines

Use this command to specify that the router is a candidate RP by using the IP address of the specified interface.

Use the **set** form of this command to specify that this router is a candidate RP.

Use the **delete** form of this command to remove the router as a candidate RP.

Use the **show** form of this command to display the candidate RP configuration.

protocols pim spt-threshold

Enables the last-hop PIM router to switch to shortest-path tree (SPT).

Syntax

```
set protocols pim spt-threshold [ infinity ] [ group-list acl ]
```

```
delete protocols pim spt-threshold [ infinity ] [ group-list ]
```

```
show protocols pim spt-threshold [ infinity ] [ group-list ]
```

Parameters

infinity

Sets the SPT threshold to infinity, which disables the ability of the last-hop PIM router to switch to SPT.

acl

An access list number used to specify the multicast groups for the last-hop PIM router to switch to SPT for. Supported ranges of values are:

1 to **99**: IP access list number.

1300 to **1999**: IP access list number in the expanded range.

An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    spt-threshold
      infinity
      group-list acl
  }
}
```

Usage Guidelines

Use this command to enable the last-hop PIM router to switch to SPT. To set the SPT threshold to infinity and disable the ability of the last-hop PIM router to switch to SPT, use the **infinity** option with this command.

Use the **set** form of this command to enable the last-hop PIM router to switch to SPT.

Use the **delete** form of this command to remove SPT threshold configuration. To remove the **infinity** option with this command, use the **delete** form of this command with this option, which enables the ability of the last-hop PIM router to switch to SPT.

Use the **show** form of this command to display the SPT threshold configuration.

protocols pim ssm default

Enables Source Specific Multicast (SSM) and uses a default range of IP multicast addresses.

Syntax

set protocols pim ssm default

delete protocols pim ssm default

show protocols pim ssm default

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim {
    ssm {
      default
    }
  }
}
```

Usage Guidelines

Use this command to configure SSM and use the default range of IP multicast addresses (that is, 232.0.0.0/8). Use [protocols pim ssm range <acl>](#) on page 60 to define the SSM range to be other than the default. When an SSM range of multicast addresses is defined, the no (*,G) or (S,G,rpt) state is initiated for groups in the SSM range. Messages corresponding to these states are neither accepted nor originated in the SSM range.

Use the **set** form of this command to enable SSM and use a default range of IP multicast addresses.

Use the **delete** form of this command to disable SSM.

Use the **show** form of this command to display the SSM default configuration.

protocols pim ssm range <acl>

Enables Source Specific Multicast (SSM) and defines a range of IP multicast addresses based on an access list.

Syntax

set protocols pim ssm range *acl*

delete protocols pim ssm range

show protocols pim ssm range

Parameters

acl

An access list number used to specify the group of ranges for SSM. Supported ranges of values are:

1 to 99: IP access list number.

An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

Modes

Configuration mode

Configuration Statement

```
protocols {  
  pim {  
    ssm {  
      range acl  
    }  
  }  
}
```

Usage Guidelines

Use this command to enable SSM and define a range of IP multicast addresses based on an access list.

Use the **set** form of this command to enable SSM and define a range of IP multicast addresses based on an access list.

Use the **delete** form of this command to disable SSM.

Use the **show** form of this command to display the SSM range configuration.

reset ip mroute

Deletes multicast route table entries and multicast routes at the PIM protocol level.

Syntax

```
reset ip mroute [ group group [ source source [ pim { dense-mode | sparse-mode } ] ] | pim { dense-mode | sparse-mode } ]
```

Parameters

group

A multicast group to delete. The format is an IPv4 multicast address.

source

A multicast source to delete. The format is an IPv4 host address.

dense-mode

Deletes the multicast route table for PIM dense-mode.

sparse-mode

Deletes the multicast route table for PIM sparse-mode.

Modes

Operational mode

Usage Guidelines

Use this command to delete multicast route table entries and multicast routes at the PIM protocol level. Used with no options, the command deletes all multicast route table entries and multicast routes. Used with options, the command deletes a subset of the multicast route table entries and multicast routes.

Examples

The following example shows how to delete all IPv4 multicast route table entries and multicast routes at the PIM protocol level.

```
vyatta@vyatta:~$reset ip mroute
```

```
reset ip pim sparse-mode bsr rp-set
```

reset ip pim sparse-mode bsr rp-set

Deletes all rendezvous point (RP) sets learned from the PIM Bootstrap Router (BSR).

Syntax

```
reset ip pim sparse-mode bsr rp-set
```

Modes

Operational mode

Usage Guidelines

Use this command to delete all RP sets learned through the PIM BSR.

Examples

The following example shows how to delete all RP sets learned through the PIM BSR.

```
vyatta@vyatta:~$reset ip pim sparse-mode bsr rp-set
```

show ip pim bsr-router

Displays the bootstrap router (BSR) PIM Version 2 (PIMv2) address.

Syntax

```
show ip pim bsr-router
```

Modes

Operational mode

Usage Guidelines

Displays the BSR PIMv2 address.

Examples

The following example shows how to display the BSR PIMv2 address.

```
vyatta@vyatta:~$show ip pim bsr-router
PIMv2 Bootstrap information
  BSR address: 10.10.11.35 (?)
  Uptime:      00:00:38, BSR Priority: 0, Hash mask length: 10
  Expires:     00:01:32
  Role: Non-candidate BSR
  State: Accept Preferred
```

show ip pim interface

show ip pim interface

Displays PIM interface information.

Syntax

```
show ip pim interface [ detail ]
```

Parameters

detail

Displays detailed information about the PIM interface.

Modes

Operational mode

Usage Guidelines

Use this command to display PIM interface information.

show ip pim local-members

Displays local membership information for a PIM interface.

Syntax

```
show ip pim local-members [ interface ]
```

Parameters

interface

An interface for which to display local membership information.

Modes

Operational mode

Usage Guidelines

Use this command to display local membership information for a PIM interface.

show ip pim mroute

Displays the IP PIM multicast routing table.

Syntax

```
show ip pim mroute [ [ group group [ [ source source ] detail ] | detail ] ] [ rfc [ group group [ [ source source ] [ detail ] ] | detail ] | source source [ detail ] | detail | summary ]
```

Parameters

group

The multicast group entries to display. The format is an IPv4 multicast address.

source

The multicast source entries to display. The format is an IPv4 host address.

rfc

Displays information for a PIM multicast routing table (RFC style).

detail

Displays detailed information for a PIM multicast routing table.

summary

Displays summarized information for a PIM routing table.

Modes

Operational mode

Usage Guidelines

Use this command to display the IP PIM multicast routing table. Used with no options, the command displays all entries for an IP PIM multicast routing table. Used with the **group** option, **source** options, or both options, the command displays a subset of entries for the IP PIM multicast routing table. Used with the **rfc** option, the command displays the PIM multicast routing table entries in an RFC style.

Examples

The following example shows how to display an IP PIM multicast routing table.

```
vyatta@vyatta:~$show ip pim mroute
IP Multicast Routing Table

(*,*,RP) Entries: 0
(*,G) Entries: 2
(S,G) Entries: 1
(S,G,rpt) Entries: 1
FCR Entries: 0

(*, 227.1.1.1)
RP: 10.15.0.1
RPF nbr: 0.0.0.0
RPF idx: None
Upstream State: JOINED
  Local .....
  Joined j.....
  Asserted .....
FCR:

(10.17.0.7, 227.1.1.1)
RPF nbr: 0.0.0.0
RPF idx: None
SPT bit: 1
Upstream State: JOINED
  Local .....
  Joined .....
  Asserted .....
  Outgoing o.....

(10.17.0.7, 227.1.1.1, rpt)
RP: 10.15.0.1
RPF nbr: 0.0.0.0
RPF idx: None
Upstream State: NOT PRUNED
  Local .....
  Pruned .....
  Outgoing o.....

(*, 239.255.255.250)
RP: 10.15.0.1
RPF nbr: 0.0.0.0
RPF idx: None
Upstream State: JOINED
  Local ..i.....
  Joined .....
  Asserted .....
FCR:
```

show ip pim neighbor

show ip pim neighbor

Displays PIM neighbor information.

Syntax

```
show ip pim neighbor [ interface [ addr [ detail ] | detail ] | detail ]
```

Parameters

interface

An interface for which to display PIM neighbor information.

addr

The IPv4 address of a neighbor interface.

detail

Displays detailed PIM neighbor information.

Modes

Operational mode

Usage Guidelines

Use this command to display PIM neighbor information. Used with no options, the command displays all PIM neighbor information. Used with the **interface** option, **addr** option, or both options, the command displays information for a subset of PIM neighbors.

show ip pim nexthop

Displays next-hop information used by PIM.

Syntax

```
show ip pim nexthop
```

Modes

Operational mode

Usage Guidelines

Displays next-hop information used by PIM.

show ip pim rp-hash <group>

show ip pim rp-hash <group>

Displays the rendezvous point (RP) to select based on the group specified.

Syntax

`show ip pim rp-hash group`

Parameters

group

A multicast group for which to determine the RP. The format is an IPv4 multicast address.

Modes

Operational mode

Usage Guidelines

Displays the RP to select based on the group specified.

Examples

The following example shows the command output for a specified multicast group.

```
vyatta@vyatta:~$ show ip pim rp-hash 239.3.3.45
RP: 45.45.45.1, v2
Info source: 45.45.45.1, via bootstrap, priority 192, holdtime 150
Uptime: 00:00:46, expires: 00:01:44
BSR 45.45.45.1: PIMv2 Hash Value (mask 255.255.255.252)
RP set received for group(s) 224.0.0.0/4:
RP: 23.23.23.1, via bootstrap, priority 192, hash value 368873312
RP set received for group(s) 239.3.3.0/24:
RP: 45.45.45.1, via bootstrap, priority 192, hash value 1929112928
```

show ip pim rp-mapping

Displays the group-to-Rendezvous Point (RP) mappings and the RP set.

Syntax

```
show ip pim rp-mapping
```

Modes

Operational mode

Usage Guidelines

Displays the group-to-RP mappings and the RP set.

show monitoring protocols multicast pim

Displays IPv4 multicast debugging information.

Syntax

show monitoring protocols multicast pim

Modes

Operational mode

Usage Guidelines

Use this command to display IPv4 multicast debugging information.

Examples

The following example shows how to display IPv4 multicast debugging information.

```
vyatta@vyatta:~$show monitoring protocols multicast pim
Debugging status:
PIM event debugging is on
PIM MFC debugging is on
PIM state debugging is on
PIM packet debugging is on
PIM Hello HT timer debugging is on
PIM Hello NLT timer debugging is on
PIM Hello THT timer debugging is on
PIM Join/Prune JT timer debugging is on
PIM Join/Prune ET timer debugging is on
PIM Join/Prune PPT timer debugging is on
PIM Join/Prune KAT timer debugging is on
PIM Join/Prune OT timer debugging is on
PIM Assert AT timer debugging is on
PIM Register RST timer debugging is on
PIM Bootstrap BST timer debugging is on
PIM Bootstrap CRP timer debugging is on
PIM mib debugging is on
PIM nexthop debugging is on
PIM mtrace debugging is on
PIM NSM debugging is on
```


PIM Commands for IPv6

| | |
|--------------------------------------------------------------------------------------|-----|
| • interfaces <interface> ipv6 pim..... | 74 |
| • interfaces <interface> ipv6 pim bsr-border..... | 75 |
| • interfaces <interface> ipv6 pim dr-priority..... | 76 |
| • interfaces <interface> ipv6 pim exclude-genid..... | 77 |
| • interfaces <interface> ipv6 pim hello-holdtime <holdtime>..... | 78 |
| • interfaces <interface> ipv6 pim hello-interval <interval>..... | 79 |
| • interfaces <interface> ipv6 pim mode <mode>..... | 80 |
| • interfaces <interface> ipv6 pim neighbor-filter <acl6>..... | 81 |
| • interfaces <interface> ipv6 pim propagation-delay <delay>..... | 82 |
| • interfaces <interface> ipv6 pim state-refresh origination-interval <interval>..... | 83 |
| • interfaces <interface> ipv6 pim unicast-bsm..... | 84 |
| • monitor protocol multicast pim..... | 85 |
| • protocols pim6 accept-register list <acl6>..... | 88 |
| • protocols pim6 anycast-rp <rp-address> anycast-rp-peer <rp-peer-address>..... | 89 |
| • protocols pim6 bsr-candidate <interface>..... | 90 |
| • protocols pim6 ignore-rp-set-priority..... | 91 |
| • protocols pim6 join-prune-timer <timer>..... | 92 |
| • protocols pim6 legacy-register-checksum [group-list <acl6>]..... | 93 |
| • protocols pim6 log..... | 94 |
| • protocols pim6 log timer..... | 96 |
| • protocols pim6 log packet..... | 98 |
| • protocols pim6 log timer assert..... | 99 |
| • protocols pim6 log timer bsr..... | 100 |
| • protocols pim6 log timer hello..... | 101 |
| • protocols pim6 log timer joinprune..... | 103 |
| • protocols pim6 log timer register..... | 105 |
| • protocols pim6 register-kat <timer>..... | 106 |
| • protocols pim6 register-rate-limit <rate>..... | 107 |
| • protocols pim6 register-rp-reachability..... | 108 |
| • protocols pim6 register-source..... | 109 |
| • protocols pim6 register-suppression-timer <timer>..... | 110 |
| • protocols pim6 rp-address <rp-addr>..... | 111 |
| • protocols pim6 rp-candidate <interface>..... | 113 |
| • protocols pim6 rp-embedded..... | 114 |
| • protocols pim6 spt-threshold..... | 115 |
| • protocols pim6 ssm default..... | 116 |
| • protocols pim6 ssm range <acl6>..... | 117 |
| • reset ipv6 mroute..... | 118 |
| • reset ipv6 pim sparse-mode bsr rp-set..... | 119 |
| • show ipv6 pim bsr-router..... | 120 |
| • show ipv6 pim interface..... | 121 |
| • show ipv6 pim local-members..... | 122 |
| • show ipv6 pim mroute..... | 123 |
| • show ipv6 pim neighbor..... | 124 |
| • show ipv6 pim nexthop..... | 125 |
| • show ipv6 pim rp-hash <group>..... | 126 |
| • show ipv6 pim rp-mapping..... | 127 |
| • show monitoring protocols multicast pim6..... | 128 |

interfaces <interface> ipv6 pim

interfaces <interface> ipv6 pim

Enables PIM for IPv6 on an interface.

Syntax

set interfaces *interface* **ipv6 pim**

delete interfaces *interface* **ipv6 pim**

show interfaces *interface* **ipv6 pim**

Parameters

interface

The type of interface. For detailed keywords and arguments for interfaces that support multicast routing, see [Supported Interface Types](#) on page 129.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {  
    ipv6 {  
        pim {  
        }  
    }  
}
```

Usage Guidelines

Use this command to enable PIM for IPv6 on an interface.

NOTE

To use PIM for multicast routing, multicast routing must be enabled on the router. For information about multicast routing in general, see *Brocade Vyatta Network OS Multicast Routing Configuration Guide*.

Use the **set** form of this command to enable PIM for IPv6 on an interface.

Use the **delete** form of this command to remove all PIM configuration and disable PIM for IPv6 on an interface.

Use the **show** form of this command to display the configuration of PIM for IPv6.

interfaces <interface> ipv6 pim bsr-border

Prevents bootstrap router (BSR) messages from being sent or received through an interface.

Syntax

set interfaces *interface* ipv6 pim bsr-border

delete interfaces *interface* ipv6 pim bsr-border

show interfaces *interface* ipv6 pim

Command Default

BSR messages can be sent or received through an interface.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ipv6 pim](#) on page 74.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ipv6 {
    pim {
      bsr-border
    }
  }
}
```

Usage Guidelines

Use this command to prevent PIM Version 2 (PIMv2) BSR messages from being sent or received through an interface. This is used to configure an interface bordering another PIM domain to avoid the exchange of BSR messages between the two domains. BSR messages should not be exchanged between different domains because routers in one domain may elect rendezvous points (RPs) in the other domain, resulting in a protocol malfunction or loss of isolation between the domains.

NOTE

This command does not set up multicast boundaries. It only sets up a PIM domain BSR message border.

Use the **set** form of this command to restrict the flow of BSR messages through an interface.

Use the **delete** form of this command to restore the default behavior.

Use the **show** form of this command to display BSR border configuration.

interfaces <interface> ipv6 pim dr-priority

Specifies the designated router (DR) priority.

Syntax

set interfaces *interface* **ipv6 pim dr-priority** *priority*

delete interfaces *interface* **ipv6 pim dr-priority**

show interfaces *interface* **ipv6 pim dr-priority**

Command Default

The designated router priority is 1.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ipv6 pim](#) on page 74.

priority

The designated router priority. The range is 0 to 4294967294. The default is 1.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {  
    ipv6 {  
        pim {  
            dr-priority priority  
        }  
    }  
}
```

Usage Guidelines

Use this command to specify the designated router priority. The router with the highest priority is elected as the DR by PIM.

Use the **set** form of this command to specify the designated router priority.

Use the **delete** form of this command to restore the designated router priority to its default priority.

Use the **show** form of this command to display the designated router priority.

interfaces <interface> ipv6 pim exclude-genid

Specifies that the generated ID (GenID) option is to be excluded from PIM Hello packets sent on an interface.

Syntax

set interfaces *interface* **ipv6 pim exclude-genid**

delete interfaces *interface* **ipv6 pim exclude-genid**

show interfaces *interface* **ipv6 pim**

Command Default

The GenID option is included in Hello packets.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ipv6 pim](#) on page 74.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ipv6 {
    pim {
      exclude-genid
    }
  }
}
```

Usage Guidelines

Use this command to exclude the GenID option from PIM Hello packets sent on an interface. This command is used to accommodate operations with older Cisco IOS versions.

Use the **set** form of this command to exclude the GenID option from Hello packets.

Use the **delete** form of this command to restore the default behavior for the GenID option in Hello packets.

Use the **show** form of this command to display the GenID exclusion configuration.

interfaces <interface> ipv6 pim hello-holdtime <holdtime>

Specifies the hello holdtime.

Syntax

set interfaces *interface* ipv6 pim hello-holdtime *holdtime*

delete interfaces *interface* ipv6 pim hello-holdtime

show interfaces *interface* ipv6 pim hello-holdtime

Command Default

The hello holdtime is 3.5 times the **hello-interval**, in seconds (typically 105 seconds).

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ipv6 pim](#) on page 74.

holdtime

The hello holdtime, in seconds. The range is 1 to 65535. The default is 3.5 * **hello-interval**.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ipv6 {
    pim {
      hello-holdtime holdtime
    }
  }
}
```

Usage Guidelines

Use this command to configure a hello holdtime, the amount of time the system waits for a PIM Hello message before dropping a neighbor. The holdtime cannot be less than the current **hello-interval**. When the **hello-interval** is updated, the **hello-holdtime** is reviewed. If the **hello-holdtime** either is not configured or is configured but is less than the current **hello-interval**, it is set to 3.5 times the **hello-interval**. Otherwise, the current holdtime remains unchanged.

Use the **set** form of this command to specify the hello holdtime.

Use the **delete** form of this command to restore the hello holdtime to its default holdtime.

Use the **show** form of this command to display the hello holdtime configuration.

interfaces <interface> ipv6 pim hello-interval <interval>

Specifies the hello interval.

Syntax

set interfaces *interface* ipv6 pim hello-interval *interval*

delete interfaces *interface* ipv6 pim hello-interval

show interfaces *interface* ipv6 pim hello-interval

Command Default

Hello messages are sent every 30 seconds.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ipv6 pim](#) on page 74.

interval

The hello interval, in seconds. The range is 1 to 65535. The default is 30.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
    ipv6 {
        pim {
            hello-interval interval
        }
    }
}
```

Usage Guidelines

Use this command to configure a hello interval, the interval at which PIM Hello messages are sent on an interface. When the **hello-interval** is updated, the **hello-holdtime** is reviewed. If the **hello-holdtime** either is not configured or is configured but is less than the current **hello-interval**, it is set to 3.5 times the **hello-interval**. Otherwise, the currently configured **hello-holdtime** remains unchanged.

Use the **set** form of this command to specify the hello interval.

Use the **delete** form of this command to restore the hello interval to its default interval.

Use the **show** form of this command to display the hello interval configuration.

interfaces <interface> ipv6 pim mode <mode>

Specifies the PIM mode on an interface.

Syntax

set interfaces *interface* **ipv6 pim mode** *mode*

delete interfaces *interface* **ipv6 pim mode**

show interfaces *interface* **ipv6 pim mode**

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ipv6 pim](#) on page 74.

mode

The PIM mode for an interface. The mode is as follows:

dense: Enable PIM dense mode.

dense-passive: Enable passive operation for PIM dense mode.

sparse: Enable PIM sparse mode.

sparse-passive: Enable passive operation for PIM sparse mode.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
    ipv6 {
        pim {
            mode [dense|dense-passive|sparse|sparse-passive]
        }
    }
}
```

Usage Guidelines

Use this command to specify the PIM mode on an interface. Use the **dense** or **sparse** keyword to enable PIM dense mode or PIM sparse mode on an interface. Use the **dense-passive** or **sparse-passive** keyword to stop PIM transactions on an interface, allowing only Internet Group Management Protocol (IGMP) to be active.

Use the **set** form of this command to specify the PIM mode for an interface.

Use the **delete** form of this command to disable PIM on an interface.

Use the **show** form of this command to display the PIM mode configuration.

interfaces <interface> ipv6 pim neighbor-filter <acl6>

Enables filtering of neighbors on an interface.

Syntax

set interfaces *interface* **ipv6 pim neighbor-filter** *acl6*

delete interfaces *interface* **ipv6 pim neighbor-filter** *acl6*

show interfaces *interface* **ipv6 pim neighbor-filter**

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ipv6 pim](#) on page 74.

acl6

An IPv6 access list name. An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ipv6 {
    pim {
      neighbor-filter acl6
    }
  }
}
```

Usage Guidelines

Use this command to enable filtering of neighbors on an interface based on an access list. PIM terminates its adjacency with existing neighbors filtered by the access list, and does not establish adjacency with potential neighbors filtered by the access list.

Use the **set** form of this command to enable filtering of neighbors on an interface based on the specified access list.

Use the **delete** form of this command to disable filtering of neighbors on an interfaces based on the specified access list.

Use the **show** form of this command to display the neighbor filter configuration.

interfaces <interface> ipv6 pim propagation-delay <delay>

Specifies the propagation delay for PIM on an interface.

Syntax

set interfaces *interface* **ipv6 pim propagation-delay** *delay*

delete interfaces *interface* **ipv6 pim propagation-delay**

show interfaces *interface* **ipv6 pim propagation-delay**

Command Default

The propagation delay is 1000 milliseconds.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ipv6 pim](#) on page 74.

delay

The propagation delay, in milliseconds. The range is 1000 to 5000.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {  
    ipv6 {  
        pim {  
            propagation-delay delay  
        }  
    }  
}
```

Usage Guidelines

Use this command to specify the expected message propagation delay on the link. It is used by upstream routers to determine how long to wait for a Join override message before pruning an interface.

Use the **set** form of this command to specify the propagation delay for PIM on an interface.

Use the **delete** form of this command to restore the default propagation delay for PIM on an interface.

Use the **show** form of this command to display the propagation delay configuration.

interfaces <interface> ipv6 pim state-refresh origination-interval <interval>

Specifies the PIM-Dense Mode (PIM-DM) State Refresh origination interval on an interface.

Syntax

set interfaces *interface* **ipv6 pim origination-interval** *interval*

delete interfaces *interface* **ipv6 pim origination-interval**

show interfaces *interface* **ipv6 pim origination-interval**

Command Default

The PIM-DM State-Refresh origination interval is 60 seconds.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ipv6 pim](#) on page 74.

interval

The PIM-DM State Refresh origination interval, in seconds. The range is 1 to 100. The default is 60.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ipv6 {
    pim {
      state-refresh {
        origination-interval interval
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the PIM-DM State Refresh origination interval on an interface. This interval is the amount of time between PIM-DM State Refresh control messages.

Use the **set** form of this command to specify the PIM-DM State Refresh origination interval on an interface.

Use the **delete** form of this command to restore the PIM-DM State Refresh origination interval to 60 seconds.

Use the **show** form of this command to display the configuration of a PIM-DM State Refresh interval.

interfaces <interface> ipv6 pim unicast-bsm

Enables the sending and receiving of unicast Bootstrap Messages (BSM) on an interface.

Syntax

set interfaces *interface* ipv6 pim unicast-bsm

delete interfaces *interface* ipv6 pim unicast-bsm

show interfaces *interface* ipv6 pim

Command Default

Unicast bootstrap messaging is disabled on an interface.

Parameters

interface

The type of interface. For a list of supported interfaces and detailed syntax, see [interfaces <interface> ipv6 pim](#) on page 74.

Modes

Configuration mode

Configuration Statement

```
interfaces interface {
  ipv6 {
    pim {
      unicast-bsm
    }
  }
}
```

Usage Guidelines

Use this command to enable the sending and receiving of unicast BSM on an interface. This command provides support for older versions of the Bootstrap Router (BSR) specification. This specification specifies the use of unicast BSM to refresh the state of new or restarting neighbors.

Use the **set** form of this command to enable support for unicast BSM on an interface.

Use the **delete** form of this command to disable support for unicast bootstrap messaging on an interface.

Use the **show** form of this command to display the configuration of unicast bootstrap messaging.

monitor protocol multicast pim

Sets debugging options for PIM.

Syntax

```
monitor protocol multicast pim [[ background { start | stop } ] ] { enable | disable } ipv6 [ events | mfc | mib | mtrace | nexthop
| nsm | packet [ in | out ] ] state | timer [ assert [ at ] ] bsr [ bst | crp ] | hello [ ht | nlt | tht ] | joinprune [ et | jt | kat | ot | ppt ] |
register [ rst ] ] ] ]
```

Command Default

PIM debugging is disabled.

Parameters

background

Performs debugging operations in the background.

start

Starts debugging in the background.

stop

Stops debugging in the background.

enable

Enables the specified debugging option.

disable

Disables the specified debugging option.

events

Enables debugging for PIM events.

mfc

Enables debugging for Multicast Forwarding Cache (MFC) updates.

mib

Enables debugging for Management Information Base (MIB) entries.

mtrace

Enables debugging for Multicast Traceroute (MTRACE) messages.

nexthop

Enables debugging for Reverse Path Forwarding (RPF) neighbor nexthop cache handling.

nsm

Enables debugging for Network Services Module (NSM) messages.

packet

Enables debugging for PIM packets.

in

Enables debugging for incoming PIM packets.

out

Enables debugging for outgoing PIM packets.

| | |
|------------------|--------------------------------------------------------------|
| state | Enables debugging for PIM states. |
| timer | Enables debugging for PIM timers. |
| assert | Enables debugging for PIM assert timers. |
| at | Enables debugging for PIM assert timer. |
| bsr | Enables debugging for PIM BSR timers. |
| bst | Enables debugging for PIM bootstrap timer. |
| crp | Enables debugging for PIM Candidate-RP timer. |
| hello | Enables debugging for various PIM timers. |
| ht | Enables debugging for PIM Hello timer. |
| nlt | Enables debugging for PIM Neighbor Liveliness timer. |
| tht | Enables debugging for PIM Triggered Hello timer. |
| joinprune | Enables debugging for various PIM JoinPrune timers. |
| et | Enables debugging for PIM JoinPrune Expiry timer. |
| jt | Enables debugging for PIM JoinPrune Upstream Join timer. |
| kat | Enables debugging for PIM JoinPrune Keepalive timer. |
| ot | Enables debugging for PIM JoinPrune Upstream Override timer. |
| ppt | Enables debugging for PIM JoinPrune Prune Pending timer. |
| register | Enables debugging for various PIM register timers. |
| rst | Enables debugging for PIM Register Stop timer. |

Modes

Operational mode

Usage Guidelines

Use this command to enable or disable debugging for PIM and to set PIM debugging options.

Examples

The following example shows how to start debugging for IPv6 PIM events.

```
vyatta@vyatta:~$monitor protocol multicast pim enable ipv6 event
```

protocols pim6 accept-register list <acl6>

Allows the Rendezvous Point (RP) to accept Register messages only from multicast sources identified in a given access list.

Syntax

set protocols pim6 accept-register list *acl6*

delete protocols pim6 accept-register list *acl6*

show protocols pim6 accept-register list

Command Default

The RP accepts Register messages from all multicast sources.

Parameters

acl6

An IPv6 access list name. An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    accept-register {
      list acl6
    }
  }
}
```

Usage Guidelines

Use this command to configure the RP router to filter multicast sources identified by the specified access list. The RP accepts Register messages sent only by the sources specified in the access list. By default, the RP accepts Register messages from all multicast sources.

Use the **set** form of this command to enable the RP to accept Register messages only from multicast sources identified in a given access list.

Use the **delete** form of this command to restore the default behavior of Register handling.

Use the **show** form of this command to display accept-register list configuration.

protocols pim6 anycast-rp <rp-address> anycast-rp-peer <rp-peer-address>

Specifies the address of an Rendezvous Point (RP) member in an Anycast-RP set.

Syntax

set protocols pim6 anycast-rp *rp-address* anycast-rp-peer *rp-peer-address*

delete protocols pim6 anycast-rp *rp-address* anycast-rp-peer *rp-peer-address*

show protocols pim6 anycast-rp *rp-address* anycast-rp-peer

Parameters

rp-address

The unicast IPv6 address of an Anycast-RP set.

rp-peer-address

The IPv6 address of an RP member of an Anycast-RP set.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    anycast-rp rp-address {
      anycast-rp-peer rp-peer-address
    }
  }
}
```

Usage Guidelines

Use this command to specify the IPv6 address of an RP member of an Anycast-RP set. Register messages are copied to and sent from this address.

Use the **set** form of this command to specify the IPv6 address of an RP member of an Anycast-RP set.

Use the **delete** form of this command to remove the IPv6 address of an RP member of an Anycast-RP set.

Use the **show** form of this command to display the RP member configuration.

protocols pim6 bsr-candidate <interface>

Sets the candidate bootstrap router (BSR) status by using the IPv6 address of the specified interface.

Syntax

set protocols pim6 bsr-candidate *interface* [**hash-mask** *mask*] [**priority** *priority*]

delete protocols pim6 bsr-candidate *interface* [**hash-mask**] [**priority**]

show protocols pim6 bsr-candidate *interface* [**hash-mask**] [**priority**]

Parameters

mask

The hash mask length for RP selection. The range is 0 to 32. The default is 10.

priority

The priority for the BSR candidate. The range is 0 to 255. The default is 64.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    bsr-candidate interface {
      hash-mask mask
      priority priority
    }
  }
}
```

Usage Guidelines

Use this command to set the candidate BSR status by using the IPv6 address of the specified interface.

Use the **set** form of this command to set the candidate BSR status by using the IPv6 address of the specified interface.

Use the **delete** form of this command to remove the candidate BSR status from the interface.

Use the **show** form of this command to display the candidate BSR configuration.

protocols pim6 ignore-rp-set-priority

Specifies that the RP-SET priority is to be ignored in Rendezvous Point (RP) selection.

Syntax

```
set protocols pim6 ignore-rp-set-priority
delete protocols pim6 ignore-rp-set-priority
show protocols pim6
```

Command Default

The RP-SET priority is used in RP selection.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    ignore-rp-set-priority
  }
}
```

Usage Guidelines

Use this command to specify that the RP-SET priority is to be ignored and that only the hash value is to be used in RP selection. This command provides interoperability with older Cisco IOS versions.

Use the **set** form of this command to specify that the RP-SET priority value is to be ignored and that only the hash value is to be used in RP selection.

Use the **delete** form of this command to restore the default RP selection mechanism by using the RP-SET priority.

Use the **show** form of this command to display the PIM configuration.

protocols pim6 join-prune-timer <timer>

Sets the PIM join/prune timer.

Syntax

set protocols pim6 join-prune-timer *timer*

delete protocols pim6 join-prune-timer

show protocols pim6 join-prune-timer

Command Default

The join/prune timer is 210 seconds.

Parameters

timer

The join/prune timer, in seconds. The range is 1 to 65535. The default is 210.

Modes

Configuration mode

Configuration Statement

```
protocols {  
  pim6 {  
    join-prune-timer timer  
  }  
}
```

Usage Guidelines

Use this command to specify the PIM join/prune timer.

Use the **set** form of this command to specify the PIM join/prune timer.

Use the **delete** form of this command to remove the PIM join/prune timer.

Use the **show** form of this command to display the PIM join/prune timer configuration.

protocols pim6 legacy-register-checksum [group-list <acl6>]

Specifies that the Register checksum should be calculated over the whole packet.

Syntax

```
set protocols pim6 legacy-register-checksum [ group-list acl6 ]
```

```
delete protocols pim6 legacy-register-checksum [ group-list ]
```

```
show protocols pim6 legacy-register-checksum [ group-list ]
```

Command Default

The Register checksum is calculated over only the packet header.

Parameters

acl6

An IPv6 access list name. An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    legacy-register-checksum {
      group-list acl6
    }
  }
}
```

Usage Guidelines

Use this command to specify that the Register checksum should be calculated over the whole packet rather than only over the packet header. This command is used to accommodate operations with older Cisco IOS versions.

Use the **set** form of this command to specify that the Register checksum should be calculated over the whole packet rather than only over the packet header.

Use the **delete** form of this command to restore the default operation.

Use the **show** form of this command to display the configuration of legacy register checksums.

protocols pim6 log

Enables PIM6 logs.

Syntax

```
set protocols pim6 log { all | events | mfc | mib | mtrace | nexthop | nsm | packet | state | timer }  
delete protocols pim6 log { all | events | mfc | mib | mtrace | nexthop | nsm | packet | state | timer }  
show protocols pim6 log { all | events | mfc | mib | mtrace | nexthop | nsm | packet | state | timer }
```

Command Default

None

Parameters

- all**
Enables all PIM6 logs.
- events**
Enables PIM6 debugging of general configuration and virtual routing.
- mfc**
Enables PIM6 debugging for MFC updates.
- mib**
Enables PIM6 debugging for MIB entries.
- mtrace**
Enables PIM6 debugging for MTRACE messages.
- nexthop**
Enables PIM6 debugging for nexthop cache handling for RPF neighbors .
- nsm**
Enables PIM6 debugging for PIM NSM.
- packet**
Enables PIM6 debugging for PIM packets.
- state**
Enables PIM6 debugging for PIM states.
- timer**
Enables PIM6 debugging for PIM timers.

Modes

Configuration mode

Configuration Statement

```
protocols {  
    pim6 {
```

```
log {  
    all  
    events  
    mfc  
    mib  
    msdp  
    mtrace  
    nexthop  
    nsm  
    packet  
    state  
    timer  
}  
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM)6 logs.

Use the **delete** form of this command to remove PIM6 logs.

Use the **show** form of this command to view PIM6 logs.

protocols pim6 log timer

Enables PIM6 debugging for PIM timers.

Syntax

```
set protocols pim6 log timer { all | assert | bsr | hello | joinprune | register }
delete protocols pim6 log timer { all | assert | bsr | hello | joinprune | register }
show protocols pim6 log timer { all | assert | bsr | hello | joinprune | register }
```

Command Default

None

Parameters

- all**
Enables PIM6 debugging for all PIM6 timers.
- assert**
Enables PIM6 debugging for all PIM assert timers.
- bsr**
Enables PIM6 debugging for all PIM BSR timers.
- hello**
Enables PIM6 debugging for various PIM timers.
- joinprune**
Enables PIM6 debugging for PIM join-prune timers.
- register**
Enables PIM6 debugging for various PIM register timers.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    log {
      timer {
        all
        assert
        bsr
        hello
        joinprune
        register
      }
    }
  }
}
```


Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM)6 timer logs.

Use the **delete** form of this command to remove PIM6 timer logs.

Use the **show** form of this command to view PIM6 timer logs.

protocols pim6 log packet

Enables PIM6 debugging of PIM packets.

Syntax

```
set protocols pim6 log packet { all | rcv | send }
delete protocols pim6 log packet { all | rcv | send }
show protocols pim6 log packet { all | rcv | send }
```

Command Default

None

Parameters

all
Enables all PIM6 packet logs.

rcv
Enables PIM6 debugging for all incoming PIM packets.

send
Enables PIM6 debugging for all outgoing PIM packets.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    log {
      packet {
        all
        rcv
        send
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM) 6 packet logs.

Use the **delete** form of this command to remove PIM6 packet logs.

Use the **show** form of this command to view PIM6 packet logs.

protocols pim6 log timer assert

Enables PIM6 debugging for PIM assert timers.

Syntax

```
set protocols pim6 log timer assert { all | at }
delete protocols pim6 log timer assert { all | at }
show protocols pim6 log timer assert { all | at }
```

Command Default

None

Parameters

all
Enables PIM6 debugging of all PIM assert timers.

at
Enables PIM6 debugging of PIM assert timers.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    log {
      timer {
        assert {
          all
          at
        }
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM)6 assert timer logs.

Use the **delete** form of this command to remove PIM6 assert timer logs.

Use the **show** form of this command to view PIM6 assert timer logs.

protocols pim6 log timer bsr

Enables PIM6 debugging for PIM BSR timer.

Syntax

```
set protocols pim6 log timer bsr { all | bst | crp }
delete protocols pim6 log timer bsr { all | bst | crp }
show protocols pim6 log timer bsr { all | bst | crp }
```

Command Default

None

Parameters

all
Enables PIM6 debugging of all PIM BSR timers.

bst
Enables PIM6 debugging of only bootstrap timers.

crp
Enables PIM6 debugging of only candidate-RP timers.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    log {
      timer {
        bsr {
          all
          bst
          crp
        }
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM)6 BSR timer logs.

Use the **delete** form of this command to remove PIM6 timer BSR timer logs.

Use the **show** form of this command to view PIM6 timer BSR timer logs.

protocols pim6 log timer hello

Enables debugging for PIM6 hello timers.

Syntax

```
set protocols pim6 log timer hello { all | ht | nlt | tht }
delete protocols pim6 log timer hello { all | ht | nlt | tht }
show protocols pim6 log timer hello { all | ht | nlt | tht }
```

Command Default

None

Parameters

all
Enables debugging of all PIM6 hello timers.

ht
Enables debugging of only PIM6 hello timers.

nlt
Enables debugging of only PIM6 neighbor liveliness timers.

tht
Enables debugging of only PIM6 triggered hello timers.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    log {
      timer {
        hello {
          all
          ht
          nlt
          tht
        }
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM6) timer hello logs.

Use the **delete** form of this command to remove PIM6 timer hello logs.

protocols pim6 log timer hello

Use the **show** form of this command to view PIM6 hello logs.

protocols pim6 log timer joinprune

Enables PIM6 debugging for PIM join-prune timers.

Syntax

```
set protocols pim6 log timer joinprune { all | et | jt | kat | ot | ppt }
show protocols pim6 log timer joinprune { all | et | jt | kat | ot | ppt }
delete protocols pim6 log timer joinprune { all | et | jt | kat | ot | ppt }
```

Command Default

None

Parameters

| | |
|------------|-----------------------------------------------------------|
| all | Enables debugging of all PIM join-prune timers. |
| et | Enables debugging of PIM join-prune expiry timers. |
| jt | Enables debugging of PIM join-prune upstream join timers. |
| kat | Enables debugging of PIM join-prune keep-alive timers. |
| ot | Enables debugging of PIM join-prune over-ride timers. |
| ppt | Enables debugging of PIM joinprune prune-pending timers. |

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    log {
      timer {
        joinprune {
          all
          et
          jt
          kat
          ot
          ppt
        }
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM)6 join-prune timer logs.

Use the **delete** form of this command to remove PIM6 join-prune timer logs.

Use the **show** form of this command to view PIM6 join-prune timer logs.

protocols pim6 log timer register

Enables PIM6 debugging for PIM register timers.

Syntax

```
set protocols pim6 log timer register { all | rst }
delete protocols pim6 log timer register { all | rst }
show protocols pim6 log timer register { all | rst }
```

Command Default

None

Parameters

all
Enables PIM6 debugging of all PIM register timers.

rst
Enables PIM6 debugging of only PIM register-stop timers.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    log {
      timer {
        register {
          all
          rst
        }
      }
    }
  }
}
```

Usage Guidelines

Use the **set** form of this command to enable Protocol Independent Multicast (PIM)6 register timer logs.

Use the **delete** form of this command to remove PIM6 register timer logs.

Use the **show** form of this command to view PIM6 register timer logs.

protocols pim6 register-kat <timer>

Specifies the Keepalive Timer (KAT) for (S,G) states at the Rendezvous Point (RP).

Syntax

set protocols pim6 register-kat *timer*

delete protocols pim6 register-kat

show protocols pim6 register-kat

Command Default

The KAT for (S,G) states is 210 seconds.

Parameters

timer

The KAT, in seconds. The range is 1 to 65535. The default is 210.

Modes

Configuration mode

Configuration Statement

```
protocols {  
  pim6 {  
    register-kat timer  
  }  
}
```

Usage Guidelines

Use this command to specify the KAT for (S,G) states at the RP to monitor Register messages.

Use the **set** form of this command to specify the KAT for (S,G) states at the RP to monitor Register messages.

Use the **delete** form of this command to restore the KAT to 210 seconds.

Use the **show** form of this command to display register KAT configuration.

protocols pim6 register-rate-limit <rate>

Specifies the rate at which Register messages are sent by this designated router (DR).

Syntax

set protocols pim6 register-rate-limit *rate*

delete protocols pim6 register-rate-limit

show protocols pim6 register-rate-limit

Command Default

There is no limit to the rate at which Register messages are sent by the DR.

Parameters

rate

The rate at which Register messages are sent by the DR, in packets per second. The range is 0 to 65535. The default is 0, meaning “no limit.”

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    register-rate-limit rate
  }
}
```

Usage Guidelines

Use this command to specify the rate of Register messages sent by this DR. This rate is for each (S,G) state. The rate is not system wide.

Use the **set** form of this command to specify the rate of Register messages sent by this DR.

Use the **delete** form of this command to restore the rate of Register messages sent by this DR to its default value.

Use the **show** form of this command to display Register rate limit configuration.

protocols pim6 register-rp-reachability

Enables Rendezvous Point (RP) reachability checking for PIM Registers at the designated router (DR).

Syntax

```
set protocols pim6 register-rp-reachability
delete protocols pim6 register-rp-reachability
show protocols pim6
```

Command Default

RP reachability is not checked.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    register-rp-reachability
  }
}
```

Usage Guidelines

Use this command to enable RP reachability checking for PIM Registers at the DR.

Use the **set** form of this command to enable RP reachability checking for PIM Registers at the DR.

Use the **delete** form of this command to restore no checking for reachability.

Use the **show** form of this command to display the configuration of Register RP reachability.

protocols pim6 register-source

Specifies the source of Register messages sent by this designated router (DR).

Syntax

```
set protocols pim6 register-source { address source | interface interface }
```

```
delete protocols pim6 register-source { address | interface }
```

```
show protocols pim6 register-source [ address | interface ]
```

Command Default

The IPv6 address of the Reverse Path Forwarding (RPF) interface that faces the source host.

Parameters

source

An IPv6 address to use as the source of Register messages.

interface

An interface to use as the source of Register messages. Note that it is not necessary for PIM to be enabled on this interface.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    register-source {
      [address source | interface interface]
    }
  }
}
```

Usage Guidelines

Use this command to specify the source of Register messages sent by this DR. The specified address must be reachable so that the Rendezvous Point (RP) router can send Register-Stop messages in response. The Register source address is usually the address of the loopback interface, though it can be another physical address. The specified address must be advertised by unicast routing protocols on the DR.

Use the **set** form of this command to specify the source of Register messages sent by this DR.

Use the **delete** form of this command to restore the default source of Register messages sent by the DR.

Use the **show** form of this command to display Register source configuration.

protocols pim6 register-suppression-timer <timer>

Specifies the register-suppression time.

Syntax

```
set protocols pim6 register-suppression-timer timer  
delete protocols pim6 register-suppression-timer  
show protocols pim6 register-suppression-timer
```

Command Default

The register-suppression time is 60 seconds.

Parameters

timer

The register-suppression time, in seconds. The range is 1 to 65535. The default is 60.

Modes

Configuration mode

Configuration Statement

```
protocols {  
  pim6 {  
    register-suppression-timer timer  
  }  
}
```

Usage Guidelines

Use this command to specify the register-suppression time. On a designated router (DR), this configuration modifies the register-suppression time. On a Rendezvous Point (RP) router, this configuration modifies the RPkeepalive-period if [protocols pim6 register-kat <timer>](#) on page 106 is not used.

Use the **set** form of this command to specify the register-suppression time.

Use the **delete** form of this command to restore the register-suppression time to 60 seconds.

Use the **show** form of this command to display the configuration of the register-suppression time.

protocols pim6 rp-address <rp-addr>

Specifies a static rendezvous point (RP) address for multicast groups.

Syntax

```
set protocols pim6 rp-address rp-addr [ list acl6 | override ]
```

```
delete protocols pim6 rp-address rp-addr [ list | override ]
```

```
show protocols pim6 rp-address rp-addr [ list | override ]
```

Parameters

rp-addr

The unicast IPv6 address of the RP set.

acl6

An IPv6 access list name. An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

override

Specifies that static RP addresses take precedence over dynamically learned RP addresses.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    rp-address rp-addr {
      list acl6
      override
    }
  }
}
```

Usage Guidelines

The PIM implementation supports multiple statically configured rendezvous points (RPs). It also supports the use of both statically configured RPs and those selected through the bootstrap router (BSR) mechanism simultaneously. Note the following:

- If multiple static RP addresses are available for a group range, then the one with the highest IP address is chosen.
- RP addresses configured for a multicast group through the BSR mechanism take precedence over those configured statically unless the **override** keyword is used. In those cases, a statically configured RP address takes precedence.
- Configuring multiple static RPs with the same RP address is not allowed.
- One static RP address can be configured for multiple group ranges by using access lists. The static RP address can either be configured for the whole multicast group range (that is, FF00::/8) or for specific group ranges if an access list is specified. When an access list is specified, the static RP address is configured for all the group ranges represented by Permit filters in the access list.
- Only Permit filters in access lists are considered as valid group ranges. The default Permit filter ::/0 is converted to the default multicast filter FF00::/8.

- After configuration, the RP address is inserted into a static RP group tree based on the configured group ranges. For each group range, multiple static RPs are maintained in a list. This list is sorted in descending order of IP addresses. When selecting static RPs for a group range, the first element of the list (the statically configured RP with the highest IP address) is selected.
- When an RP address is deleted, the static RP is removed from all the existing group ranges and RPs are recomputed for existing Tree Information Base (TIB) states if required.

Use the **set** form of this command to specify a static RP address for multicast groups.

Use the **delete** form of this command to remove the configuration of static RP addresses.

Use the **show** form of this command to display the configuration of static RP addresses.

protocols pim6 rp-candidate <interface>

Specifies that the router is a candidate Rendezvous Point (RP).

Syntax

set protocols pim6 rp-candidate *interface* [**group-list** *acl6* | **interval** *interval* | **priority** *priority*]

delete protocols pim6 rp-candidate *interface* [**group-list** | **interval** | **priority**]

show protocols pim6 rp-candidate *interface* [**group-list** | **interval** | **priority**]

Parameters

interface

The interface to set with candidate RP status.

acl6

An IPv6 access list name. An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

interval

The candidate RP advertisement interval, in seconds. The range is 1 to 16383. The default is 60.

priority

The candidate RP priority. The range is 0 to 255. The default is 192.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    rp-candidate interface {
      group-list acl6
      interval interval
      priority priority
    }
  }
}
```

Usage Guidelines

Use this command to specify that the router is a candidate RP by using the IP address of the specified interface.

Use the **set** form of this command to specify that this router is a candidate RP.

Use the **delete** form of this command to remove the router as a candidate RP.

Use the **show** form of this command to display the candidate RP configuration.

protocols pim6 rp-embedded

Enables the embedded-Rendezvous Point (RP) feature.

Syntax

```
set protocols pim6 rp-embedded
delete protocols pim6 rp-embedded
show protocols pim6 embedded
```

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    rp-embedded
  }
}
```

Usage Guidelines

Use this command to enable the embedded-RP feature.

Use the **set** form of this command to enable the RP-embedded feature.

Use the **delete** form of this command to disable the RP-embedded feature.

Use the **show** form of this command to display the RP-embedded configuration.

protocols pim6 spt-threshold

Enables the last-hop PIM router to switch to shortest-path tree (SPT).

Syntax

```
set protocols pim6 spt-threshold [ infinity ] [ group-list acl6 ]
delete protocols pim6 spt-threshold [ infinity ] [ group-list ]
show protocols pim6 spt-threshold [ infinity ] [ group-list ]
```

Parameters

infinity

Sets the spt threshold to infinity, which disables the ability of the last-hop PIM router to switch to SPT.

acl6

An IPv6 access list name. An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    spt-threshold
      infinity
      group-list acl6
  }
}
```

Usage Guidelines

Use this command to enable the last-hop PIM router to switch to SPT. To set the SPT threshold to infinity and disable the ability of the last-hop PIM router to switch to SPT, use the **infinity** option with this command.

Use the **set** form of this command to enable the last-hop PIM router to switch to SPT.

Use the **delete** form of this command to remove SPT threshold configuration. To remove the **infinity** option with this command, use the **delete** form of this command with this option, which enables the ability of the last-hop PIM router to switch to SPT.

Use the **show** form of this command to display SPT threshold configuration.

protocols pim6 ssm default

Enables Source Specific Multicast (SSM) and uses a default range of IP multicast addresses.

Syntax

```
set protocols pim6 ssm default
delete protocols pim6 ssm default
show protocols pim6 ssm default
```

Modes

Configuration mode

Configuration Statement

```
protocols {
  pim6 {
    ssm {
      default
    }
  }
}
```

Usage Guidelines

Use this command to configure SSM and use the default range of IP multicast addresses (that is, FF3x::/32). Use [protocols pim6 ssm range <acl6>](#) on page 117 to define the SSM range to be other than the default. When an SSM range of multicast addresses is defined, the no (*,G) or (S,G,rpt) state is initiated for groups in the SSM range. Messages corresponding to these states are neither accepted nor originated in the SSM range.

Use the **set** form of this command to enable SSM and use a default range of IP multicast addresses.

Use the **delete** form of this command to disable SSM.

Use the **show** form of this command to display SSM default configuration.

protocols pim6 ssm range <acl6>

Enables Source Specific Multicast (SSM) and defines a range of IPv6 multicast addresses based on an access list.

Syntax

```
set protocols pim6 ssm range acl6
```

```
delete protocols pim6 ssm range
```

```
show protocols pim6 ssm range
```

Parameters

acl6

An IPv6 access list name. An access control list is a type of routing policy; see *Brocade Vyatta Network OS Routing Policies Configuration Guide* for information on creating them.

Modes

Configuration mode

Configuration Statement

```
protocols {  
  pim6 {  
    ssm {  
      range acl6  
    }  
  }  
}
```

Usage Guidelines

Use this command to enable SSM and define a range of IPv6 multicast addresses based on an access list.

Use the **set** form of this command to enable SSM and define a range of IPv6 multicast addresses based on an access list.

Use the **delete** form of this command to disable SSM.

Use the **show** form of this command to display SSM range configuration.

reset ipv6 mroute

Deletes multicast route table entries and multicast routes at the PIM protocol level.

Syntax

```
reset ipv6 mroute [ group group [ source source [ pim { dense-mode | sparse-mode } ] ] | pim { dense-mode | sparse-mode } ]
```

Parameters

group

A multicast group to delete. The format is an IPv6 multicast address.

source

A multicast source to delete. The format is an IPv6 host address.

dense-mode

Deletes the multicast route table for PIM dense-mode.

sparse-mode

Deletes the multicast route table for PIM sparse-mode.

Modes

Operational mode

Usage Guidelines

Use this command to delete multicast route table entries and multicast routes at the PIM protocol level. Used with no options, the command deletes all multicast route table entries and multicast routes. Used with options, the command deletes a subset of the multicast route table entries and multicast routes.

Examples

The following example shows how to delete all multicast route table entries and multicast routes at the PIM protocol level.

```
vyatta@vyatta:~$reset ipv6 mroute
```

reset ipv6 pim sparse-mode bsr rp-set

Deletes all rendezvous point (RP) sets learned from the PIM Bootstrap Router (BSR).

Syntax

```
reset ipv6 pim sparse-mode bsr rp-set
```

Modes

Operational mode

Usage Guidelines

Use this command to delete all RP sets learned through the PIM BSR.

Examples

The following example shows how to delete all RP sets learned through the PIM BSR.

```
vyatta@vyatta:~$reset ipv6 pim sparse-mode bsr rp-set
```

```
show ipv6 pim bsr-router
```

show ipv6 pim bsr-router

Displays the bootstrap router (BSR) PIM Version 2 (PIMv2) address.

Syntax

```
show ipv6 pim bsr-router
```

Modes

Operational mode

Usage Guidelines

Displays the BSR PIMv2 address.

Examples

The following example shows how to display the BSR PIMv2 address.

```
vyatta@vyatta:~$show ipv6 pim bsr-router
PIMv2 Bootstrap information
  BSR address: 10.10.11.35 (?)
  Uptime:      00:00:38, BSR Priority: 0, Hash mask length: 10
  Expires:     00:01:32
  Role: Non-candidate BSR
  State: Accept Preferred
```


show ipv6 pim interface

Displays PIM interface information.

Syntax

```
show ipv6 pim interface [ detail ]
```

Parameters

detail

Displays detailed information about the PIM interface.

Modes

Operational mode

Usage Guidelines

Use this command to display PIM interface information.

show ipv6 pim local-members

show ipv6 pim local-members

Displays local membership information for a PIM interface.

Syntax

```
show ipv6 pim local-members [ interface ]
```

Parameters

interface

An interface for which to display local membership information.

Modes

Operational mode

Usage Guidelines

Use this command to display local membership information for a PIM interface.

show ipv6 pim mroute

Displays the IPv6 PIM multicast routing table.

Syntax

```
show ipv6 pim mroute [ [ group group [ [ source source ] detail ] | detail ] ] [ rfc [ group group [ [ source source ] [ detail ] ] | detail ] | source source [ detail ] | detail | summary ]
```

Parameters

group

The multicast group entries to display. The format is an IPv6 multicast address.

source

The multicast source entries to display. The format is an IPv6 host address.

rfc

Displays information for a PIM multicast routing table (RFC style).

detail

Displays detailed information for a PIM multicast routing table.

summary

Displays summarized information for a PIM multicast routing table.

Modes

Operational mode

Usage Guidelines

Use this command to display the IPv6 PIM multicast routing table. Used with no options, the command displays all entries for an IPv6 PIM multicast routing table. Used with the **group** option, **source** option, or both options, the command displays a subset of entries for the IPv6 PIM multicast routing table. Used with the **rfc** option, the command displays the IPv6 PIM multicast routing table entries in an RFC style.

show ipv6 pim neighbor

show ipv6 pim neighbor

Displays PIM neighbor information.

Syntax

```
show ipv6 pim neighbor [ interface [ addr [ detail ] | detail ] | detail ]
```

Parameters

interface

An interface for which to display PIM neighbor information.

addr

The IPv6 address of a neighbor interface.

detail

Displays detailed PIM neighbor information.

Modes

Operational mode

Usage Guidelines

Use this command to display PIM neighbor information. Used with no options, the command displays all PIM neighbor information. Used with the **interface** option, **addr** option, or both options, the command displays information for a subset of PIM neighbors.

show ipv6 pim nexthop

Displays next-hop information used by PIM.

Syntax

```
show ipv6 pim nexthop
```

Modes

Operational mode

Usage Guidelines

Displays next-hop information used by PIM.

```
show ipv6 pim rp-hash <group>
```

show ipv6 pim rp-hash <group>

Displays the rendezvous point (RP) to select based on the group specified.

Syntax

```
show ipv6 pim rp-hash group
```

Parameters

group

A multicast group for which to determine the RP. The format is an IPv6 multicast address.

Modes

Operational mode

Usage Guidelines

Displays the RP to select based on the group specified.

show ipv6 pim rp-mapping

Displays the group-to-Rendezvous Point (RP) mappings and the RP set.

Syntax

```
show ipv6 pim rp-mapping
```

Modes

Operational mode

Usage Guidelines

Displays the group-to-RP mappings and the RP set.

show monitoring protocols multicast pim6

Displays IPv6 multicast debugging information.

Syntax

show monitoring protocols multicast pim6

Modes

Operational mode

Usage Guidelines

Use this command to display IPv6 multicast debugging information.

Examples

The following example shows how to display IPv6 multicast debugging information.

```
vyatta@vyatta:~$show monitoring protocols multicast pim6
Debugging status:
PIMv6 event debugging is on
PIMv6 MFC debugging is on
PIMv6 state debugging is on
PIMv6 packet debugging is on
PIMv6 Hello HT timer debugging is on
PIMv6 Hello NLT timer debugging is on
PIMv6 Hello THT timer debugging is on
PIMv6 Join/Prune JT timer debugging is on
PIMv6 Join/Prune ET timer debugging is on
PIMv6 Join/Prune PPT timer debugging is on
PIMv6 Join/Prune KAT timer debugging is on
PIMv6 Join/Prune OT timer debugging is on
PIMv6 Assert AT timer debugging is on
PIMv6 Register RST timer debugging is on
PIMv6 Bootstrap BST timer debugging is on
PIMv6 Bootstrap CRP timer debugging is on
PIMv6 mib debugging is on
PIMv6 nexthop debugging is on
PIMv6 mtrace debugging is on
PIMv6 NSM debugging is on
```


Supported Interface Types

The following table shows the syntax and parameters of supported interface types. Depending on the command, some of these types may not apply.

| Interface Type | Syntax | Parameters |
|----------------|------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bridge | bridge <i>brx</i> | <i>brx</i> : The name of a bridge group. The name ranges from br0 through br999. |
| Data plane | dataplane <i>interface-name</i> | <p><i>interface-name</i>: The name of a data plane interface. Following are the supported formats of the interface name:</p> <ul style="list-style-type: none"> • dpxpyz—The name of a data plane interface, where <ul style="list-style-type: none"> — dpx specifies the data plane identifier (ID). Currently, only dp0 is supported. — py specifies a physical or virtual PCI slot index (for example, p129). — pz specifies a port index (for example, p1). For example, dp0p1p2, dp0p160p1, and dp0p192p1. • dpxemy —The name of a data plane interface on a LAN-on-motherboard (LOM) device that does not have a PCI slot, where emy specifies an embedded network interface number (typically, a small number). For example, dp0em3. • dpxsy —The name of a data plane interface on a device that is installed on a virtual PCI slot, where xsy specifies an embedded network interface number (typically, a small number). For example, dp0s2. • dpxPnpyz —The name of a data plane interface on a device that is installed on a secondary PCI bus, where Pn specifies the bus number. You can use this format to name data plane interfaces on large physical devices with multiple PCI buses. For these devices, it is possible to have network interface cards installed on different buses with these cards having the same slot ID. The value of <i>n</i> must be an integer greater than 0. For example, dp0P1p162p1 and dp0P2p162p1. |
| Data plane vif | dataplane <i>interface-name</i> vif <i>vif-id</i> [vlan <i>vlan-id</i>] | <p><i>interface-name</i>: Refer to the preceding description.</p> <p><i>vif-id</i>: A virtual interface ID. The ID ranges from 1 through 4094.</p> <p><i>vlan-id</i>: The VLAN ID of a virtual interface. The ID ranges from 1 through 4094.</p> |
| Loopback | loopback <i>lo</i> or loopback <i>lon</i> | <i>n</i> : The name of a loopback interface, where <i>n</i> ranges from 1 through 99999. |
| OpenVPN | openvpn <i>vtunx</i> | <i>vtunx</i> : The identifier of an OpenVPN interface. The identifier ranges from vtun0 through vtunx, where <i>x</i> is a nonnegative integer. |
| Tunnel | tunnel <i>tunx</i> or tunnel <i>tunx</i> parameters | <i>tunx</i> : The identifier of a tunnel interface you are defining. The identifier ranges from tun0 through tunx, where <i>x</i> is a nonnegative integer. |
| Virtual tunnel | vti <i>vtix</i> | <i>vtix</i> : The identifier of a virtual tunnel interface you are defining. The identifier ranges from vti0 through vtix, where <i>x</i> is a nonnegative integer. |

| Interface Type | Syntax | Parameters |
|----------------|--------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | | <p>Note: This interface does not support IPv6.</p> |
| VRRP | <p><i>parent-interface</i> vrrp vrrp-group <i>group</i></p> | <p><i>parent-interface</i>: The type and identifier of a parent interface; for example, data plane dp0p1p2 or bridge br999.</p> <p><i>group</i>: A VRRP group identifier.</p> <p>The name of a VRRP interface is not specified. The system internally constructs the interface name from the parent interface identifier plus the VRRP group number; for example, dp0p1p2v99. Note that VRRP interfaces support the same feature set as does the parent interface.</p> |

List of Acronyms

| Acronym | Description |
|---------|-----------------------------------------------|
| ACL | access control list |
| ADSL | Asymmetric Digital Subscriber Line |
| AH | Authentication Header |
| AMI | Amazon Machine Image |
| API | Application Programming Interface |
| AS | autonomous system |
| ARP | Address Resolution Protocol |
| AWS | Amazon Web Services |
| BGP | Border Gateway Protocol |
| BIOS | Basic Input Output System |
| BPDU | Bridge Protocol Data Unit |
| CA | certificate authority |
| CCMP | AES in counter mode with CBC-MAC |
| CHAP | Challenge Handshake Authentication Protocol |
| CLI | command-line interface |
| DDNS | dynamic DNS |
| DHCP | Dynamic Host Configuration Protocol |
| DHCPv6 | Dynamic Host Configuration Protocol version 6 |
| DLCI | data-link connection identifier |
| DMI | desktop management interface |
| DMVPN | dynamic multipoint VPN |
| DMZ | demilitarized zone |
| DN | distinguished name |
| DNS | Domain Name System |
| DSCP | Differentiated Services Code Point |
| DSL | Digital Subscriber Line |
| eBGP | external BGP |
| EBS | Amazon Elastic Block Storage |
| EC2 | Amazon Elastic Compute Cloud |
| EGP | Exterior Gateway Protocol |
| ECMP | equal-cost multipath |
| ESP | Encapsulating Security Payload |
| FIB | Forwarding Information Base |
| FTP | File Transfer Protocol |
| GRE | Generic Routing Encapsulation |
| HDLC | High-Level Data Link Control |
| I/O | Input/Output |
| ICMP | Internet Control Message Protocol |

| Acronym | Description |
|---------|-----------------------------------------------------------|
| IDS | Intrusion Detection System |
| IEEE | Institute of Electrical and Electronics Engineers |
| IGMP | Internet Group Management Protocol |
| IGP | Interior Gateway Protocol |
| IPS | Intrusion Protection System |
| IKE | Internet Key Exchange |
| IP | Internet Protocol |
| IPOA | IP over ATM |
| IPsec | IP Security |
| IPv4 | IP Version 4 |
| IPv6 | IP Version 6 |
| ISAKMP | Internet Security Association and Key Management Protocol |
| ISM | Internet Standard Multicast |
| ISP | Internet Service Provider |
| KVM | Kernel-Based Virtual Machine |
| L2TP | Layer 2 Tunneling Protocol |
| LACP | Link Aggregation Control Protocol |
| LAN | local area network |
| LDAP | Lightweight Directory Access Protocol |
| LLDP | Link Layer Discovery Protocol |
| MAC | medium access control |
| mGRE | multipoint GRE |
| MIB | Management Information Base |
| MLD | Multicast Listener Discovery |
| MLPPP | multilink PPP |
| MRRU | maximum received reconstructed unit |
| MTU | maximum transmission unit |
| NAT | Network Address Translation |
| NBMA | Non-Broadcast Multi-Access |
| ND | Neighbor Discovery |
| NHRP | Next Hop Resolution Protocol |
| NIC | network interface card |
| NTP | Network Time Protocol |
| OSPF | Open Shortest Path First |
| OSPFv2 | OSPF Version 2 |
| OSPFv3 | OSPF Version 3 |
| PAM | Pluggable Authentication Module |
| PAP | Password Authentication Protocol |
| PAT | Port Address Translation |
| PCI | peripheral component interconnect |
| PIM | Protocol Independent Multicast |
| PIM-DM | PIM Dense Mode |

| Acronym | Description |
|---------|-------------------------------------------------------|
| PIM-SM | PIM Sparse Mode |
| PKI | Public Key Infrastructure |
| PPP | Point-to-Point Protocol |
| PPPoA | PPP over ATM |
| PPPoE | PPP over Ethernet |
| PPTP | Point-to-Point Tunneling Protocol |
| PTMU | Path Maximum Transfer Unit |
| PVC | permanent virtual circuit |
| QoS | quality of service |
| RADIUS | Remote Authentication Dial-In User Service |
| RHEL | Red Hat Enterprise Linux |
| RIB | Routing Information Base |
| RIP | Routing Information Protocol |
| RIPng | RIP next generation |
| RP | Rendezvous Point |
| RPF | Reverse Path Forwarding |
| RSA | Rivest, Shamir, and Adleman |
| Rx | receive |
| S3 | Amazon Simple Storage Service |
| SLAAC | Stateless Address Auto-Configuration |
| SNMP | Simple Network Management Protocol |
| SMTP | Simple Mail Transfer Protocol |
| SONET | Synchronous Optical Network |
| SPT | Shortest Path Tree |
| SSH | Secure Shell |
| SSID | Service Set Identifier |
| SSM | Source-Specific Multicast |
| STP | Spanning Tree Protocol |
| TACACS+ | Terminal Access Controller Access Control System Plus |
| TBF | Token Bucket Filter |
| TCP | Transmission Control Protocol |
| TKIP | Temporal Key Integrity Protocol |
| ToS | Type of Service |
| TSS | TCP Maximum Segment Size |
| Tx | transmit |
| UDP | User Datagram Protocol |
| VHD | virtual hard disk |
| vif | virtual interface |
| VLAN | virtual LAN |
| VPC | Amazon virtual private cloud |
| VPN | virtual private network |
| VRRP | Virtual Router Redundancy Protocol |

| Acronym | Description |
|---------|------------------------|
| WAN | wide area network |
| WAP | wireless access point |
| WPA | Wired Protected Access |