

Brocade 5600 vRouter Remote Access IPsec VPN Configuration Guide

Supporting Brocade 5600 vRouter 4.2R1

© 2016, Brocade Communications Systems, Inc. All Rights Reserved.

Brocade, Brocade Assurance, the B-wing symbol, ClearLink, DCX, Fabric OS, HyperEdge, ICX, MLX, MyBrocade, OpenScript, VCS, VDX, Vplane, and Vyatta are registered trademarks, and Fabric Vision is a trademark of Brocade Communications Systems, Inc., in the United States and/or in other countries. Other brands, products, or service names mentioned may be trademarks of others.

Notice: This document is for informational purposes only and does not set forth any warranty, expressed or implied, concerning any equipment, equipment feature, or service offered or to be offered by Brocade. Brocade reserves the right to make changes to this document at any time, without notice, and assumes no responsibility for its use. This informational document describes features that may not be currently available. Contact a Brocade sales office for information on feature and product availability. Export of technical data contained in this document may require an export license from the United States government.

The authors and Brocade Communications Systems, Inc. assume no liability or responsibility to any person or entity with respect to the accuracy of this document or any loss, cost, liability, or damages arising from the information contained herein or the computer programs that accompany it.

The product described by this document may contain open source software covered by the GNU General Public License or other open source license agreements. To find out which open source software is included in Brocade products, view the licensing terms applicable to the open source software, and obtain a copy of the programming source code, please visit <http://www.brocade.com/support/oscd>.

Contents

Preface	5
Document conventions.....	5
Text formatting conventions.....	5
Command syntax conventions.....	5
Notes, cautions, and warnings.....	6
Brocade resources.....	6
Contacting Brocade Technical Support.....	6
Brocade customers.....	6
Brocade OEM customers.....	7
Document feedback.....	7
About This Guide	9
Remote Access VPN Overview	11
Remote access in the network.....	11
RA VPN using L2TP/IPsec with pre-shared key.....	12
RA VPN using L2TP/IPsec with X.509 certificates.....	13
Planning considerations.....	17
Remote access using OpenVPN.....	17
RA VPN with zone-based firewall.....	17
Remote Access VPN Configuration	19
RA VPN configuration overview.....	19
L2TP/IPsec with pre-shared key.....	19
Configuring the L2TP/IPsec VPN client on a Windows XP SP2 system.....	22
Connecting to the VPN server.....	22
L2TP/IPsec with x.509 certificates.....	22
Split tunneling on a windows client.....	26
Monitoring Remote Access VPN	27
Showing interface information.....	27
Viewing interface information.....	27
Showing remote access VPN information.....	27
Viewing remote access VPN information.....	27
Remote Access VPN Commands	29
reset vpn remote-access all.....	30
reset vpn remote-access interface <interface>.....	31
reset vpn remote-access user <username>.....	32
security vpn l2tp.....	33
security vpn l2tp remote-access authentication mode <mode>.....	34
security vpn l2tp remote-access authentication local-users username <username>.....	36
security vpn l2tp remote-access authentication radius-server <ipv4> key <key>.....	38
security vpn l2tp remote-access client-ip-pool start <ipv4>.....	40
security vpn l2tp remote-access client-ip-pool stop <ipv4>.....	41
security vpn l2tp remote-access dhcp-interface <interface>.....	42
security vpn l2tp remote-access dns-servers server-1 <ipv4>.....	43
security vpn l2tp remote-access dns-servers server-2 <ipv4>.....	44
security vpn l2tp remote-access ipsec-settings authentication mode <mode>.....	45

security vpn l2tp remote-access ipsec-settings authentication pre-shared-secret <secret>.....	47
security vpn l2tp remote-access ipsec-settings authentication x509 ca-cert-file <file-name>.....	48
security vpn l2tp remote-access ipsec-settings authentication x509 crl-file <file-name>.....	49
security vpn l2tp remote-access ipsec-settings authentication x509 server-cert-file <file-name>.....	50
security vpn l2tp remote-access ipsec-settings authentication x509 server-key-file <file-name>.....	51
security vpn l2tp remote-access ipsec-settings authentication x509 server-key-password <password>.....	52
security vpn l2tp remote-access ipsec-settings ike-lifetime <lifetime>.....	53
security vpn l2tp remote-access mtu <mtu>.....	54
security vpn l2tp remote-access outside-address <ipv4>.....	55
security vpn l2tp remote-access outside-nexthop <ipv4>.....	56
security vpn l2tp remote-access server-ip-pool start <ipv4>.....	57
security vpn l2tp remote-access server-ip-pool stop <ipv4>.....	59
security vpn l2tp remote-access wins-servers server-1 <ipv4>.....	61
security vpn l2tp remote-access wins-servers server-2 <ipv4>.....	62
show vpn remote-access.....	63
List of Acronyms.....	65

Preface

- Document conventions..... 5
- Brocade resources..... 6
- Contacting Brocade Technical Support..... 6
- Document feedback..... 7

Document conventions

The document conventions describe text formatting conventions, command syntax conventions, and important notice formats used in Brocade technical documentation.

Text formatting conventions

Text formatting conventions such as boldface, italic, or Courier font may be used in the flow of the text to highlight specific words or phrases.

Format	Description
bold text	Identifies command names Identifies keywords and operands Identifies the names of user-manipulated GUI elements
<i>italic text</i>	Identifies text to enter at the GUI Identifies emphasis Identifies variables
Courier font	Identifies document titles Identifies CLI output Identifies command syntax examples

Command syntax conventions

Bold and italic text identify command syntax components. Delimiters and operators define groupings of parameters and their logical relationships.

Convention	Description
bold text	Identifies command names, keywords, and command options.
<i>italic text</i>	Identifies a variable.
value	In Fibre Channel products, a fixed value provided as input to a command option is printed in plain text, for example, --show WWN.
[]	Syntax components displayed within square brackets are optional.
{ x y z }	Default responses to system prompts are enclosed in square brackets. A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
x y	In Fibre Channel products, square brackets may be used instead for this purpose. A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, for example, passwords, are enclosed in angle brackets.

Convention	Description
...	Repeat the previous element, for example, <i>member{member...}</i> .
\	Indicates a "soft" line break in command examples. If a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

Notes, cautions, and warnings

Notes, cautions, and warning statements may be used in this document. They are listed in the order of increasing severity of potential hazards.

NOTE

A Note provides a tip, guidance, or advice, emphasizes important information, or provides a reference to related information.

ATTENTION

An Attention statement indicates a stronger note, for example, to alert you when traffic might be interrupted or the device might reboot.



CAUTION

A Caution statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.



DANGER

A Danger statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.

Brocade resources

Visit the Brocade website to locate related documentation for your product and additional Brocade resources.

You can download additional publications supporting your product at www.brocade.com. Select the Brocade Products tab to locate your product, then click the Brocade product name or image to open the individual product page. The user manuals are available in the resources module at the bottom of the page under the Documentation category.

To get up-to-the-minute information on Brocade products and resources, go to MyBrocade. You can register at no cost to obtain a user ID and password.

Release notes are available on MyBrocade under Product Downloads.

White papers, online demonstrations, and data sheets are available through the Brocade website.

Contacting Brocade Technical Support

As a Brocade customer, you can contact Brocade Technical Support 24x7 online, by telephone, or by e-mail. Brocade OEM customers contact their OEM/Solutions provider.

Brocade customers

For product support information and the latest information on contacting the Technical Assistance Center, go to <http://www.brocade.com/services-support/index.html>.

If you have purchased Brocade product support directly from Brocade, use one of the following methods to contact the Brocade Technical Assistance Center 24x7.

Online	Telephone	E-mail
Preferred method of contact for non-urgent issues: <ul style="list-style-type: none"> • My Cases through MyBrocade • Software downloads and licensing tools • Knowledge Base 	Required for Sev 1-Critical and Sev 2-High issues: <ul style="list-style-type: none"> • Continental US: 1-800-752-8061 • Europe, Middle East, Africa, and Asia Pacific: +800-AT FIBREE (+800 28 34 27 33) • For areas unable to access toll free number: +1-408-333-6061 • Toll-free numbers are available in many countries. 	support@brocade.com Please include: <ul style="list-style-type: none"> • Problem summary • Serial number • Installation details • Environment description

Brocade OEM customers

If you have purchased Brocade product support from a Brocade OEM/Solution Provider, contact your OEM/Solution Provider for all of your product support needs.

- OEM/Solution Providers are trained and certified by Brocade to support Brocade® products.
- Brocade provides backline support for issues that cannot be resolved by the OEM/Solution Provider.
- Brocade Supplemental Support augments your existing OEM support contract, providing direct access to Brocade expertise. For more information, contact Brocade or your OEM.
- For questions regarding service levels and response times, contact your OEM/Solution Provider.

Document feedback

To send feedback and report errors in the documentation you can use the feedback form posted with the document or you can e-mail the documentation team.

Quality is our first concern at Brocade and we have made every effort to ensure the accuracy and completeness of this document. However, if you find an error or an omission, or you think that a topic needs further development, we want to hear from you. You can provide feedback in two ways:

- Through the online feedback form in the HTML documents posted on www.brocade.com.
- By sending your feedback to documentation@brocade.com.

Provide the publication title, part number, and as much detail as possible, including the topic heading and page number if applicable, as well as your suggestions for improvement.

About This Guide

This guide describes how to configure Remote Access VPN on the Brocade 5600 vRouter (referred to as a virtual router, vRouter, or router in the guide).


Remote Access VPN Overview

- Remote access in the network.....11
- RA VPN using L2TP/IPsec with pre-shared key.....12
- RA VPN using L2TP/IPsec with X.509 certificates.....13
- Planning considerations.....17
- Remote access using OpenVPN.....17
- RA VPN with zone-based firewall.....17

Remote access in the network


The Brocade vRouter currently supports two main VPN mechanisms: site-to-site IPsec VPN, and Remote Access VPN (RA VPN). A site-to-site IPsec VPN connection allows two or more remote private networks to be “merged” into a single network as shown in the following figure.

FIGURE 1 Site-to-site IPsec VPN

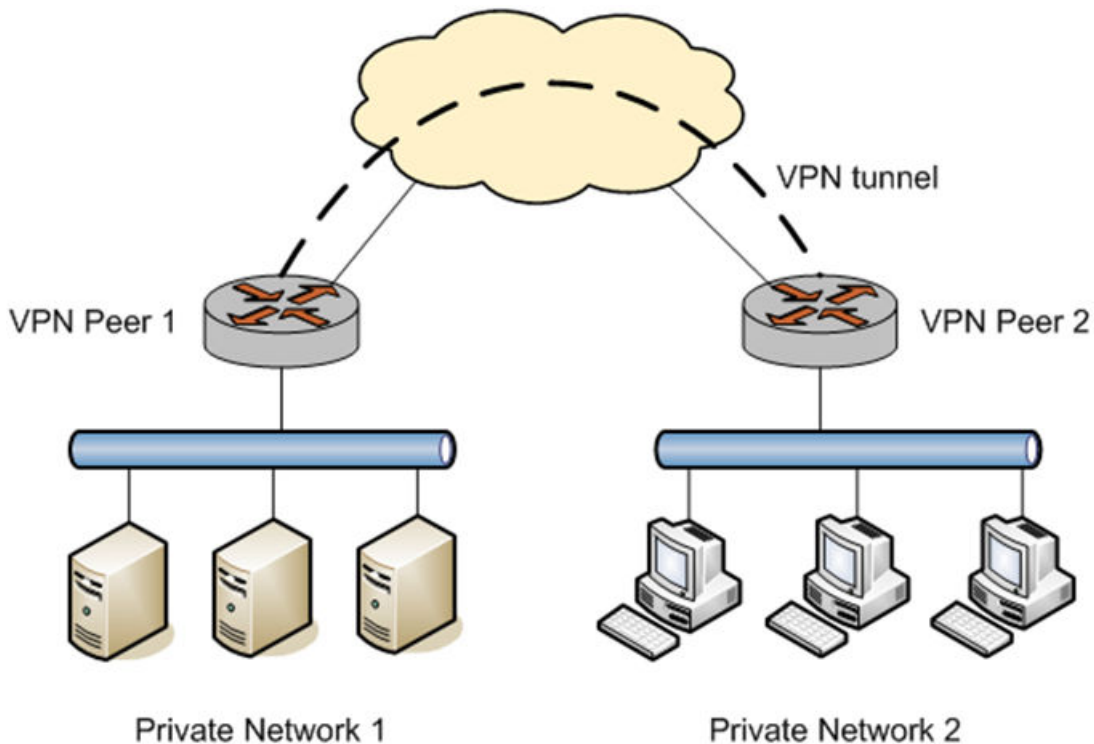

With RA VPN, the Brocade vRouter acts as a VPN server to a remote user with a client PC. A typical use for this capability is a traveling employee accessing the corporate network over the Internet. In this scenario, the remote employee’s computer appears as another host on the corporate private subnet and is able to access all resources within that subnet. This scenario is shown in the following figure.

FIGURE 2 Remote access VPN

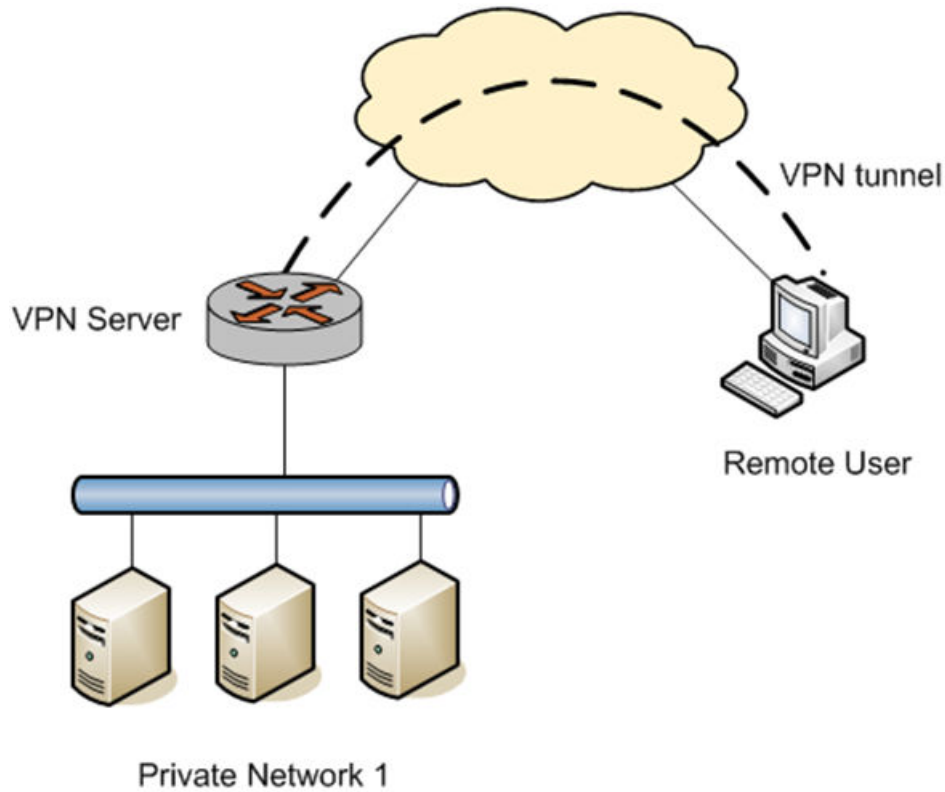

The Brocade vRouter RA VPN implementation supports the built-in Windows VPN client: Layer 2 Tunneling Protocol (L2TP)/IPsec VPN.

The Windows L2TP/IPsec client supports two IPsec authentication mechanisms:

- Pre-shared key (PSK), where the two IPsec peers can use a PSK to authenticate each other based on the assumption that only the other peer knows the key.
- X.509 certificates, which are based on public key cryptography—specifically, digital signatures.


The Brocade vRouter supports both pre-shared key and X.509 certificate authentication for L2TP/IPsec client; consequently, the Brocade vRouter supports two different RA VPN deployments:

- L2TP/IPsec authenticated with pre-shared key
- L2TP/IPsec authenticated with X.509 certificates

RA VPN using L2TP/IPsec with pre-shared key

The following figure shows establishment of an L2TP/IPsec VPN session.

FIGURE 3 Remote access VPN-L2TP/IPsec with pre-shared key

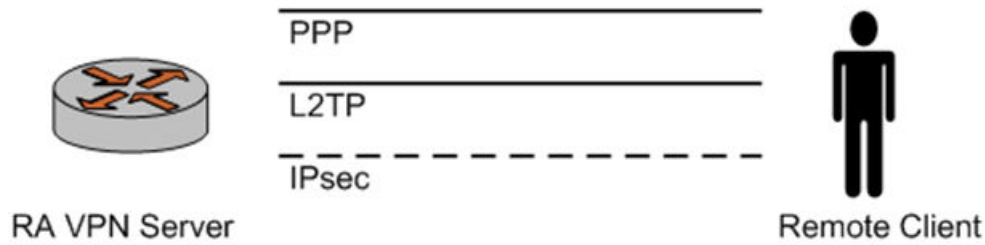

1. The remote client first establishes an IPsec tunnel with the VPN server.
2. The L2TP client and server then establish an L2TP tunnel on top of the IPsec tunnel.
3. Finally, a PPP session is established on top of the L2TP tunnel, i.e., the PPP packets are encapsulated and sent/received inside the L2TP tunnel.


With this solution, only user authentication is done at the PPP level (with username/password). Data encryption is provided by the IPsec tunnel. Furthermore, in order to perform encryption, IPsec also requires authentication (studies have shown that IPsec encryption-only mode is not secure) at the host level.

When pre-shared key is used with L2TP/IPsec, all remote clients must be configured with the same PSK for IPsec authentication. This presents both a security challenge and an operations challenge, since when the key is changed, all remote clients must be re-configured. An alternative is to use L2TP/IPsec with X.509 certificates, as discussed in the next section.

RA VPN using L2TP/IPsec with X.509 certificates

The following figure shows a conceptual diagram of how digital signatures work.

FIGURE 4 Digital signature

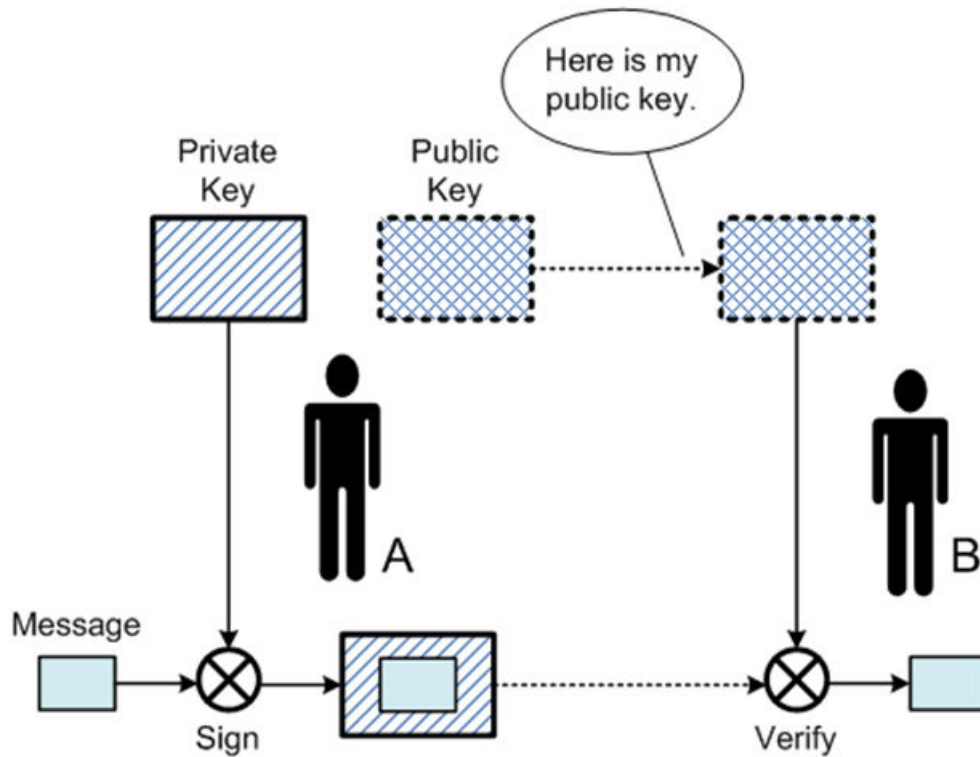


1. Peers A and B are communicating. A has a public key and a private key. A gives her public key to B.
2. A "signs" (encrypts) a message using her private key and sends the signed (encrypted) message to B.
3. B can "verify" the signature by decrypting it using A's public key and checking the result against the original message.

Therefore, B can authenticate A by asking A to sign a message and then verifying the signature using A's public key. Since A's private key is only known to A, only A can create a signature that can be verified using A's public key.


One problem with this authentication scheme is that B cannot know whether the public key he obtained is in fact A's public key. For example, in the following figure, a malicious attacker C pretends to be A and gives B a different public key.

FIGURE 5 Malicious attacker

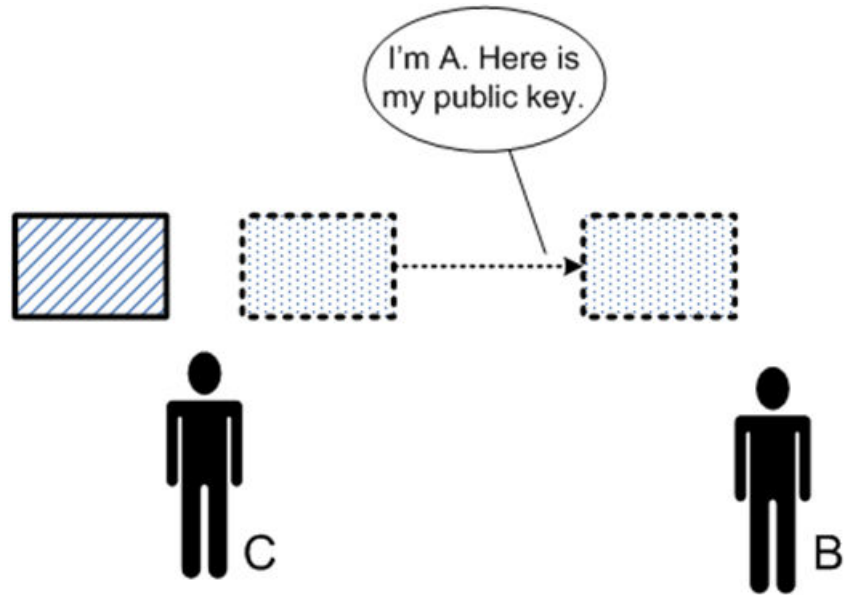

In practice, this problem is solved by using a Public Key Infrastructure (PKI), which is based on a trusted third party, the Certificate Authority (CA). The CA can be either a commercial CA, such as Verisign, or a CA set up internal to the organization. The following figure illustrates conceptually how PKI works.

FIGURE 6 Trusted third party: certificate authority

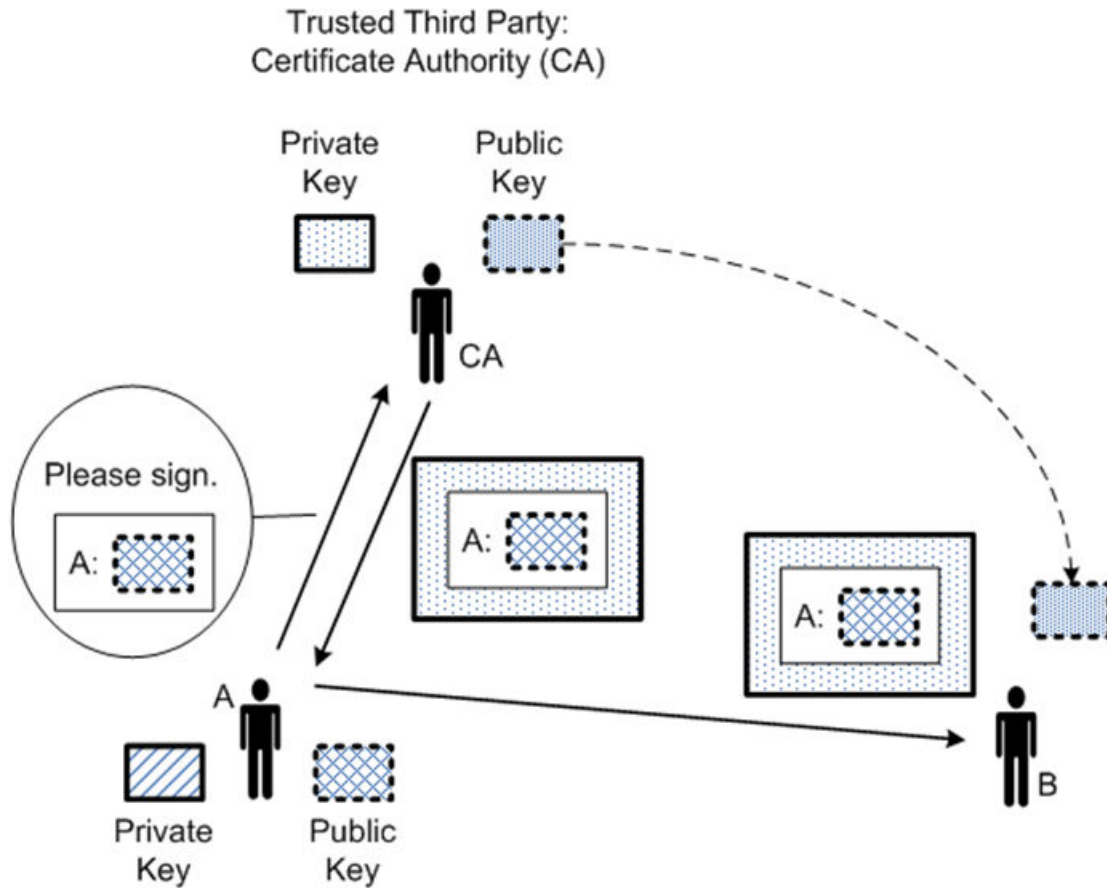

1. Both A and B trust CA.
2. A asks the CA to sign a message verifying A's public key.
3. The CA signs the message using its private key, resulting in a "certificate."
4. A gives the certificate to B.
5. B can verify the certificate from A (and hence A's public key) using the CA's public key.

X.509 is a standard that defines public key certificate formats, revocation, and so on. Given the above scheme, L2TP/IPsec VPN with X.509 certificates works as follows.

1. The network admin obtains a certificate signed by a CA for each remote user (A in the example) and distributes it, along with public/private keys for the user, to the user through a secure channel.
2. The network admin configures the VPN server (B in the example) with the CA's public key, among other things.
3. When the remote client connects to the VPN server, it presents its certificate.
4. The VPN server verifies the certificate using the CA's public key. If the authentication is successful, the result tells the server the client's public key.
5. The server can then use the client's public key for authentication as described previously.

6. If authentication is successful, the IPsec tunnel is established between the client and server. Then the L2TP and PPP operations are identical to the PSK case described previously.

Planning considerations

The following points should be taken into consideration when planning a Remote Access VPN configuration:

- **Dedicated subnet** - At least one dedicated subnet should be used for remote access VPN users. This subnet should not overlap with existing subnets on the private network.
- **Address pools must not overlap** - As it is possible to define multiple address pools, care must be taken to not overlap the address ranges in these pools. In addition, the address pool ranges must be unique with the router configuration.
- **Routes to VPN clients are required** - In addition to configuring the remote access VPN server and clients, routers on the corporate network must be made aware of the VPN client subnet so that they know to forward traffic destined for clients through the VPN server. This can be done using static routes and route redistribution in local routing protocols.
- **Concurrent use of site-to-site and L2TP remote access VPN** - The L2TP remote access server must not be configured if an IPsec site-to-site peer address is set to 0.0.0.0. Neither protocol will function properly in this scenario. This is a problem because it is unclear whether the incoming IKE connection requests are from a site-to-site client with a dynamic IP address, or an L2TP remote access client.
- **Full Tunneling vs. Split Tunneling** - Full Tunneling means that all traffic from the remote access VPN client (that is, traffic destined for the corporate network and traffic destined for the Internet) flows across the VPN. Split Tunneling means that only traffic destined for the corporate network flows across the VPN. Internet traffic goes directly from the client to the Internet. The advantage of Full Tunneling is that Internet access can be controlled centrally. The disadvantage is that it consumes more corporate bandwidth and VPN server resources to service the additional traffic. The advantage of Split Tunneling is that it makes better use of network resources. The disadvantage is that Internet access control must be provided and maintained on the client. In addition, the routing configuration on the client becomes complicated and must be performed manually each time the client connects if the default classful route added by the client software (that is, a route to 10.0.0.0/8, 172.16.0.0/12, or 192.168.0.0/16) is insufficient (for example, if you need to reach both 10.1.0.0/24 and 172.16.1.0/24). If this is the case, and Split Tunneling is desired, OpenVPN is a better solution as it provides better Split Tunnel support. For more information on OpenVPN, see the *Brocade 5600 vRouter OpenVPN Reference Guide*.

Full Tunneling is the default with Windows (L2TP) clients. Split Tunneling is the default with OpenVPN clients.

Remote access using OpenVPN

The Brocade vRouter also supports remote access using OpenVPN. For more information on OpenVPN, see *Brocade 5600 vRouter OpenVPN Reference Guide*.

RA VPN with zone-based firewall

To configure the firewall to treat all Remote Access VPN users as a separate firewall zone, see documentation on zone-based firewall configuration in the *Brocade 5600 vRouter Firewall Reference Guide*.


Remote Access VPN Configuration

- RA VPN configuration overview.....19
- L2TP/IPsec with pre-shared key.....19
- L2TP/IPsec with x.509 certificates.....22
- Split tunneling on a windows client.....26

RA VPN configuration overview

This chapter provides configuration examples for three of the RA VPN scenarios supported: L2TP/IPsec with pre-shared key, and L2TP/IPsec with X.509 certificates. Each configuration example uses the diagram shown below as the deployment scenario:

FIGURE 7 Remote access VPN example

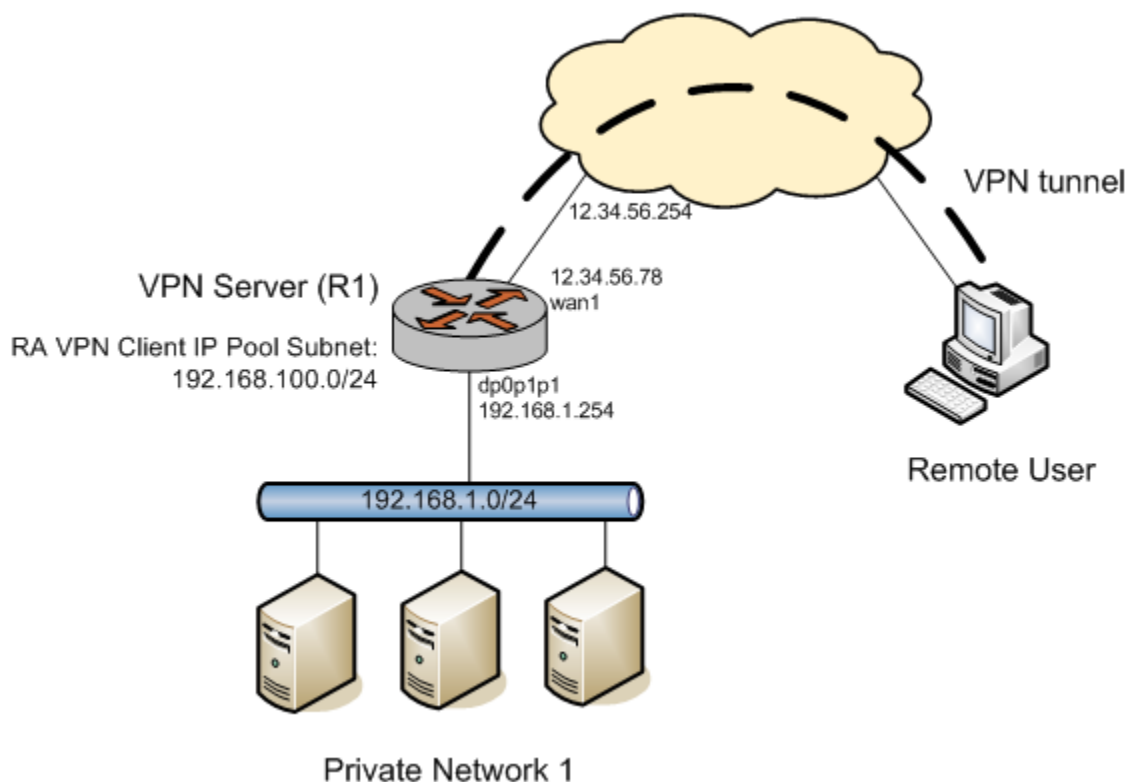

L2TP/IPsec with pre-shared key

The first step in configuring a basic remote access VPN setup using L2TP/IPsec with pre-shared key between R1 and a Windows XP client is to configure R1 as an L2TP/IPsec-based VPN server.

TABLE 1 Remote access VPN - L2TP/IPsec example

Step	Command
Enable NAT traversal. This is mandatory.	<pre>vyatta@R1# set security vpn ipsec nat-traversal enable</pre>
Set the allowed subnet.	<pre>vyatta@R1# set security vpn ipsec nat-networks allowed-network 192.168.100.0/24</pre>
Commit the change.	<pre>vyatta@R1# commit</pre>
Show the ipsec configuration.	<pre>vyatta@R1# show vpn ipsec ipsec-interfaces { interface dp0plp1 } nat-networks { allowed-network 192.168.100.0/24 { } } nat-traversal enable</pre>
Bind the L2TP server to the external address.	<pre>vyatta@R1# set security vpn l2tp remote-access outside-address 12.34.56.78</pre>
Set the nexthop address.	<pre>vyatta@R1# set security vpn l2tp remote-access outside-nexthop 12.34.56.254</pre>
Set up the pool of IP addresses that remote VPN connections will assume. In this case we make 10 addresses available (from .101 to .110) on subnet 192.168.100.0/24. Note that we do not use the subnet on the LAN.	<pre>vyatta@R1# set security vpn l2tp remote-access client-ip-pool start 192.168.100.101 vyatta@R1# set security vpn l2tp remote-access client-ip-pool stop 192.168.100.110</pre>
(Optional) Set the server pool of IP addresses used at the router. In this example we make 10 server side addresses available (from .1 - .10) on subnet 10.22.0.0/24. Note that we do not use the subnet on the LAN.	<pre>vyatta@R1# set security vpn l2tp remote-access server-ip-pool start 10.22.0.1 vyatta@R1# set security vpn l2tp remote-access server-ip-pool stop 10.22.0.10</pre>
Set the IPsec authentication mode to pre-shared secret.	<pre>vyatta@R1# set security vpn l2tp remote-access ipsec-settings authentication mode pre-shared-secret</pre>
Set the pre-shared secret.	<pre>vyatta@R1# set security vpn l2tp remote-access ipsec-settings authentication pre-shared-secret !secrettext!</pre>
Set the L2TP remote access authentication mode to local.	<pre>vyatta@R1# set security vpn l2tp remote-access authentication mode local</pre>
Set the L2TP remote access username and password.	<pre>vyatta@R1# set security vpn l2tp remote-access authentication local-users username testuser password testpassword</pre>
Commit the change.	<pre>vyatta@R1# commit</pre>
Show the l2tp remote access configuration.	<pre>vyatta@R1# show vpn l2tp remote-access authentication { local-users { username testuser { password testpassword } } }</pre>

TABLE 1 Remote access VPN - L2TP/IPsec example (continued)

Step	Command
	<pre> mode local } client-ip-pool { start 192.168.100.101 stop 192.168.100.110 } server-ip-pool { start 10.22.0.1 stop 10.22.0.10 } ipsec-settings { authentication { mode pre-shared-secret pre-shared-secret !secrettext! } } outside-address 12.34.56.78 outside-nextthop 12.34.56.254 </pre>

The next step is to configure the L2TP/IPsec VPN client on a Windows XP SP2 system (the remote user in the example). You can use the Windows **New Connection Wizard** as follows.

1. Select **Start > Control Panel > Network Connections**.
2. Click **Create a new connection**. The **New Connection Wizard** launches. Click **Next**.
3. Select **Connect to the network at my workplace**. Click **Next**.
4. Select **Virtual Private Network connection**. Click **Next**.
5. Enter a name for the connection; for example vRouter-L2TP. Click **Next**.
6. Select **Do not dial the initial connection**. Click **Next**.
7. Type the VPN server address (12.34.56.78 in the example). Click **Next**.
8. If asked, select **Do not use my smart card**. Click **Next**.
9. Click **Finish**.

By default, after the VPN configuration is created, a pre-shared key is not configured and must be added.

1. Go to **Network Connections** in the **Control Panel**.
2. Right-click the vRouter-L2TP (or whatever name you specified) icon. Select **Properties**.
3. Click the **Security** tab. Click **IPsec Settings...**
4. Check the **Use pre-shared key for authentication** checkbox.
5. Type the pre-shared key (!secrettext! in our example) in the **Key** field.
6. Click **OK**. Click **OK**.

To connect to the VPN server, double-click the vRouter-L2TP icon, type the user name (testuser in our example) and password (testpassword in our example), and then click **Connect**. The **show interfaces** and **show vpn remote-access** operational commands will display the connected user on an interface named l2tpX where X is an integer.

NOTE

You need to make sure that, between the remote client and the VPN server, nothing is blocking packets with protocol L2TP or UDP port 500. (Check firewall settings, home gateway, DSL modem, ISP, and so on.)

Configuring the L2TP/IPsec VPN client on a Windows XP SP2 system

The next step is to configure the L2TP/IPsec VPN client on a Windows XP SP2 system (the remote user in the example). You can use the Windows **New Connection Wizard** as follows.

1. Select **Start > Control Panel > Network Connections**.
2. Click **Create a new connection**. The **New Connection Wizard** launches. Click **Next**.
3. Select **Connect to the network at my workplace**. Click **Next**.
4. Select **Virtual Private Network connection**. Click **Next**.
5. Enter a name for the connection; for example vRouter-L2TP. Click **Next**.
6. Select **Do not dial the initial connection**. Click **Next**.
7. Type the VPN server address (12.34.56.78 in the example). Click **Next**.
8. If asked, select **Do not use my smart card**. Click **Next**.
9. Click **Finish**.

Connecting to the VPN server

1. Go to **Network Connections** in the **Control Panel**.
2. Right-click the vRouter-L2TP (or whatever name you specified) icon. Select **Properties**.
3. Click the **Security** tab. Click **IPsec Settings...**
4. Check the **Use pre-shared key for authentication** checkbox.
5. Type the pre-shared key (!secrettext! in our example) in the **Key** field.
6. Click **OK**. Click **OK**.

To connect to the VPN server, double-click the vRouter-L2TP icon, type the user name (testuser in our example) and password (testpassword in our example), and then click **Connect**. The **show interfaces** and **show vpn remote-access** operational commands will display the connected user on an interface named l2tpX where X is an integer.

NOTE

You need to make sure that, between the remote client and the VPN server, nothing is blocking packets with protocol L2TP or UDP port 500. (Check firewall settings, home gateway, DSL modem, ISP, and so on.)

L2TP/IPsec with x.509 certificates

The first step in configuring a basic remote access VPN setup using L2TP/IPsec with X.509 certificates between R1 and a Windows XP client is to obtain the files necessary for authentication using X.509 certificates. In general, the procedure for doing this is as follows:

1. Generate the private key and a certificate signing request (CSR) (based on the public key). This can be accomplished using **generate vpn x509 key-pair *name*** (for example, **generate vpn x509 key-pair R1**, where **R1.key** is the private key and **R1.csr** is the certificate signing request file - both created in `/config/auth`).
2. Send the CSR file (for example, **R1.csr**) to the certificate authority (CA) and receive back a server certificate (for example, **R1.crt**), the CA certificate (for example, **ca.crt**), and potentially, a certificate revocation list (CRL) file. This procedure varies according to the CA being used.
3. The same procedure should be followed to obtain equivalent files for the Windows client machine (for example, **windows.crt** and **windows.key**). The same CA certificate (**ca.crt**) can be used on the Windows machine.

NOTE

If the CA can combine the **windows.crt** and **windows.key** files and export a PKCS #12 file (for example, **windows.p12**), it will save a step later on.

Once the X.509-related files have been generated or acquired, the next step is to configure R1 as an L2TP/IPsec-based VPN server.

TABLE 2 Remote access VPN - L2TP/IPsec example

Step	Command
Define the interface used for IPsec; in this case, dp0p1p1.	<pre>vyatta@R1# set security vpn ipsec ipsec-interfaces interface dp0p1p1</pre>
Enable NAT traversal. This is mandatory.	<pre>vyatta@R1# set security vpn ipsec nat-traversal enable</pre>
Set the allowed subnet.	<pre>vyatta@R1# set security vpn ipsec nat-networks allowed-network 192.168.100.0/24</pre>
Commit the change.	<pre>vyatta@R1# commit</pre>
Show the ipsec configuration.	<pre>vyatta@R1# show vpn ipsec ipsec-interfaces { interface dp0p1p1 } nat-networks { allowed-network 192.168.100.0/24 { } } nat-traversal enable</pre>
Bind the L2TP server to the external address.	<pre>vyatta@R1# set security vpn l2tp remote-access outside-address 12.34.56.78</pre>
Set the nexthop address.	<pre>vyatta@R1# set security vpn l2tp remote-access outside-nexthop 12.34.56.254</pre>
Set up the pool of IP addresses that remote VPN connections will assume. In this case we make 10 addresses available (from .101 to .110) on subnet 192.168.100.0/24. Note that we do not use the subnet on the LAN.	<pre>vyatta@R1# set security vpn l2tp remote-access client-ip-pool start 192.168.100.101 vyatta@R1# set security vpn l2tp remote-access client-ip-pool stop 192.168.100.110</pre>
(Optional) Set the server pool of IP addresses used at the router. In this example we make 10 server side addresses available (from .1 - .10) on subnet 10.22.0.0/24. Note that we do not use the subnet on the LAN.	<pre>vyatta@R1# set security vpn l2tp remote-access server-ip-pool start 10.22.0.1 vyatta@R1# set security vpn l2tp remote-access server-ip-pool stop 10.22.0.10</pre>
Set the IPsec authentication mode to x509.	<pre>vyatta@R1# set security vpn l2tp remote-access ipsec-settings authentication mode x509</pre>
Specify the location of the CA certificate.	<pre>vyatta@R1# set security vpn l2tp remote-access ipsec-settings authentication x509 ca-cert-file /config/auth/ca.crt</pre>
Specify the location of the server certificate.	<pre>vyatta@R1# set security vpn l2tp remote-access ipsec-settings authentication x509 server-cert-file /config/auth/R1.crt</pre>

TABLE 2 Remote access VPN - L2TP/IPsec example (continued)

Step	Command
Specify the location of the server key file.	<pre>vyatta@R1# set security vpn l2tp remote-access ipsec-settings authentication x509 server-key-file /config/auth/R1.key</pre>
Specify the password for the server key file.	<pre>vyatta@R1# set security vpn l2tp remote-access ipsec-settings authentication x509 server-key-password testpwd-R1 testpwd-R1</pre>
Set the L2TP remote access authentication mode to local.	<pre>vyatta@R1# set security vpn l2tp remote-access authentication mode local</pre>
Set the L2TP remote access username and password.	<pre>vyatta@R1# set security vpn l2tp remote-access authentication local-users username testuser password testpassword</pre>
Commit the change.	<pre>vyatta@R1# commit</pre>
Show the l2tp remote access configuration.	<pre>vyatta@R1# show security vpn l2tp remote-access authentication { local-users { username testuser { password testpassword } } mode local } client-ip-pool { start 192.168.100.101 stop 192.168.100.110 } server-ip-pool { start 10.22.0.1 stop 10.22.0.10 } ipsec-settings { authentication { mode x509 x509 { ca-cert-file /config/auth/ca.crt server-cert-file /config/auth/R1.crt server-key-file /config/auth/R1.key server-key-password testpwd-R1 } } } outside-address 12.34.56.78 outside-next-hop 12.34.56.254</pre>

Once R1 is configured, the next step is to configure the L2TP/IPsec VPN client on a Windows XP SP2 system (the remote user in the example). The first part of this is to import the key and certificate files created by the CA onto the Windows machine. Windows expects the key and server certificates to be wrapped into a single file in a PKCS #12 format (a .p12 file).

NOTE

If the CA does not provide this, then you will need to use a tool (e.g. openssl) to combine the key file and the certificate file for the Windows machine into a .p12 file.

1. Copy the **ca.crt** and **windows.p12** files to the Windows machine.
2. On the Windows machine: Select **Start > Run...** The **Run** dialog opens.

3. Enter **mmc** at the **Open:** prompt. Click **OK**. The **Console1** MMC console opens.
4. Select **File > Add/Remove Snap-in...** The **Add/Remove Snap-in** dialog opens.
5. Click **Add...** The **Add Standalone Snap-in** dialog opens.
6. Select **Certificates** in the list of Available standalone snap-ins. Click **Add**. The **Certificates snap-in** dialog opens.
7. Select **Computer account**. Click **Next**. The **Select Computer** dialog appears.
8. Select **Local computer** (the computer this console is running on). Click **Finish**. Click **Close**. Click **OK**.

Certificates (Local Computer) appears beneath **Console Root** in the **Console1** MMC console. Now you can import the certificate, as follows.

1. Expand **Certificates (Local Computer)**.
2. Right click **Personal** and select **All Tasks > Import...** The **Certificate Import Wizard** opens.
3. Click **Next**. Specify the location of the **windows.p12** file. Click **Next**.
4. Enter the password for the private key. Click **Next**. Click **Finish**.
5. Right click **Trusted Root Certification Authorities** and select **All Tasks > Import...** The **Certificate Import Wizard** opens.
6. Click **Next**. Specify the location of the **ca.crt** file. Click **Next**.
7. Click **Finish**. Close the **Console1** MMC console.

At this point, the necessary key and certificate files have been imported to the Windows machine. The next part of configuring the L2TP/IPsec VPN client on the Windows XP SP2 system is to specify the VPN connection. You can use the Windows **New Connection Wizard** as follows.

1. Select **Start > Control Panel > Network Connections**.
2. Click **Create a new connection**. The **New Connection Wizard** launches. Click **Next**.
3. Select **Connect to the network at my workplace**. Click **Next**.
4. Select **Virtual Private Network connection**. Click **Next**.
5. Enter a name for the connection; for example **vRouter-X509**. Click **Next**.
6. Select **Do not dial the initial connection**. Click **Next**.
7. Type the VPN server address (**12.34.56.78** in the example). Click **Next**.
8. If asked, select **Do not use my smart card**. Click **Next**.
9. Click **Finish**.

At this point, the configuration on the Windows machine is complete.

To connect to the VPN server, double-click the **vRouter-X509** icon. Enter the User name and Password, then click **Connect** to establish the connection.

The **show interfaces** and **show vpn remote-access** operational commands will display the connected user on an interface named **l2tpX** where **X** is an integer.

NOTE

You need to make sure that, between the remote client and the VPN server, nothing is blocking packets with protocol L2TP or UDP port 500. (Check firewall settings, home gateway, DSL modem, ISP, and so on.)

Split tunneling on a windows client

On a Windows client, by default, after the VPN configuration is created, the client is configured for Full Tunneling (all traffic flows across the VPN). If you want to configure the client for Split Tunneling (where Internet traffic does not flow across the VPN), you can modify the client VPN configuration as follows:

1. Select **Start > Control Panel > Network Connections**.
2. Right-click the icon for the VPN connection. Click **Properties**.
3. Click the **Networking** tab. Select **Internet Protocol (TCP/IP)**, then click **Properties**.
4. Click **Advanced**. Uncheck the **Use default gateway on remote network** checkbox.
5. Click **OK** three times.

Monitoring Remote Access VPN

- [Showing interface information.....](#)27
- [Showing remote access VPN information.....](#)27

Showing interface information

To see high-level interface information, you can use the **show interfaces** operational mode command, as shown in the following example. For Remote Access VPN connections, in addition to the local interface and the IP address it is bound to, you will see the remote user's name and the IP address assigned to the remote user.

Viewing interface information

```
vyatta@vyatta:~$ show interfaces
Codes: S - State, L - Link, u - Up, D - Down, A - Admin Down
Interface      IP Address      S/L  Description
-----
dp0p2p1        10.224.66.52/25 u/u
dp0p5p1        192.168.44.1/24 u/u
dp0port2       23.23.23.23/24  u/u
lo              127.0.0.1/8     u/u
                ::1/128
ppp0           10.22.0.1        u/u  L2TP user3
                192.168.101.1
ppp1           10.22.0.2        u/u  L2TP user1
                192.168.101.2
vyatta@vyatta:~$
```

Showing remote access VPN information

To see Remote Access VPN information specifically, you can use the **show vpn remote-access** operational mode command, as shown in the following example.

Viewing remote access VPN information

```
vyatta@vyatta:~$ show vpn remote-access
Active remote access VPN sessions:

User          Proto Iface  Tunnel IP      TX byte  RX byte  Time
-----
bill          L2TP  ppp1   192.168.101.2  58       3.8K    00h02m09s
dave          L2TP  ppp0   192.168.101.1  58       3.8K    00h02m32s
vyatta@vyatta:~$
```


Remote Access VPN Commands

• reset vpn remote-access all.....	30
• reset vpn remote-access interface <interface>.....	31
• reset vpn remote-access user <username>.....	32
• security vpn l2tp.....	33
• security vpn l2tp remote-access authentication mode <mode>.....	34
• security vpn l2tp remote-access authentication local-users username <username>.....	36
• security vpn l2tp remote-access authentication radius-server <ipv4> key <key>.....	38
• security vpn l2tp remote-access client-ip-pool start <ipv4>.....	40
• security vpn l2tp remote-access client-ip-pool stop <ipv4>.....	41
• security vpn l2tp remote-access dhcp-interface <interface>.....	42
• security vpn l2tp remote-access dns-servers server-1 <ipv4>.....	43
• security vpn l2tp remote-access dns-servers server-2 <ipv4>.....	44
• security vpn l2tp remote-access ipsec-settings authentication mode <mode>.....	45
• security vpn l2tp remote-access ipsec-settings authentication pre-shared-secret <secret>.....	47
• security vpn l2tp remote-access ipsec-settings authentication x509 ca-cert-file <file-name>.....	48
• security vpn l2tp remote-access ipsec-settings authentication x509 crl-file <file-name>.....	49
• security vpn l2tp remote-access ipsec-settings authentication x509 server-cert-file <file-name>.....	50
• security vpn l2tp remote-access ipsec-settings authentication x509 server-key-file <file-name>.....	51
• security vpn l2tp remote-access ipsec-settings authentication x509 server-key-password <password>.....	52
• security vpn l2tp remote-access ipsec-settings ike-lifetime <lifetime>.....	53
• security vpn l2tp remote-access mtu <mtu>.....	54
• security vpn l2tp remote-access outside-address <ipv4>.....	55
• security vpn l2tp remote-access outside-nextthop <ipv4>.....	56
• security vpn l2tp remote-access server-ip-pool start <ipv4>.....	57
• security vpn l2tp remote-access server-ip-pool stop <ipv4>.....	59
• security vpn l2tp remote-access wins-servers server-1 <ipv4>.....	61
• security vpn l2tp remote-access wins-servers server-2 <ipv4>.....	62
• show vpn remote-access.....	63

reset vpn remote-access all

Terminates all remote-access VPN tunnels.

Syntax

```
reset vpn remote-access all
```

Modes

Operational mode

Usage Guidelines

Use this command to terminate all remote access VPN tunnels.

Examples

The following example terminates all remote access VPN tunnels.

```
vyatta@vyatta# reset vpn remote-access all  
vyatta@vyatta#
```

reset vpn remote-access interface <interface>

Terminates the specified active session.

Syntax

```
reset vpn remote-access interface interface
```

Parameters

interface

The interface associated with the session to be terminated.

Modes

Operational mode

Usage Guidelines

Use this command to terminate a specific remote access VPN tunnel.

Examples

The following example terminates the active session on dp0p1p1.

```
vyatta@vyatta# reset vpn remote-access interface dp0p1p1
vyatta@vyatta#
```

reset vpn remote-access user <username>

Terminates the specified user's active sessions.

Syntax

```
reset vpn remote-access user username [protocol {l2tp}]
```

Parameters

username

The user name associated with the sessions to be terminated.

l2tp

Terminate the specified user's session that is using the l2tp protocol.

Modes

Operational mode

Usage Guidelines

Use this command to terminate remote access VPN tunnels for the specified user. Use the **l2tp** option to specify a particular session. This is useful when a user has simultaneous sessions open on different protocols.

Examples

The following example terminates all active sessions for user robert.

```
vyatta@vyatta# reset vpn remote-access user robert
vyatta@vyatta#
```


security vpn l2tp

Creates the top-most configuration node for L2TP VPN, enabling L2TP VPN functionality.

Syntax

set security vpn l2tp

delete security vpn l2tp

show security vpn l2tp

Modes

Configuration mode

Configuration Statement

```
security {  
    vpn {  
        l2tp  
    }  
}
```

Usage Guidelines

Use this command to create the configuration node for Layer 2 Tunneling Protocol (L2TP) Virtual Private Network (VPN) functionality.

Use the **set** form of this command to create the L2TP VPN configuration node.

Use the **delete** form of this command to remove all L2TP VPN configuration.

Use the **show** form of this command to display L2TP VPN configuration.

security vpn l2tp remote-access authentication mode <mode>

Specifies user authentication mode for L2TP VPN remote access connections.

Syntax

```
set security vpn l2tp remote-access authentication mode mode
delete security vpn l2tp remote-access authentication mode
show security vpn l2tp remote-access authentication mode
```

Command Default

Users are authenticated using the system's local user database defined in the vpn l2tp configuration.

Parameters

mode

The mode to be used for authenticating remote users. Supported values are as follows:

local: Authenticates users locally.

radius: Authenticates using a RADIUS server.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        authentication {
          mode mode
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify how L2TP VPN remote users are to be authenticated.

Users can be authenticated either locally, using login credentials specified using the **security vpn l2tp remote-access authentication local-users username *username*** command, or using one or more servers running the Remote Access Dial In User Service (RADIUS) protocol.

If you specify RADIUS authentication, you must specify the location of the RADIUS servers, and record the RADIUS login password, by using the **security vpn l2tp remote-access authentication radius-server ipv4 key *key*** command.

Use the **set** form of this command to configure the authentication mode for users.

Use the **delete** form of this command to remove the user authentication mode.

Use the **show** form of this command to display the user authentication mode.

security vpn l2tp remote-access authentication local-users username <username>

Specifies the login credentials for L2TP VPN remote users being authenticated locally.

Syntax

```
set security vpn l2tp remote-access authentication local-users username username [ disable | password password | static-ip ipv4 ]
```

```
delete security vpn l2tp remote-access authentication local-users username username [ disable | password | static-ip ]
```

```
show security vpn l2tp remote-access authentication local-users username username [ password | static-ip ]
```

Parameters

username

The user name. Mandatory if **authentication mode** is **local**.

disable

Disables remote access for the user.

password

The login password for the specified user. Mandatory if **authentication mode** is **local**.

ipv4

The IPv4 address to assign the user when they connect. This address does not have to be part of the **client-ip-pool**.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        authentication {
          local-users {
            username username {
              disable
              password password
              static-ip ipv4
            }
          }
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify login credentials for L2TP VPN remote users and, optionally, to specify the IP address that will be assigned to a user when they connect.

Use the **set** form of this command to create the user name configuration node for the user.

Use the **delete** form of this command to remove a user's login credentials.

Use the **show** form of this command to display the user login authentication configuration.

security vpn l2tp remote-access authentication radius-server <ipv4> key <key>

Defines a RADIUS server authenticating L2TP VPN remote users.

Syntax

set security vpn l2tp remote-access authentication radius-server *ipv4* **key** *key*

delete security vpn l2tp remote-access authentication radius-server *ipv4* [**key**]

show security vpn l2tp remote-access authentication radius-server *ipv4* [**key**]

Parameters

ipv4

Multi-node. The IPv4 address of the RADIUS server. Mandatory if **authentication mode** is **radius**. You can define more than one RADIUS server by creating multiple **radius-server** configuration nodes.

key

The password for the RADIUS server. This must be the same as that recorded on the RADIUS server. Mandatory if **authentication mode** is **radius**. Supported characters are alphanumeric, space, and special characters. Strings containing spaces must be enclosed in double quotes.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        authentication {
          radius-server ipv4 {
            key key
          }
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to define one or more RADIUS servers for authenticating remote L2TP VPN and the login credentials required to access it.

At least one RADIUS server must be defined if RADIUS is set as the user authentication mode.

RADIUS servers are queried in the order they were configured. If the query to the first RADIUS server times out, the next RADIUS server in the list is queried. If no query is successful, the login attempt fails.

The RADIUS secret is specified in plain text. RADIUS secrets are stored in plain text on the system, and used as part of a cryptographic operation for transferring authentication information securely over the network. When you view RADIUS secrets, they are displayed in plain text.

Use the **set** form of this command to define a RADIUS server. Note that you cannot use **set** to change the IP address of a defined server. To change the server's IP address, delete the server and create a new one.

Use the **delete** form of this command to remove the RADIUS server configuration node or the key. Note that the key is mandatory; if you delete the key, you must configure another one.

Use the **show** form of this command to display RADIUS server configuration.

security vpn l2tp remote-access client-ip-pool start <ipv4>

Specifies the beginning address of a pool of IP addresses for L2TP VPN remote clients.

Syntax

```
set security vpn l2tp remote-access client-ip-pool start ipv4
delete security vpn l2tp remote-access client-ip-pool start
show security vpn l2tp remote-access client-ip-pool start
```

Command Default

The default beginning address is 10.255.0.0.

Parameters

ipv4

The IP address that designates the beginning of the address pool.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        client-ip-pool {
          start ipv4
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the beginning address of an address pool for remote L2TP VPN clients. Each L2TP VPN connection requires a client address and a server address. Both the beginning and ending addresses must be specified for the remote L2TP VPN clients. Use the **security vpn l2tp remote-access client-ip-pool stop *ipv4*** command to specify the ending address for the L2TP VPN clients.

For information on how to specify the range of addresses for an L2TP server, refer to the **security vpn l2tp remote-access server-ip-pool start *ipv4*** and **security vpn l2tp remote-access server-ip-pool stop *ipv4*** commands.

Use the **set** form of this command to specify the beginning address.

Use the **delete** form of this command to delete the beginning address.

Use the **show** form of this command to display the beginning address.

security vpn l2tp remote-access client-ip-pool stop <ipv4>

Specifies the ending address of a pool of IP addresses for L2TP VPN remote clients.

Syntax

```
set security vpn l2tp remote-access client-ip-pool stop ipv4
delete security vpn l2tp remote-access client-ip-pool stop
show security vpn l2tp remote-access client-ip-pool stop
```

Command Default

The default ending address is 10.255.255.255.

Parameters

ipv4

The IP address that designates the end of the address pool.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        client-ip-pool {
          stop ipv4
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the ending address of an address pool for remote L2TP VPN clients. Each L2TP VPN connection requires a client address and a server address. Both the beginning and ending addresses must be specified for the remote L2TP VPN clients. Use the **security vpn l2tp remote-access client-ip-pool start *ipv4*** command to specify the beginning address for the L2TP VPN clients.

For information on how to specify the range of addresses for an L2TP server, refer to the **security vpn l2tp remote-access server-ip-pool start *ipv4*** and **security vpn l2tp remote-access server-ip-pool stop *ipv4*** commands.

Use the **set** form of this command to specify the ending address.

Use the **delete** form of this command to delete the ending address.

Use the **show** form of this command to display the ending address.

security vpn l2tp remote-access dhcp-interface <interface>

Specifies a DHCP client interface to use for remote access L2TP VPN connections.

Syntax

```
set security vpn l2tp remote-access dhcp-interface interface
delete security vpn l2tp remote-access dhcp-interface
show security vpn l2tp remote-access dhcp-interface
```

Parameters

interface

The interface to use for remote access L2TP VPN connections (for example, dpOp1p1). Note that the interface must already have IPsec VPN enabled, using the **security vpn ipsec ipsec-interfaces interface *if-name*** command (described in the *Brocade 5600 vRouter IPsec Site-to-Site VPN Reference Guide*), and must be configured as a DHCP client.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        dhcp-interface interface
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify a DHCP client interface to use for remote access L2TP VPN connections. Connections will be automatically restarted if the IP address changes.

The DHCP interface is the interface facing the external network. This is the interface to which the L2TP server binds, and only remote connections coming into this interface will be accepted.

NOTE

This command cannot be used if the **security vpn l2tp remote-access outside-address *ipv4*** command is also set.

Use the **set** form of this command to specify a DHCP interface to use for remote access L2TP VPN connections.

Use the **delete** form of this command to remove the configuration.

Use the **show** form of this command to view the configuration.

security vpn l2tp remote-access dns-servers server-1 <ipv4>

Specifies the IP address for the primary DNS server for L2TP VPN remote clients.

Syntax

```
set security vpn l2tp remote-access dns-servers server-1 ipv4
delete security vpn l2tp remote-access dns-servers server-1
show security vpn l2tp remote-access dns-servers server-1
```

Parameters

ipv4

The IP address of the primary DNS server for remote clients.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        dns-servers {
          server-1 ipv4
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the primary DNS server to be associated with remote L2TP VPN clients.

Use the **set** form of this command to specify the primary DNS server IP address.

Use the **delete** form of this command to remove the primary DNS server IP address.

Use the **show** form of this command to display the primary DNS server IP address.

security vpn l2tp remote-access dns-servers server-2 <ipv4>

Specifies the IP address for the secondary DNS server for L2TP VPN remote clients.

Syntax

set security vpn l2tp remote-access dns-servers server-2 *ipv4*

delete security vpn l2tp remote-access dns-servers server-2

show security vpn l2tp remote-access dns-servers server-2

Parameters

ipv4

The IP address of the secondary DNS server for remote clients.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        dns-servers {
          server-2 ipv4
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the secondary DNS server to be associated with remote L2TP VPN clients.

Use the **set** form of this command to specify the secondary DNS server IP address.

Use the **delete** form of this command to remove the secondary DNS server IP address.

Use the **show** form of this command to display the secondary DNS server IP address.

security vpn l2tp remote-access ipsec-settings authentication mode <mode>

Sets the IPsec authentication mode to be used for IPsec authentication on remote access L2TP VPN connections.

Syntax

set security vpn l2tp remote-access ipsec-settings authentication mode *mode*

delete security vpn l2tp remote-access ipsec-settings authentication mode

show security vpn l2tp remote-access ipsec-settings authentication mode

Command Default

Pre-shared secret.

Parameters

mode

Specifies the authentication mode to be used for IPsec authentication on L2TP VPN remote access connections. Supported values are as follows:

pre-shared-secret: Uses a pre-shared secret for authentication.

x509: Uses X.509 V.3 certificates for authentication.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        ipsec-settings {
          authentication {
            mode mode
          }
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to set the authentication mode to be used for IPsec authentication on remote access L2TP VPN connections.

A pre-shared secret, or pre-shared key (PSK), is a method of authentication. The secret, or key, is a string agreed upon beforehand by both parties as key for authenticating the session. It is used to generate a hash such that each VPN endpoint can authenticate the other.

If the **authentication mode** is **pre-shared-secret**, you must configure the secret using the **security vpn 12tp remote-access ipsec-settings authentication pre-shared-secret *secret*** command.

The pre-shared secret is not passed from side to side. It is configured on both sides, and must match on both sides. Pre-shared secrets are less secure than X.509 certificates.

NOTE

You should restrict the use of pre-shared keys to smaller, low-risk environments.

X.509 v.3 certificates are certificates conforming to the ITU-T X.509 version 3 standard for public key infrastructure (PKI). The certificate is issued by a Certificate Authority (CA), and stored securely on the local Brocade vRouter.

If the mode is X.509 certificates, you must configure all X.509 certificate information.

Use the **set** form of this command to specify the authentication mode for remote access L2TP VPN.

Use the **delete** form of this command to remove authentication mode configuration.

Use the **show** form of this command to display authentication mode configuration.

security vpn l2tp remote-access ipsec-settings authentication pre-shared-secret <secret>

Sets a pre-shared key for IPsec authentication on remote access L2TP VPN connections.

Syntax

set security vpn l2tp remote-access ipsec-settings authentication pre-shared-secret *secret*

delete security vpn l2tp remote-access ipsec-settings authentication pre-shared-secret

show security vpn l2tp remote-access ipsec-settings authentication pre-shared-secret

Parameters

secret

The password, or secret, to be used to authenticate the remote access connection. This parameter is mandatory if **authentication mode** is **pre-shared-secret**. The secret must be the same on both sides of the connection.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        ipsec-settings {
          authentication {
            pre-shared-secret secret
          }
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to set a pre-shared secret to be used to authenticate the IPsec part of remote access L2TP VPN connections.

Use the **set** form of this command to specify the pre-shared secret.

Use the **delete** form of this command to remove pre-shared secret configuration.

Use the **show** form of this command to display pre-shared secret configuration.

security vpn l2tp remote-access ipsec-settings authentication x509 ca-cert-file <file-name>

Specifies the name of an X.509 Certificate Authority (CA) certificate file for IPsec authentication on remote access L2TP VPN connections.

Syntax

set security vpn l2tp remote-access ipsec-settings authentication x509 ca-cert-file *file-name*

delete security vpn l2tp remote-access ipsec-settings authentication x509 ca-cert-file

show security vpn l2tp remote-access ipsec-settings authentication x509 ca-cert-file

Parameters

file-name

The name of a certificate file. This parameter is mandatory if **authentication mode** is **x509**.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        ipsec-settings {
          authentication {
            x509 {
              ca-cert-file file-name
            }
          }
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the name of an X.509 Certificate Authority (CA) certificate file. The X.509 CA certificate is used for IPsec authentication on remote access L2TP VPN connections.

The file is assumed to be in `/config/auth` unless an absolute path is specified.

Use the **set** form of this command to specify the name of the CA certificate file.

Use the **delete** form of this command to remove the name of the CA certificate file.

Use the **show** form of this command to display CA certificate file configuration.

security vpn l2tp remote-access ipsec-settings authentication x509 crl-file <file-name>

Specifies the name of an X.509 Certificate Revocation List (CRL) file for IPsec authentication on L2TP VPN remote access connections.

Syntax

set security vpn l2tp remote-access ipsec-settings authentication x509 crl-file *file-name*

delete security vpn l2tp remote-access ipsec-settings authentication x509 crl-file

show security vpn l2tp remote-access ipsec-settings authentication x509 crl-file

Parameters

file-name

The name of the CRL file.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        ipsec-settings {
          authentication {
            x509 {
              crl-file file-name
            }
          }
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the name of a Certificate Revocation List (CRL) file.

A CRL is a time-stamped signed data structure issued by the Certificate Authority (CA) identifying revoked certificates. When the remote user attempts to log on to the system, the system checks both the remote user's certificate signature and also the CRL to make sure that the remote user's certificate serial number is not on the CRL.

The file is assumed to be in `/config/auth` unless an absolute path is specified.

Use the **set** form of this command to specify the location of the CRL file.

Use the **delete** form of this command to remove the location of the CRL file.

Use the **show** form of this command to display CRL file configuration.

security vpn l2tp remote-access ipsec-settings authentication x509 server-cert-file <file-name>

Specifies the name of VPN server's certificate file for IPsec authentication on L2TP VPN remote access connections.

Syntax

set security vpn l2tp remote-access ipsec-settings authentication x509 server-cert-file *file-name*

delete security vpn l2tp remote-access ipsec-settings authentication x509 server-cert-file

show security vpn l2tp remote-access ipsec-settings authentication x509 server-cert-file

Parameters

file-name

The name of the VPN server's certificate file. This parameter is mandatory if **authentication mode** is **x509**.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        ipsec-settings {
          authentication {
            x509 {
              server-cert-file file-name
            }
          }
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the name of the VPN server's certificate file.

VPN server's certificate certifies the identity of the VPN server.

The file is assumed to be in `/config/auth` unless an absolute path is specified.

Use the **set** form of this command to specify the name of the VPN server's certificate file.

Use the **delete** form of this command to remove the name of the VPN server's certificate file.

Use the **show** form of this command to display VPN server certificate file configuration.

security vpn l2tp remote-access ipsec-settings authentication x509 server-key-file <file-name>

Specifies the name of VPN server's private key file for IPsec authentication on L2TP VPN remote access connections.

Syntax

set security vpn l2tp remote-access ipsec-settings authentication x509 server-key-file *file-name*

delete security vpn l2tp remote-access ipsec-settings authentication x509 server-key-file

show security vpn l2tp remote-access ipsec-settings authentication x509 server-key-file

Parameters

file-name

The name of the VPN server's private key file. This parameter is mandatory if **authentication mode** is **x509**.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        ipsec-settings {
          authentication {
            x509 {
              server-key-file file-name
            }
          }
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the name of the VPN server's private key file.

VPN server's private key certifies the identity of the VPN server.

The file is assumed to be in `/config/auth` unless an absolute path is specified.

Use the **set** form of this command to specify the name of the VPN server's private key file.

Use the **delete** form of this command to remove the name of the VPN server's private key file.

Use the **show** form of this command to display VPN server private key file configuration.

security vpn l2tp remote-access ipsec-settings authentication x509 server-key-password <password>

Specifies the password that protects the L2TP VPN server's private key.

Syntax

set security vpn l2tp remote-access ipsec-settings authentication x509 server-key-password *password*

delete security vpn l2tp remote-access ipsec-settings authentication x509 server-key-password

show security vpn l2tp remote-access ipsec-settings authentication x509 server-key-password

Parameters

password

The password protecting the VPN server's private key file.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        ipsec-settings {
          authentication {
            x509 {
              server-key-password password
            }
          }
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify a password that protects the VPN server's private key.

Use the **set** form of this command to specify the password for the VPN server's private key.

Use the **delete** form of this command to remove the password for the VPN server's private key.

Use the **show** form of this command to display VPN servers private key password configuration.

security vpn l2tp remote-access ipsec-settings ike-lifetime <lifetime>

Specifies the IKE lifetime of an L2TP connection.

Syntax

```
set security vpn l2tp remote-access ipsec-settings ike-lifetime lifetime
delete security vpn l2tp remote-access ipsec-settings ike-lifetime
show security vpn l2tp remote-access ipsec-settings ike-lifetime
```

Command Default

The IKE lifetime is 3600 seconds (1 hour).

Parameters

lifetime

The length of time (in seconds) the IKE connection will remain active after the last traffic from the remote end is received. The range is 30 to 86400 (that is, 24 hours). The default is 3600 (1 hour).

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        ipsec-settings {
          ike-lifetime lifetime
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the IKE lifetime of an L2TP connection. The IKE lifetime is used to terminate a connection when the remote end has not been heard from for a period of time.

Use the **set** form of this command to specify the IKE lifetime of an L2TP connection.

Use the **delete** form of this command to return the IKE lifetime to its default.

Use the **show** form of this command to display IKE lifetime configuration.

security vpn l2tp remote-access mtu <mtu>

Specifies the MTU for an L2TP connection.

Syntax

set security vpn l2tp remote-access mtu *mtu*

delete security vpn l2tp remote-access mtu

show security vpn l2tp remote-access mtu

Command Default

If this value is not set, fragmentation is never performed.

Parameters

mtu

Sets the MTU, in octets, for the interface as a whole, including any logical interfaces configured for it. The range is 128 to 16384.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        mtu mtu
      }
    }
  }
}
```

Usage Guidelines

Use this command to set the maximum transmission unit (MTU) for an L2TP connection.

When forwarding, IPv4 packets larger than the MTU will be fragmented unless the DF bit is set. In that case, the packets will be dropped and an ICMP "Packet too big" message is returned to the sender.

Use the **set** form of this command to specify the MTU.

Use the **delete** form of this command to remove MTU value and disable fragmentation.

Use the **show** form of this command to view MTU configuration.

security vpn l2tp remote-access outside-address <ipv4>

Sets the IP address to be bound to the L2TP server.

Syntax

```
set security vpn l2tp remote-access outside-address ipv4
delete security vpn l2tp remote-access
show security vpn l2tp remote-access
```

Parameters

ipv4

The IPv4 address to which the L2TP server should bind.

Modes

Configuration mode

Configuration Statement

```
security {
    vpn {
        l2tp {
            remote-access {
                outside-address ipv4
            }
        }
    }
}
```

Usage Guidelines

Use this command to set the outside address for a remote access L2TP VPN connection.

The outside address is the address of the interface facing the external network. This is the address to which the L2TP server binds, and only remote connections coming into this address will be accepted.

NOTE

This command cannot be used if the **security vpn l2tp remote-access dhcp-interface** *interface* command is also set.

Use the **set** form of this command to set the L2TP VPN outside address.

Use the **delete** form of this command to remove the L2TP VPN outside address.

Use the **show** form of this command to display L2TP VPN outside address configuration.

security vpn l2tp remote-access outside-nexthop <ipv4>

Sets the IP address of the next hop on the external network.

Syntax

```
set security vpn l2tp remote-access outside-nexthop ipv4
delete security vpn l2tp remote-access outside-nexthop ipv4
show security vpn l2tp remote-access outside-nexthop
```

Parameters

ipv4

The IPv4 address of the next hop on the outside network.

Modes

Configuration mode

Configuration Statement

```
security {
    vpn {
        l2tp {
            remote-access {
                outside-nexthop ipv4
            }
        }
    }
}
```

Usage Guidelines

Use this command to set the next hop on the external network for a remote access L2TP VPN connection.

Use the **set** form of this command to set the L2TP VPN outside next hop.

Use the **delete** form of this command to remove the L2TP VPN outside next hop.

Use the **show** form of this command to display L2TP VPN outside next-hop configuration.

security vpn l2tp remote-access server-ip-pool start <ipv4>

Specifies the beginning address of a pool of IP addresses for an L2TP server.

Syntax

set security vpn l2tp remote-access server-ip-pool start *ipv4*

delete security vpn l2tp remote-access server-ip-pool start

show security vpn l2tp remote-access server-ip-pool start

Command Default

The default beginning address is 10.255.0.0.

Parameters

ipv4

The IP address that designates the beginning of the address pool.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        server-ip-pool {
          start ipv4
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the beginning address of a pool of IP addresses for an L2TP server. Each L2TP VPN connection requires a client address and a server address. Both the beginning and ending addresses for the L2TP server must be specified. Use the **security vpn l2tp remote-access server-ip-pool stop** *ipv4* command to specify the ending address for the L2TP server.

For information on how to specify the range of addresses for L2TP VPN clients, refer to the **security vpn l2tp remote-access client-ip-pool start** *ipv4* and **security vpn l2tp remote-access client-ip-pool stop** *ipv4* commands.

NOTE

The number of addresses that are used in the range for the L2TP server must be equal to or greater than the number of addresses that are used in the range for the L2TP VPN clients. And the address range that is used for L2TP server must be unique within your router configuration.

NOTE

If you do not specify the beginning and ending addresses of a pool of IP addresses for an L2TP server, the Brocade vRouter uses a default address range from 10.255.0.0 through 10.255.255.255. If you use the default range, ensure that this range is unique within your router configuration.

Use the **set** form of this command to specify the beginning address.

Use the **delete** form of this command to delete the beginning address.

Use the **show** form of this command to display the beginning address.

security vpn l2tp remote-access server-ip-pool stop <ipv4>

Specifies the ending address of a pool of IP addresses for an L2TP server.

Syntax

set security vpn l2tp remote-access server-ip-pool stop *ipv4*

delete security vpn l2tp remote-access server-ip-pool stop

show security vpn l2tp remote-access server-ip-pool stop

Command Default

The default ending address is 10.255.255.255.

Parameters

ipv4

The IP address that designates the end of the address pool.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        server-ip-pool {
          stop ipv4
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify the ending address of a pool of IP addresses for an L2TP server. Each L2TP VPN connection requires a client address and a server address. Both the beginning and ending addresses for the L2TP server must be specified. Use the **security vpn l2tp remote-access server-ip-pool start *ipv4*** command to specify the beginning address for the L2TP server.

For information on how to specify the range of addresses for L2TP VPN clients, refer to the **security vpn l2tp remote-access client-ip-pool start *ipv4*** and **security vpn l2tp remote-access client-ip-pool stop *ipv4*** commands.

NOTE

The number of addresses that are used in the range for the L2TP server must be equal to or greater than the number of addresses that are used in the range for the L2TP VPN clients. And the address range that is used for L2TP server must be unique within your router configuration.

NOTE

If you do not specify the beginning and ending addresses of a pool of IP addresses for an L2TP server, the Brocade vRouter uses a default address range from 10.255.0.0 through 10.255.255.255. If you use the default range, ensure that this range is unique within your router configuration.

Use the **set** form of this command to specify the ending address.

Use the **delete** form of this command to delete the ending address.

Use the **show** form of this command to display the ending address.

security vpn l2tp remote-access wins-servers server-1 <ipv4>

Specifies the IP address for the primary WINS server for L2TP VPN remote clients.

Syntax

```
set security vpn l2tp remote-access wins-servers server-1 ipv4
delete security vpn l2tp remote-access wins-servers server-1
show security vpn l2tp remote-access wins-servers server-1
```

Parameters

ipv4

The IP address of the primary WINS server for remote clients.

Modes

Configuration mode

Configuration Statement

```
security {
  vpn {
    l2tp {
      remote-access {
        wins-servers {
          server-1 ipv4
        }
      }
    }
  }
}
```

Usage Guidelines

Use this command to specify a primary WINS server to be associated with remote L2TP VPN clients.

The Windows Internet Net Service (WINS) is used to support environments in which users access resources that have NetBIOS names.

Use the **set** form of this command to specify the primary WINS server IP address.

Use the **delete** form of this command to remove the primary WINS server IP address.

Use the **show** form of this command to display the primary WINS server IP address.

security vpn l2tp remote-access wins-servers server-2 <ipv4>

Specifies the IP address for the secondary WINS server for L2TP VPN remote clients.

Syntax

set security vpn l2tp remote-access wins-servers server-2 *ipv4*

delete security vpn l2tp remote-access wins-servers server-2

show security vpn l2tp remote-access wins-servers server-2

Parameters

ipv4

The IP address of the secondary WINS server for remote clients.

Modes

Configuration mode

Configuration Statement

```
security {
    vpn {
        l2tp {
            remote-access {
                wins-servers {
                    server-2 ipv4
                }
            }
        }
    }
}
```

Usage Guidelines

Use this command to specify the secondary WINS server to be associated with remote L2TP VPN clients.

The Windows Internet Net Service (WINS) is used to support environments in which users access resources that have NetBIOS names.

Use the **set** form of this command to specify the secondary WINS server IP address.

Use the **delete** form of this command to remove the secondary WINS server IP address.

Use the **show** form of this command to display the secondary WINS server IP address.

show vpn remote-access

Shows information about currently active remote access VPN sessions.

Syntax

```
show vpn remote-access
```

Modes

Operational mode

Usage Guidelines

Use this command to see information about the currently active remote access VPN sessions.

Examples

The following example shows the output of the **show vpn remote-access** command.

```
vyatta@vyatta# show vpn remote-access
Active remote access VPN sessions:
User          Proto Iface  Tunnel IP      TX byte  RX byte  Time
-----
bill          L2TP  ppp1    192.168.101.2  58       3.8K    00h02m09s
dave          L2TP  ppp0    192.168.101.1  58       3.8K    00h02m32s
vyatta@vyatta#
```


List of Acronyms

Acronym	Description
ACL	access control list
ADSL	Asymmetric Digital Subscriber Line
AH	Authentication Header
AMI	Amazon Machine Image
API	Application Programming Interface
AS	autonomous system
ARP	Address Resolution Protocol
AWS	Amazon Web Services
BGP	Border Gateway Protocol
BIOS	Basic Input Output System
BPDU	Bridge Protocol Data Unit
CA	certificate authority
CCMP	AES in counter mode with CBC-MAC
CHAP	Challenge Handshake Authentication Protocol
CLI	command-line interface
DDNS	dynamic DNS
DHCP	Dynamic Host Configuration Protocol
DHCPv6	Dynamic Host Configuration Protocol version 6
DLCI	data-link connection identifier
DMI	desktop management interface
DMVPN	dynamic multipoint VPN
DMZ	demilitarized zone
DN	distinguished name
DNS	Domain Name System
DSCP	Differentiated Services Code Point
DSL	Digital Subscriber Line
eBGP	external BGP
EBS	Amazon Elastic Block Storage
EC2	Amazon Elastic Compute Cloud
EGP	Exterior Gateway Protocol
ECMP	equal-cost multipath
ESP	Encapsulating Security Payload
FIB	Forwarding Information Base
FTP	File Transfer Protocol
GRE	Generic Routing Encapsulation
HDLC	High-Level Data Link Control
I/O	Input/Output
ICMP	Internet Control Message Protocol

Acronym	Description
IDS	Intrusion Detection System
IEEE	Institute of Electrical and Electronics Engineers
IGMP	Internet Group Management Protocol
IGP	Interior Gateway Protocol
IPS	Intrusion Protection System
IKE	Internet Key Exchange
IP	Internet Protocol
IPOA	IP over ATM
IPsec	IP Security
IPv4	IP Version 4
IPv6	IP Version 6
ISAKMP	Internet Security Association and Key Management Protocol
ISM	Internet Standard Multicast
ISP	Internet Service Provider
KVM	Kernel-Based Virtual Machine
L2TP	Layer 2 Tunneling Protocol
LACP	Link Aggregation Control Protocol
LAN	local area network
LDAP	Lightweight Directory Access Protocol
LLDP	Link Layer Discovery Protocol
MAC	medium access control
mGRE	multipoint GRE
MIB	Management Information Base
MLD	Multicast Listener Discovery
MLPPP	multilink PPP
MRRU	maximum received reconstructed unit
MTU	maximum transmission unit
NAT	Network Address Translation
NBMA	Non-Broadcast Multi-Access
ND	Neighbor Discovery
NHRP	Next Hop Resolution Protocol
NIC	network interface card
NTP	Network Time Protocol
OSPF	Open Shortest Path First
OSPFv2	OSPF Version 2
OSPFv3	OSPF Version 3
PAM	Pluggable Authentication Module
PAP	Password Authentication Protocol
PAT	Port Address Translation
PCI	peripheral component interconnect
PIM	Protocol Independent Multicast
PIM-DM	PIM Dense Mode

Acronym	Description
PIM-SM	PIM Sparse Mode
PKI	Public Key Infrastructure
PPP	Point-to-Point Protocol
PPPoA	PPP over ATM
PPPoE	PPP over Ethernet
PPTP	Point-to-Point Tunneling Protocol
PTMU	Path Maximum Transfer Unit
PVC	permanent virtual circuit
QoS	quality of service
RADIUS	Remote Authentication Dial-In User Service
RHEL	Red Hat Enterprise Linux
RIB	Routing Information Base
RIP	Routing Information Protocol
RIPng	RIP next generation
RP	Rendezvous Point
RPF	Reverse Path Forwarding
RSA	Rivest, Shamir, and Adleman
Rx	receive
S3	Amazon Simple Storage Service
SLAAC	Stateless Address Auto-Configuration
SNMP	Simple Network Management Protocol
SMTP	Simple Mail Transfer Protocol
SONET	Synchronous Optical Network
SPT	Shortest Path Tree
SSH	Secure Shell
SSID	Service Set Identifier
SSM	Source-Specific Multicast
STP	Spanning Tree Protocol
TACACS+	Terminal Access Controller Access Control System Plus
TBF	Token Bucket Filter
TCP	Transmission Control Protocol
TKIP	Temporal Key Integrity Protocol
ToS	Type of Service
TSS	TCP Maximum Segment Size
Tx	transmit
UDP	User Datagram Protocol
VHD	virtual hard disk
vif	virtual interface
VLAN	virtual LAN
VPC	Amazon virtual private cloud
VPN	virtual private network
VRRP	Virtual Router Redundancy Protocol

Acronym	Description
WAN	wide area network
WAP	wireless access point
WPA	Wired Protected Access